


DIR-816

Internet Configuration


Login to the router by IP address 192.168.0.1

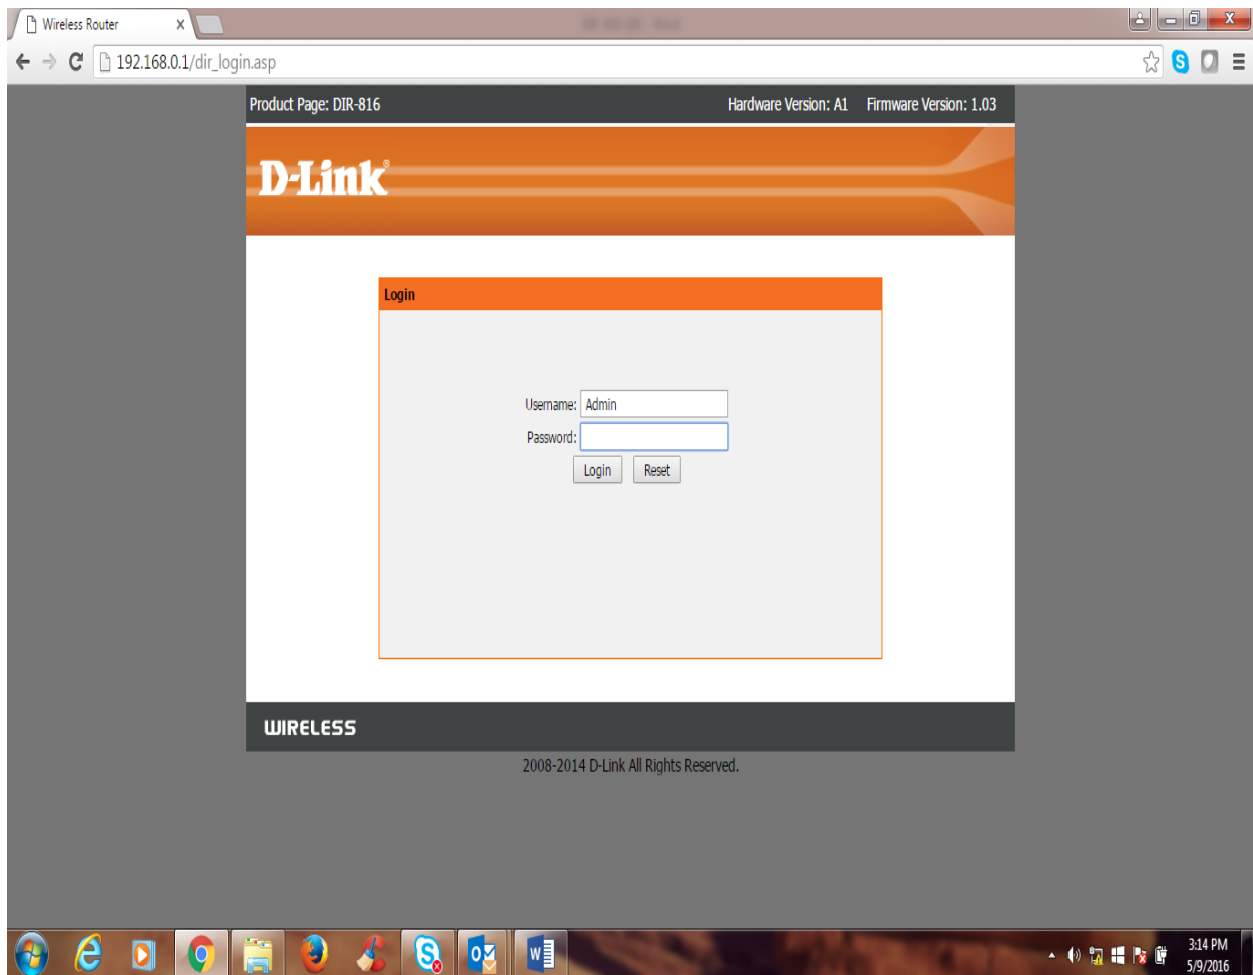


Username(default) : admin

Password (default) : (Blank: no password)

Proceed with the Manual Setup.

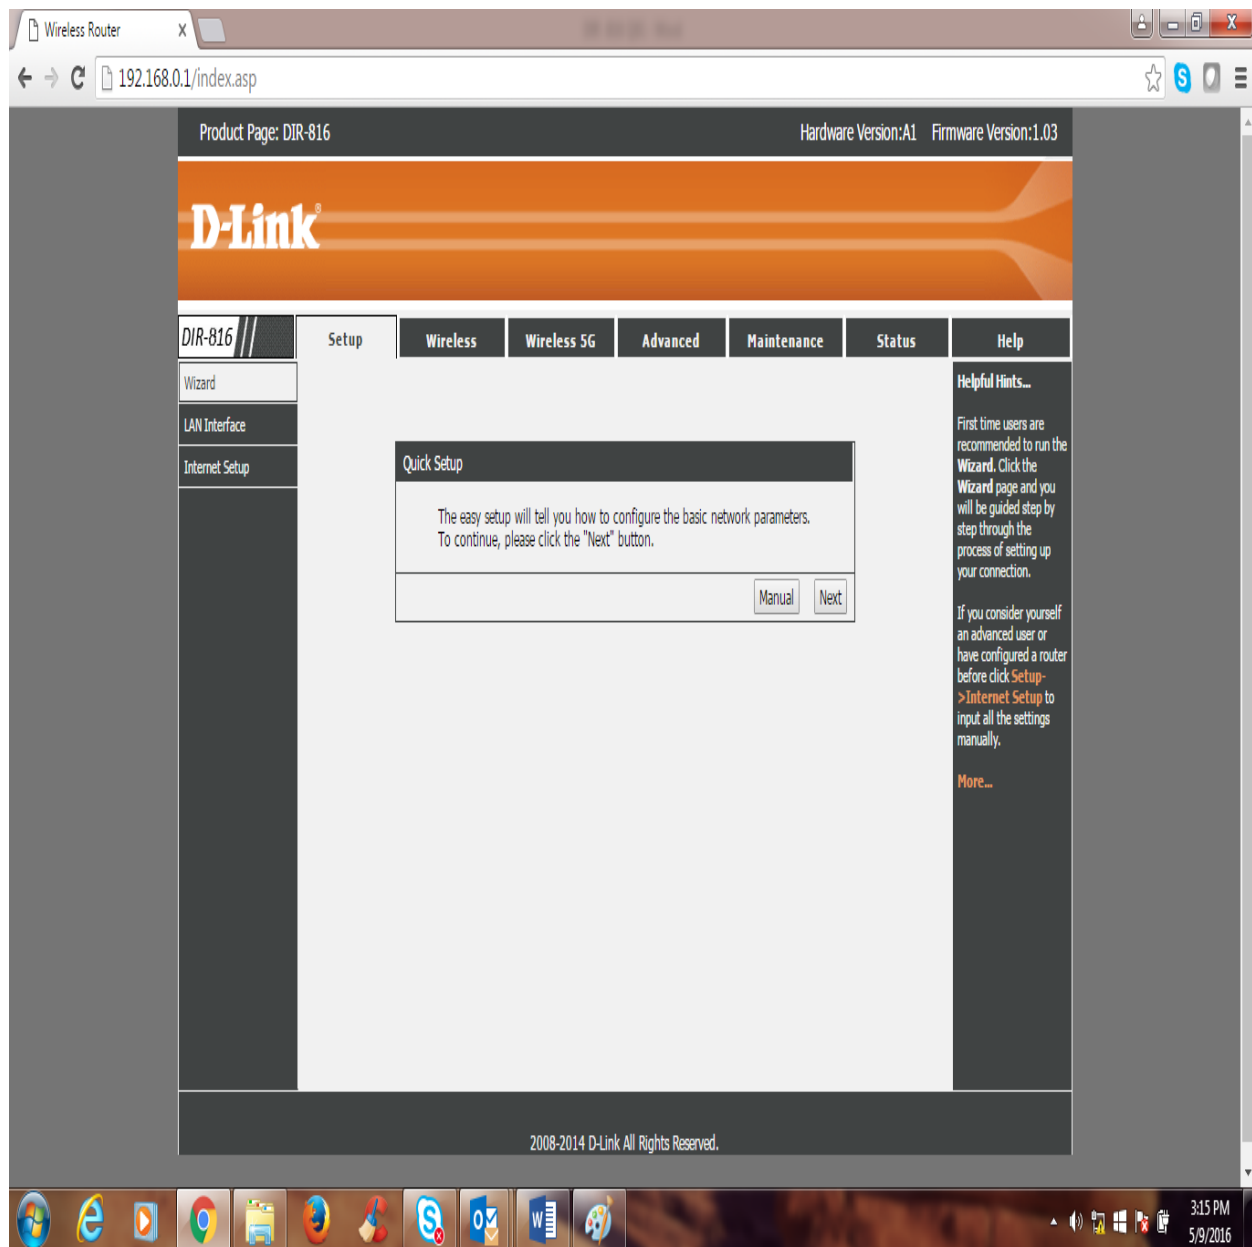

Select your WAN Access Type and Apply.

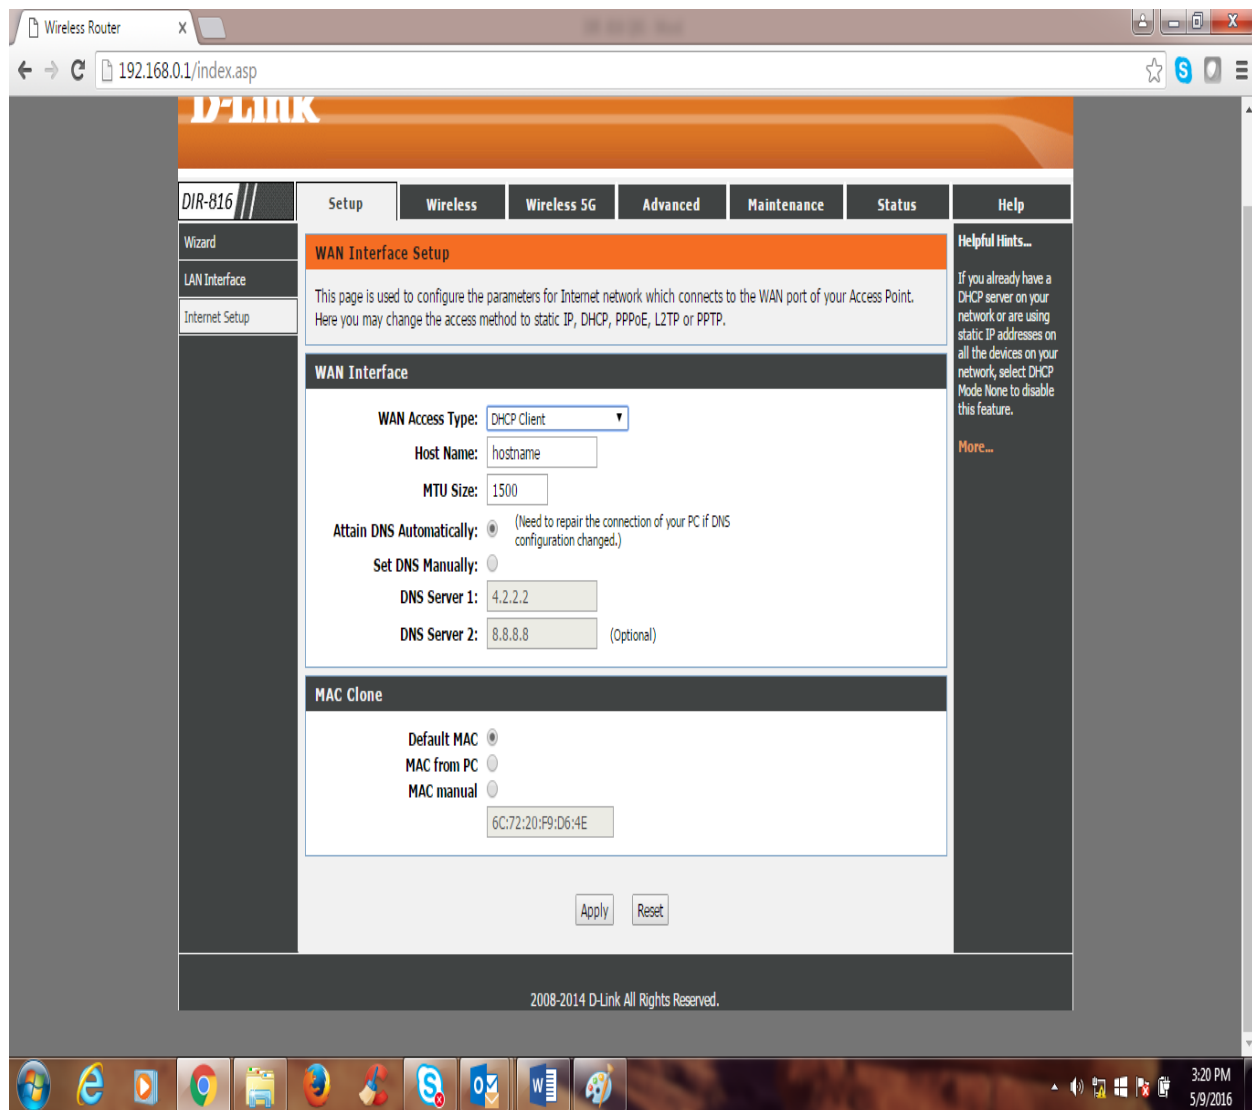

Click on 'Status' to check the Internet Status.

Device Info

Client Table

Statistics

Wireless Router Status

This page shows the current status and some basic settings of the device.

System

Product NameDIR-816

Uptime0 Days, 0:12:20

Date/Time2012 - 12 - 31 16 : 12 : 17 , Monday

LAN Configuration

IP Address192.168.0.1

Subnet Mask255.255.255.0

DHCP ServerEnable

MAC Address6C:72:20:F9:D6:4B

WLAN Configuration

2.4GEnable

Mode802.11 b/g/n

SSIDDIR-816

EncryptionNONE

Channel13

Broadcast SSIDEnable

WPSDisable

Repeater StatusDisconnect

5G WLAN Configuration

5GEnable

Mode802.11 a/n/ac

SSIDD-Link_DIR-816_5G

EncryptionNONE

Channel44

Broadcast SSIDEnable

WPSEnable

Repeater StatusDisconnect

WAN Configuration

InterfaceProtocolIP AddressMAC AddressGatewayDNSStatus

WANDHCP Client172.27.49.1676C:72:20:F9:D6:4E172.27.49.254172.27.49.223Connect(DHCP Client)


Helpful Hints...

This page displays a summary overview of your router status including device firmware version summary of your Internet configuration including ethernet status.

More...

Wireless Setting

Click on 'Wireless'

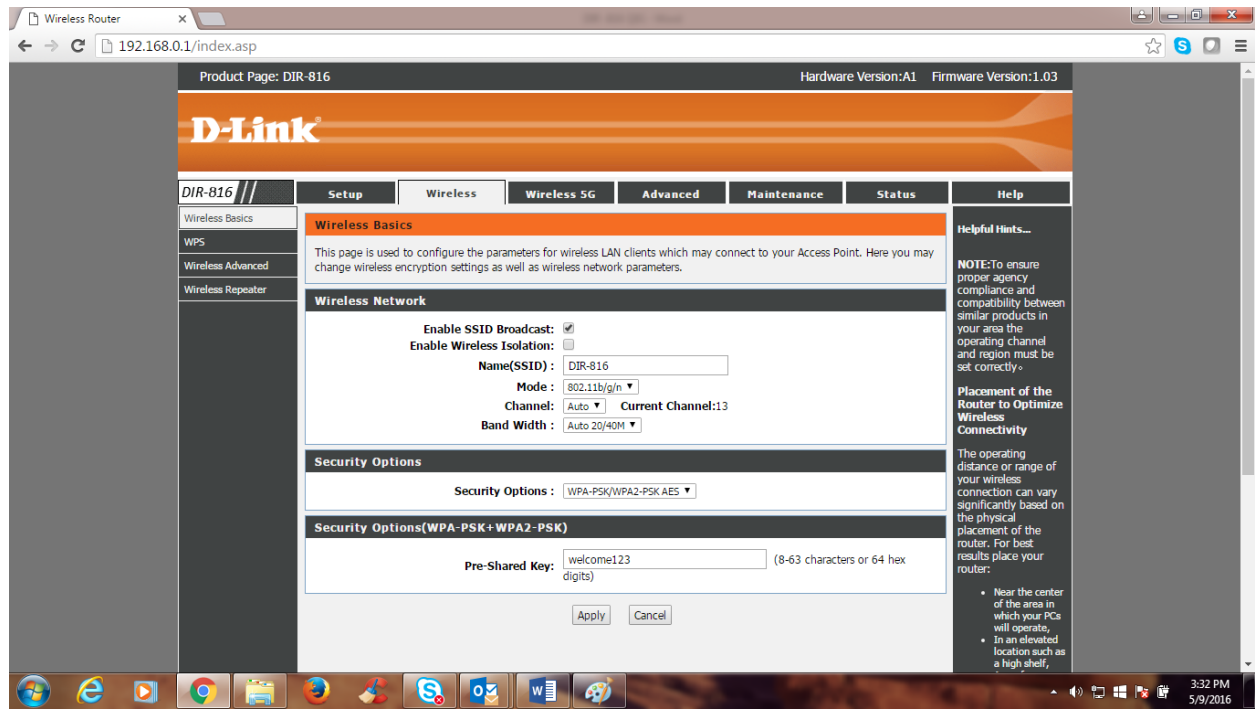

Give the Wireless name (SSID), select the 'Security Option' to " WPA-PSK/WPA2-PSK AES" and give a pre-shared key (Wi-Fi Password) as per what you want and click on apply.