


# TROUBLESHOOTING GUIDE

How do I use the Rugged Messenger stand?

1. To use the magnetic, built-in kickstand, lift the cover off the keyboard and lay it flat.

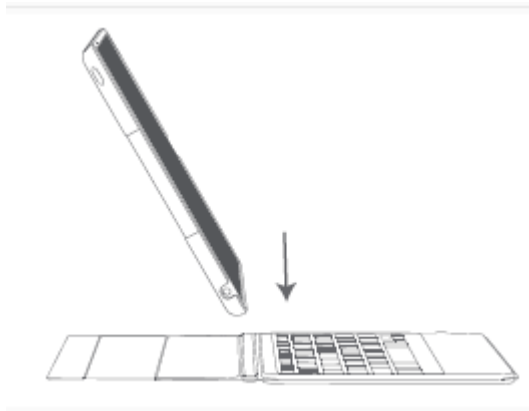

2. Place your device in the magnetic recessed groove located in the middle of your Rugged Messenger where you will feel it connect with the magnets.
3. While holding your device in place, fold the cover toward your device. Let the cover fold in along the groove to create the built-in stand.
4. Place the end of the cover close to the top of your device and you will feel the magnets connect, securing the stand in place. You can now rest your device against the stand for a convenient viewing angle.




## ADJUSTING THE VIEWING ANGLE

Your Rugged Messenger case features built-in magnets that work together with the built-in stand to create multiple viewing angles. To adjust the viewing angle on your Rugged Messenger, simply slide the built-in stand up or down along your Rugged Messenger case until you feel the magnets connect.

Caution: sliding the stand to the very top of the device may result in an unstable position.

How do I charge my Rugged Messenger?

Your Rugged Messenger features a powerful lithium polymer battery that lasts for up to two years of normal use between charges\*. It comes with a charging cable you can use to charge your keyboard quickly and conveniently. To charge your Rugged Book Pro, follow these steps:

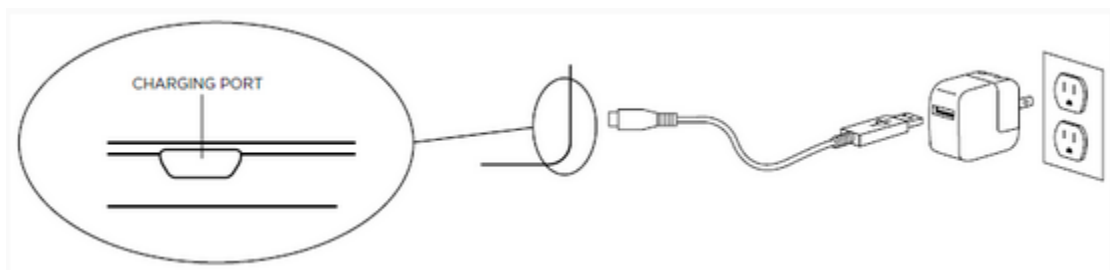

Plug the micro USB connector into the charging port.

Plug the regular USB connector into any 5V USB outlet. The Caps Lock LED on your Rugged Messenger will light to indicate your keyboard is charging. This LED will turn off when your keyboard is fully charged.

Remove the micro USB connector and enjoy your Rugged Messenger for up to two years before you need to charge it again.

\* Normal use is approximately one hour of use per day without the backlit feature. Using the backlit feature will impact battery life and require more frequent charging.