

The iFox Creations Bluetooth Speaker User Manual – IFSS309

Introduction

Thanks for choosing this iFox Creations Bluetooth speaker. Please read this user manual carefully before operation.

Key Feature:

- Bluetooth wireless
- Hands free speakerphone
- Redial the last phone number
- Aux line in function
- FM radio function
- TF card Function
- USB Function
- NFC compatible

Product Description

- Bluetooth 3.0 wireless
- Bluetooth protocol: Support A2DP and AVRCP profile
- Frequency Range: 100Hz-20KHz
- Distortion: $\leq 0.5\%$
- SNR: $\geq 5\text{dB}$
- Operating Voltage: 3.7V
- Charging Voltage: DC 5V
- Charge Time: approx. 3 hours
- Playing Time: approx. 6 hours
- Operating Distance: 10 Meters
- Compatible: for tablet pc/laptop/computer/smartphone and other Bluetooth devices

Bluetooth Pairing

Please make sure your cell phone (or media playing device) is Bluetooth-enabled. Specific pairing steps may vary with different devices. Please refer to the user manual of your device for further information.

1. To pair, firstly, turn on the speaker in Bluetooth mode.
2. Activate the Bluetooth function in your media playing device such as smartphone, tablet or other Bluetooth device.
3. Choose the speaker 'My speaker S309' from the list of Bluetooth devices discovered and pair with the speaker.

Operation instruction

1. **Switch:** Turn on/off


2. **Micro USB:** Charging Port
3. **TF Card Slot:** Play music via TF card. When in TF card mode use the + and – buttons to switch songs
4. **(M)Mode:** Press this button to switch between Bluetooth mode - TF Card mode - FM Radio mode – Aux line in mode. Press and hold to lock and unlock the buttons
5. **USB:** Playing music with USB stick.
6. **+ and - buttons:** Press once to play next/previous song. Press and hold to increase/decrease volume.
7. **Phone button:** Press once to play or pause music. Press to answer and hang up a phone call. Press and hold to reject a phone call when a call is coming in. Double click to redial the last phone number. Press and hold down to cut off the Bluetooth connection with a device or also if you wish to pair the speaker with a different device.
8. The built in microphone supports wireless hands free calling. Press the phone button to receive and hang up calls
9. When in Micro SD card mode use the + and - button to switch songs.
10. FM Radio configuration:
 - Press M button to switch to FM Radio mode
 - Press and hold for about 2 seconds the Phone button and the speaker will automatically search for FM radio channels. The speaker saves these channels.
 - Once searched you can then press the + or - button to change the channels
 - If the reception is poor please put the USB charging cable into the speaker and search again for the FM stations. The USB cable acts as an antenna booster.
11. Line in: Playing music via audio cable
 - Connect one 3.5mm end of the cable to the speaker;
 - Connect another 3.5 mm end to a mobile/laptop etc. audio device
 - Play the music on your mobile//laptop etc. audio device

Charging the Speaker

1. Connect the plug to the micro USB charging port of the speaker.
2. Connect the standard USB plug end of the cable to a power USB port on a computer or other USB charging device. For first time use, a full charge is recommended.

Troubleshooting

Symptoms	Speaker can't be powered on	Not able to pair w/ the speaker	Volume too low
Causes	Low battery level	Speaker already on or not in pairing mode	Battery is not charged up or Volume is not set to the maximum on the Speaker &/or your media player

Solutions	Recharge the battery 	Refer to "Bluetooth Pairing" section	Increase the volume on Speaker. Increase the volume on your media player
------------------	---	---	---

Safety Instructions

- Do not use this device near any heat sources such as radiators, heaters, stoves, or other heat-producing machinery.
- Do not leave it in direct sunlight.
- Keep the speaker out of children’s reach to avoid a choking hazard.
- Clean with soft cloth. Do not use harsh chemicals to clean.
- Do not clean this device when it is charging. Always unplug from the power source before cleaning the device.
- Do not insert any metal object into the device. Risk of short circuit.
- Do not try to repair or open this device yourself.

Thank you for buying from iFox Creations. We very much appreciate your custom. If you have any problems or questions at any time please contact us by replying to the emails we sent you, through the ‘contact seller’ button in Amazon or through our own ifoxcreations website. Our support team will assist you immediately.