

## **TROUBLESHOOTING STEPS**

Read all instructions before operating product. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

- 

### **AVOID DANGEROUS ENVIRONMENTS.**

Don't use appliances in damp or wet locations. Don't use appliances in the rain.

- INTENDED FOR INDOOR AND HOUSEHOLD USE UNDER DRY CONDITION.

- 

### **KEEP CHILDREN AWAY.**

All visitors should be kept at a distance from work area.

- 

### **STORE IDLE APPLIANCES INDOORS.**

When not in use, appliances should be stored indoors in dry, and high or locked-up place – out of reach of children.

- 

### **DON'T FORCE APPLIANCE.**

It will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.

- 

### **USE RIGHT APPLIANCE.**

Do not use the appliance for any job except that for which it is intended.

- 

### **DRESS PROPERLY.**

Do not wear loose clothing or jewelry. They can be caught in moving parts. Rubber gloves and

substantial, non-skid footwear are recommended when working outdoors. Wear protective hair covering to contain long hair.

- 

### **USE SAFETY GLASSES AND OTHER SAFETY EQUIPMENT.**

Use safety goggles or safety glasses with side shields, complying with applicable safety standards and, when needed, a face shield. Also use face or dust mask if operation is dusty. This applies to all persons in the work area. Also use a hard hat, hearing protection, gloves, safety shoes and

dust collection systems when specified or required. Safety glasses or the like are available at extra cost at your local dealer or Black & Decker Service Center.

- 

#### DON'T ABUSE CORD.

Never carry appliance by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.

- 

#### DON'T OVERREACH.

Keep proper footing and balance at all times.

- 

#### DISCONNECT APPLIANCES.

Disconnect the appliance from the power supply when not in use, before servicing, and when changing accessories.

- 

#### AVOID UNINTENTIONAL STARTING.

Don't carry plugged-in appliance with finger on switch.

- 

#### GROUND FAULT CIRCUIT INTERRUPTER (GFCI)

protection should be provided on the circuits or outlets to be used.

Receptacles are available having built in GFCI protection and may be used for this measure of safety.

- 

#### USE OF ACCESSORIES AND ATTACHMENTS.

The use of any accessory or attachment not recommended for use with this appliance could be hazardous. Note: Refer to the accessory section of this manual for further details.

- 

#### STAY ALERT.

Watch what you are doing. Use common sense. Do not operate tool when you are tired.

- 

#### CHECK DAMAGED PARTS.

Before further use of the tool, that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated else-

where in this instruction manual. Have defective switches replaced by authorized service center. Do not use tool if switch does not turn it on and off.

- 

#### DO NOT OPERATE

portable electric tools near flammable liquids or in gaseous or explosive atmospheres.

Motors in

these tools normally spark, and the sparks might ignite fumes.