

Compatible Cameras List for Zhiyun Crane 2

Brand	Camera Modes	Lens Model	Functions	Remarks
Canon	1DX II 5D Mark II 5D Mark III 5D Mark IV 5DS 5DSR 6D 60D 70D 80D 600D 650D 700D 7D2 5D4	EF 8-15mm f/4L USM EF 11-24mm f/4L USM (Need a Pod Backing Plate) EF 16-35mm f/2.8L III USM EF 16-35mm f/4L IS USM EF 17-40mm f/4L USM EF 24-70mm f/2.8L II USM EF 24-70mm f/4L IS USM EF 24-105mm f/4L IS II USM EF 24-105mm f/3.5-5.6 IS STM EF 35mm f/1.4L II USM EF 50mm f/1.2L USM EF 85mm f/1.2L II USM (Need a Pod Backing Plate) EF 85mm f/1.4L IS USM EF 85mm f/1.8 USM EF 135mm f/2L USM EF 70-200mm f/2.8L IS II USM (Need a Counterweight) Sigma 35mm f/1.4 DG HSM Art Sigma 50mm f/1.4 DG HSM Art Sigma 24-70mm f/2.8 DG HSM Art	Follow Focus Shoot Video Aperture Shutter ISO Exposure Compensation *Servo Follow Focus Controller	*Recommend: Use a Servo Follow Focus Controller, if your lens with a maximum aperture smaller than f/2.8
Nikon	D850	AF-S NIKKOR 14-24mm f/2.8G ED (Need a Pod Backing Plate) AF-S NIKKOR 16-35mm f/4G ED VR AF-S Zoom-NIKKOR 17-35mm f/2.8D IF-ED AF-S NIKKOR 18-35mm f/3.5-4.5G ED AF-S NIKKOR 24-70mm f/2.8E ED VR (Need a Counterweight) AF-S NIKKOR 24-70mm f/2.8G ED AF Zoom-NIKKOR 24-85mm f/2.8-4D IF AF-S NIKKOR 24-85mm f/3.5-4.5G ED VR AF-S NIKKOR 24-120mm f/4G ED VR AF-S NIKKOR 28-300mm f/3.5-5.6G ED VR AF NIKKOR 14mm f/2.8D ED AF-S NIKKOR 20mm f/1.8G ED AF-S NIKKOR 24mm f/1.4G ED AF-S NIKKOR 24mm f/1.8G ED AF-S NIKKOR 50mm f/1.4G AF-S NIKKOR 85mm f/1.4G AF-S NIKKOR 85mm f/1.8G Sigma 35mm f/1.4 DG HSM Art Sigma 50mm f/1.4 DG HSM Art Sigma 24-70mm f/2.8 DG HSM Art	Follow Focus Shoot Video Aperture Shutter ISO Exposure Compensation *Servo Follow Focus Controller	
Sony	A7 A7S A7R A7M2 A9 A7S2 A7R2 A7M3 A7R3 A6300 A6500	FE 24-105mm F4 G OSS (Need a Pod Backing Plate) FE 16-35mm F2.8 GM (Need a Pod Backing Plate) FE 12-24mm F4 G FE 100mm F2.8 STF GM OSS FE 85mm F1.8 (Need a Pod Backing Plate) Vario-Tessar T* FE 16-35mm F4 ZA OSS FE 24-70mm F2.8 GM (Need a Pod Backing Plate) Vario-Tessar T* FE 24-70mm F4 ZA OSS (Need a Pod Backing Plate) FE 28-70mm F3.5-5.6 OSS FE 28mm F2 Distagon T* FE 35mm F1.4 ZA (Need a Pod Backing Plate) Sonnar T* FE 35mm F2.8 ZA Planar T* FE 50mm F1.4 ZA (Need a Pod Backing Plate) FE 50mm F1.8 Sonnar® T* FE 55mm F1.8 ZA FE 85mm F1.4 GM (Need a Pod Backing Plate) FE 90mm F2.8 Macro G OSS E 18-135mm F3.5-5.6 OSS E 10-18mm F4 OSS Vario-Tessar T* E 16-70mm F4 ZA OSS E PZ 18-105mm F4 G OSS E 18-200mm F3.5-6.3 OSS LE Sonnar® T* E 24mm F1.8 ZA	Shoot Video Zoom Charged for those cameras (turned off) (limited to A7、A7S2、A7R、A7M2) Charged for the cameras even working (Limited to A9、A7S2、A7R2、A7M3、A7R3、A6300、A6500) *Servo Follow Focus Controller	*Optical zoom requires motorized zoom lens. *Using non-power zoom lens should turn on digital zoom in the camera at first.

	RX100M4 RX100M5 RX100M6	Need a Counterweight	Shoot Video Zoom Charged for the camera even working	Must add a Counterweight
Panasonic	GH4 GH5 GH5S	LEICA DG Vario-Elmarit 8-18mm f/2.8-4.0 ASPH (H-E08018GK) LUMIX G X VARIO 35-100mm f/2.8 II Power OIS (H-HSA35100GK) Lumix G X Vario 12-35mm f/2.8 II ASPH POWER OIS (H-HSA12035GK) LUMIX G VARIO 45-200mm f/4.0-5.6 II POWER OIS (FSA45200GK) LEICA DG Vario-Elmarit 12-60mm f/2.8-4 Power OIS (H-ES12060GK) LEICA DG SUMMILUX 12mm f/1.4 ASPH (H-X012GK) Lumix G VARIO 12-60mm f/3.5-5.6 Power OIS (H-FS12060GK) Lumix G 25mm f/1.7 (H-H025GK) LEICA DG SUMMILUX 15mm f/1.7 ASPH (H-X015GK) LUMIX G MACRO 30mm f/2.8 ASPH MEGA OIS (H-HS030GK)	Shoot Video Shutter Half-Press to Focus *Servo Follow Focus Controller	

Remarks:

[1] It would be easier to scratch the release plate with a heavier len, so we recommend to add a Pod Backing Plate as possible as you could.

[2] Heavier lens should add a counterweighter to keep a balance, or your camera would be move behind unconsciously.