

## **Troubleshooting steps**

### **IMAGE IS BLURRED**

#### Possible Causes

The Projector is not in focus

The Projector is offset from plane / angle of operation

#### Solution

Adjust the focus with the focus adjustment dial until the image comes into focus

Move the projector so that it is both 180 degrees and on an even plane with the screen.

### **THE PROJECTOR DOES NOT TURN ON**

#### Possible Causes

There is no power

The power button was not held long enough

#### Solution

Check to ensure the power outlet source is good. Check the Power Adapter/ Micro USB Cable to ensure a proper connection with the wall outlet or computer as well as the projector. Confirm that the unit is charged and has enough power

To power on the projector, the power button needs to be depressed for a full 3 seconds. Try holding the power button until the optical engine turns on