

D-129N Electronic Safe Lock



Introduction:

1. Install 9V battery in plastic tray in keypad. (Not Included)
2. Plug wire in either connectors in back of lock and test the lock by entering the default management code 1-2-3-4-5-6. The swing-bolt will unlock for 4-5 seconds.

This lock consist of 1 manager code and 5 user codes.

Any of following factory setting codes will currently operate the lock.

Manager default code: 1-2-3-4-5-6
 User 1 default code: 1-1-1-1-1-1
 User 2 default code: 2-2-2-2-2-2
 User 3 default code: 3-3-3-3-3-3
 User 4 default code: 4-4-4-4-4-4
 User 5 default code: 5-5-5-5-5-5

BUYaSafe.com
 Chatsworth, CA 91311
 email: info@buyasafe.com
 phone: 818-885-6280

Resetting the time delay back to NO DELAY: (imagining our manager

code is 445598)

1. Enter 445598 and keep holding the 8 for 3 seconds until you heard two sets of 2 beeps.

Press 9 (time delay mode) followed by 00 (0 minutes). **DONE**

Wrong code penalty lockout:

1. If the wrong code is entered more than 4 consecutive times,

the lock will go into a **LOCKOUT** mode for 5 minutes.

During this period the lock will be non-operative and will

beep every 5 seconds until the 5 minute lockout mode is up.

2. After 5 minutes you can try again with the correct code to open

the safe..

Resetting the lock:

1. locate a pin-hole in back of lock body.

2. Remove battery from lock, and press few digits on the keypad

to drain all power from the lock.

3. Insert a paper clip or sharp needle into the hole and press down

4. while pressing down, insert the battery back to give power and

listen for a long wobbly beep sound.

Changing any or all of the user codes:

1. Enter the manager code (default 1-2-3-4-5-6), hold down the

last digit (6) and listen for 2 beeps, keep holding and listen for 2

more beeps. (approx. 3 seconds after)

Press 1 to change the first user code, enter a new six-digit code twice.

Press 2 to change the second user code, enter a new six-digit code twice.

Press 3 to change the third user code, enter a new six-digit code twice.

Press 4 to change the fourth user code, enter a new six-digit code twice.

Press 5 to change the fifth user code, enter a new six-digit code twice.

Changing the manager code:

1. Enter 0 six times, and then enter the **existing** code

(Initial factory code: 1-2-3-4-5-6)

Now enter your **new** 6-digit code **twice**.

YOUR NEW MANAGER CODE IS NOW SET.

This code can be used to change user codes, functions and

to open the safe.

Time Delay setting:

1. Enter the manager code (default 1-2-3-4-5-6), hold down the

last digit (6) and listen for 2 beeps, keep holding and listen for 2

more beeps. (approx. 3 seconds after)

Press 9 to for time delay change mode: Now enter 00-59 minute

opening delay.

If you pressed 02 for 2 minutes delay, it will take 2 minutes for

the lock to open after entering the correct code.

Keypad will sound a beep every few seconds to remind you that the

lock is in a countdown timer to open.

To take it back to no delay, repeat the same steps and enter 00

for zero minutes.

Example for 5 minute time delay setting: (imagining our manager

code is 445598)

1. Enter 445598 and keep holding the 8 for 3 seconds until you heard

two sets of 2 beeps.

Press 9 (time delay mode) followed by 05 (5 minutes). **DONE**