

DMX Operation

Channel		Value	Function
9CH	11CH		
CH1	CH1	000~255	Pan reverse
	CH2	000~255	Pan Fine
CH2	CH3	000~255	Tilt reverse
	CH4	000~255	Tilt reverse
CH3	CH5	000~127	Color to select
		128~189	Color Wheel run from fast to slow
		190~193	Color Wheel stop
		194~255	Color Wheel run from slow to fast
CH4	CH6	000~063	Gobo select
		064~127	Gobo sake select
		128~189	Gobo Wheel run from slow to fast
		190~193	Gobo stop
		194~255	Gobo Wheel run from slow to fast
CH5	CH7	000~007	Closed light
		008~015	Turn on the light
		016~131	Strobe speed from slow to fast
		132~139	Turn on the light
		140~181	The light turn off fast to turn on slow
		182~189	Turn on the light
		190~231	The light turn on fast to turn off slow
		232~239	Turn on the light
		240~247	Strobe
248~255	Turn on the light		
CH6	CH8	000~255	Dimmer:0~100%
CH7	CH9	000~255	Pan/Tilt speed control, the run speed from fast to slow
CH8	CH10	000~069	No Function
		070~079	When pan/Tilt running, the light turn off
		080~089	No Function
		090~099	When the color wheel of running, the light turn off
		100~109	No Function
		110~119	When the gobo wheel of running, the light turn off
		120~199	No Function
		200~209	Reset
		210~249	No Function
		250~255	Sound active mode
CH9	CH11	000~020	Standard Dimmer
		021~040	Stage Dimmer
		041~060	TV Dimmer
		061~080	Architectural Dimmer
		081~100	Theatrical Dimmer
		101~255	Tacitly approve Dimmer

Menu Function

MENU	Function
Addr	DMX Address: press “ENTER” in to and then press “UP” and “down” to choose and press “ENTER” to confirm it
Chnd	channel mode: the fixture have two channels,9CH and11CH, press “ENTER” in to and then press “UP” and “down” to choose and then press “ENTER” to confirm it.
Shnd	Show mode: press “ENTER” in it and then press “UP” and “down” to choose and press “ENTER” to confirm it
dind	Dim mode: press “ENTER” in it and then press “UP” and “down” to choose and then press “ENTER” to confirm it
SLnd	Slave mode: the fixture have two slave mode SL1 and SL2, press “UP” or “down” to choose and then press “ENTER” to confirm it
Soun	Sound mode: press “ENTER” in it and then press “UP” or “down” to choose “on” or “off” and then press “ENTER” to confirm it
SenS	Audio sensitivity select : you can press the “ENTER” in to the fixtures system and then press “UP” and “down” to choose 0~100 value, usually to choose 90, and then press “ENTER” to confirm it.
Pint	Pint reverse select: press “ENTER” in it and then press “UP” and “down” to choose “on” and then press “ENTER” to confirm it.
tint	Tilt reverse select: press “ENTER” in it and then press “UP” and “down” to choose “on” and then press “ENTER” to confirm it.
Led	LCD display take on or take off select: press “UP” or “down” to choose it in “on” or “off”.
disp	Display: please User no set it
test	Auto test: please User no set it
tenp	Temperature display: you can press “ENTER” in to the fixture system and see it this time temperature.
rSet	Fixture Reset: You can press “ENTER” to Reset the fixture.

Notice:

When you no use the“MENU” function, about 30 minute times late, the fixture system will close the LCD display, in time you can press the “MENU” about 3~5 minute the fixture system will turn on the LCD display