



Burners

Countertop Double Burner

Limited One Year Product Warranty

Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been damaged in any manner. Call the nearest authorized Waring customer service center (see warranty) to return for examination, repair or adjustment.

CARE AND CLEANING

Reasonable care will ensure many years of service from your unit.

Avoid dropping items on the burner rings and solid burners.

1. Turn temperature control dial(s) to the Off position.
2. Always unplug unit from electrical outlet and allow to cool before cleaning.
3. Never immerse unit in water or other liquids.
4. For easy cleaning, the burners are sealed. Do not attempt to separate burners from the unit.
5. Use a damp, soft cloth or sponge to clean the surface of the solid burners, burner rings, nonskid feet and housing unit.
Never use harsh abrasive or steel wool pads on any part of the burner as they may scratch the surface or damage the unit.
6. Thoroughly dry burners and burner rings.
7. There are no user serviceable parts. Any servicing other than cleaning should be performed by an authorized service center.

IMPORTANT:

Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.

Manufacturers' warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions.