



Vacuum Sealers with Non-Removable Gaskets

*****USE A DAMP SPONGE  TO CLEAN*****

For maximum operational efficiency, the gaskets in your FoodSaver® vacuum sealer need to be cleaned on a regular basis. For vacuum sealers with non-removable gaskets simply use a damp sponge to clean.

3000 SERIES	4000 SERIES	5000 SERIES
		
V3425/FSFSSL3425	V4420/FSFSSL4420	V5200
V3440/T000-08011	V4435/FSFSSL4435	V5260
V3460/T000-08004	V4440/FSFSSL4440	V5300
V3461/FSFSSL3461	V4445/FSFSSL4445	V5330
V3820/FSFSSL3820	V4825/FSFSSL4825	V5380
V3835/T000-18005	V4850/FSFSSL4850	V5460
V3860/T000-18003	V4860/FSFSSL4860	V5480
V3880/FSFSSL3880	V4865/FSFSSL4865	
	V4880/FSFSSL4880	
	V4925/FSFSSL4925	
	V4980/FSFSSL4980	