

Soundance

 
Bluetooth Speaker User Manual

Thank you for purchasing Soundance bluetooth speaker. Please read this manual carefully and keep it for future reference.

Features of the speaker:

1. New Bluetooth Technology, support wireless control through Bluetooth device
2. LED display with Time and Alarm clock function (in 24 hour format only).
3. Built-in FM radio with automatic channel searching and fine tune function
4. Support plug and play for Micro SD card/TF card and USB
5. 3.5mm line-in jack for wired devices
6. Built-in rechargeable battery supports up to 8 hours playback (medium volume)
7. Two 40MM drivers deliver deep and rich sound
8. Built-in Microphone for phone Calls
9. Support MP3, WAV, WMA, APE, FLAC format of audio file Micro SD card/TF card, USB storage device

Button illustration:

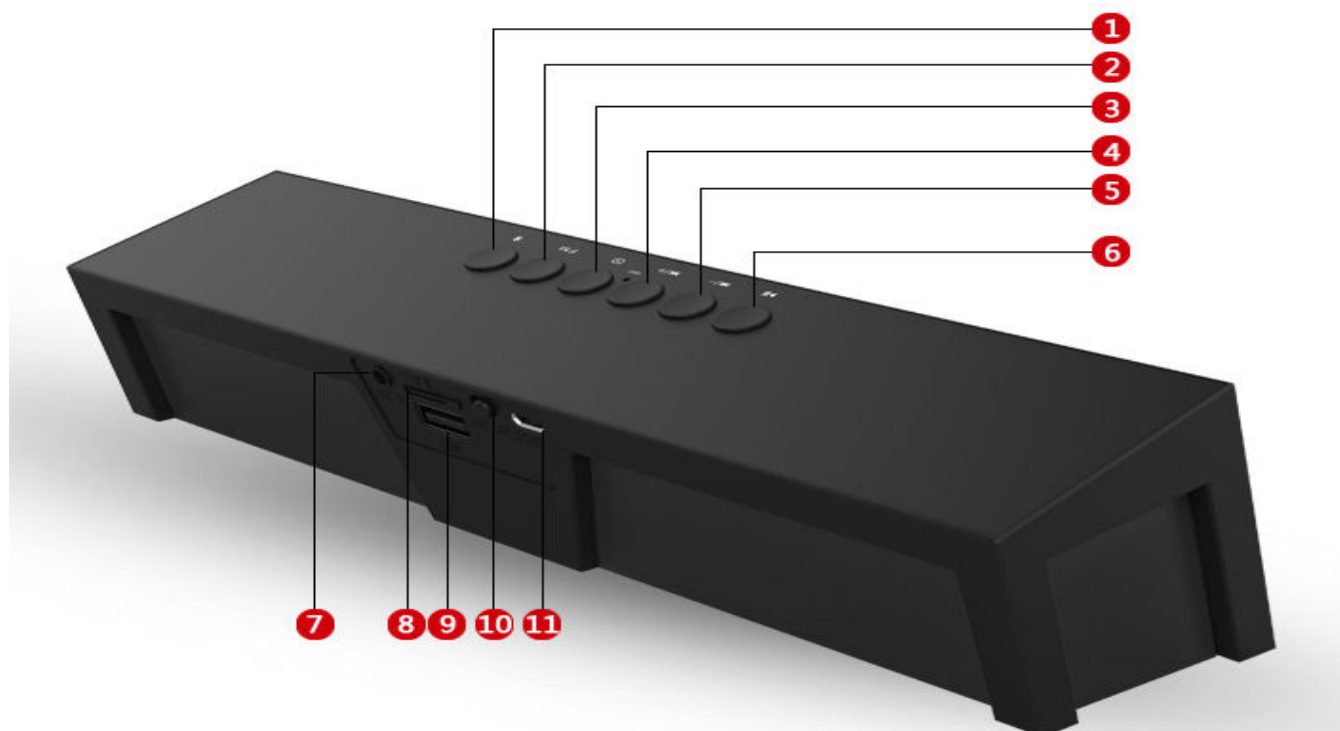

- 1. Bluetooth
- 2. FM
- 3. Alarm Clock
- 4. ▶▶ / +
- 5. ◀◀ / -
- 6. ▶
- 7. LINE IN
- 8. TF
- 9. USB
- 10. ON/OFF
- 11. DC 5V



Operating Instructions:

1. Charging

 
With the speaker turned off, connect the Micro-USB connector of the charging cable to the DC5V input socket at the rear side of the speaker, and plug the USB connector of the charging cable to an external USB power supply socket with a minimum supply current of 1A. The external USB power supply can be the USB socket in your computer/laptop, the USB adaptor of most cellphone USB chargers with DC5V output, or the 5V USB port of a power socket etc.




When charging, this will be indicated on the LCD screen.

2. On/Off



The On/Off slide button is at the rear side of the speaker. Slide to the on or off position to turn the speaker on or off.



3. Bluetooth

Pairing – 1. Press the “” button to enter Bluetooth mode. The LCD screen will display “bt” to show that the speaker is in Bluetooth mode. Turn on your Bluetooth device (such as a mobile phone, laptop, PDA etc) , search for bluetooth equipment “SDY-019”, and then pair up with the speaker. There will be a sound from the speaker when Bluetooth connection is established.

Bluetooth phone call - When paired to your phone, press the “” button to answer incoming calls, and press the “” button again to end the call. Press the “” button twice will call back to the last incoming call number.

Note: Microphone is on top of the speaker, please talk close to the microphone when making phone calls.

 
Volume adjustment – When playing music and when making a phone call under Bluetooth mode, the volume can be adjusted by keep pressing and holding the “ / ” button. The volume can also be controlled from your Bluetooth device (cellphone, laptop, PDA etc.)

Track selection – When playing music in Bluetooth mode, a short press of  / ” button will jump to the previous track or next track. Track selection can also be done from your Bluetooth device.

4. FM radio

Press the “FM” button to enter FM mode.

FM Channel Search – When in FM mode, press and hold the “FM” button to start automatic channel searching. The speaker will save the channels it finds and automatically assign them a channel number.


Channel Selection – After channels have been saved, press the  button to move to next channel.



 
Fine Tune - Under FM mode, press the “ /  ”button to fine tune the FM frequency.

5. USB / Micro SD Card

The speaker supports plug and play for USB/Micro SD card. Just plug in your USB Flash Drive or Micro SD Card into the speaker’s USB port or Card slot and the speaker will play the music files automatically. Refer to item 9 Technical data below for acceptable music formats.

6. Time setting

The speaker can only display the time in a 24 hour format. To set the time, first press and hold the  button until the digits on the LCD screen keep flashing.

Press the  button to switch between the hour and minute setting. Press the  /  button to adjust the time accordingly.





7. Alarm

1.) Under Alarm/Clock mode, press the alarm button to the alarm on or off.


When alarm is on, the bell shape indicator on the LCD screen will be on.

2.) To set the alarm time, first press and hold the alarm button. Press the alarm

button to switch between the hour and minute setting. Press  /  button to adjust the alarm time accordingly.



3) Setting alarm music: Insert an USB or TF card, when playing the music you want to set for the alarm, press the alarm button. The screen will display” **-AL-**”, then the alarm music is set. Please note that the music setting will be cleared when the USB or TF card is removed from the speaker. If no music is set as alarm music, the default alarm sound will be used.

8. Reset – If the speaker is not working normally, press and hold the  button for 5 seconds to reset the speaker.

9. Technical Data

Power	Built-in high capacity Li battery	
	External USB 5V supply	
	Power input: 500-1000mA	
Technical	Frequency	80HZ-20KHZ
	FM radio	87.5-108MHz
	SNR	≥90db (line out)
	Sensitivity Rate	80db
	THD	0.3% (line out)
Output power	5W*2	
Speaker	Φ45mm 3Ω 3w *2	
Music format	MP3、WMA、WAV、APE、FLAC	
Impedance	3 Ohm	
Speaker size	240 x55x 61.5mm	

Trouble shooting:

1. Can't turn the speaker on:

Check if the battery is in low. Recharge and then try to turn on again.

2. Can't charge the speaker:

Check the power supply is working and that the output of the power supply to the charge cable is 5V and > 1A.

Check that the charge cable and connectors of the cable are not damaged.

3. No sound:

Check the speaker is paired with the right Bluetooth device. If not, disconnect the Bluetooth connection and pair again to the right device.

Check the music format in the USB or TF/card.

4. No FM radio

Check if there is any electronic equipment interfering with the signal.

Adjust the direction or position of the speaker or move to an open area for a better signal reception.

Warning:

1. Do not use the product in high temperatures. Always keep the product away from fire. For your own safety, never throw the product into a fire which may cause an explosion and personal injury.
2. Do not use the product close to high-voltage wires or electronic equipment.
3. Keep the speaker away from water, and avoid using the speaker in high-humidity environments.
4. Keep the speaker away from any strong magnetic fields.

Support:

If you have any questions or problems in using the speaker, please feel free to write to: Victormobile@126.com