

Gourmia

WHOLE
FRUIT
EXTRACTION

JUICER

GJ750

USER
MANUAL



WHOLE
FRUIT
EXTRACTION

JUICER

GJ750

Safety precautions	6
Product Specifications	8
Using the device.....	9
Assembly prior to use	9
Preparation of food content.....	10
Product use	10
Manufacturer's Tips	11
Cleaning	12
Product Disposal	12
Product Warranty	13

USER
MANUAL

**SAFETY
PRECAUTIONS**

- * **Disclaimer:** Manual instructions should always be read and implemented prior to product use. Manufacturer/ importer advisory board are not reliable for inadequate use due to instruction manual negligence or failure to follow direction **This device is intended for indoor household use only!**
- Never plug/ unplug the device with wet hands.
 - Never forcibly plug the cord into the outlet, and avoid trip and fall accidents by utilizing proper wire placement.
 - Refrain from placing the plug near heat or flammables and check for smooth wire placement, without bending during use.
 - Never disassemble the base. Please consult with a repair technician for troubleshooting advice.
 - Refrain from use in the event that the electrical cord is damaged or loose.
 - Never place fingers or other objects into the device's spout.
 - Never operate with the use of an empty bowl and refrain from touching the centrifuge bowl's sharp parts.
 - Keep the base dry at all times.
 - Keep this device away from children or other disqualified persons.
 - While operating the device, refrain from disassembling parts or placing/removing unknown objects within its interior until the motor comes to a complete stop.
 - Operate on a flat and steady surface.
 - Continuous use exceeding 3 minutes will overheat the motor. Cool the device for a 20 minute time span before operating in the event of overheating.
 - Never immerse the motor within water.
 - After use, remove the plug from the outlet. Do not use cord to remove plug.
 - While using, if there is any unusual odor source, immediately stop use and contact the nearest retail center for assistance.

PRODUCT SPECIFICATIONS

1. Tamper
2. Fruit pulp holder
3. Motor
4. Lock
5. Spout
6. Base
7. Centrifuge bowl
8. Power cord with plug
9. Funnel
10. Lid
11. On/ off button



PRODUCT SPECIFICATIONS

Using the device:

Before using for the first time, or after prolonged storage without use, wash any parts that will come into contact with food.

Assembly prior to use:

1. Place the motor section (3) on a flat surface, with adequate grip performance.
2. Place the base(6) on the motor section so that the spout (5) fits into the slot on the side of the motor section.
3. Push the fruit pulp holder (2) upward under the drain edge on the base so that it locks tightly onto the foot of the motor.
4. Carefully lock the centrifuge bowl (7) onto its base.
 - Be careful not to touch the sharp parts in the bottom of the centrifuge bowl.
 - Fit the centrifuge bowl properly onto its base, so that the gear on the bottom of the bowl engages the gear within the base.
 - For even rotation, be sure that the centrifuge bowl doesn't sit too loosely on its base.
5. Place the lid (10) tightly on the appliance so that it covers both the fruit pulp holder and the centrifuge bowl unit.
6. Turn the lock (4) to a vertical position and make sure that it engages the lid for a fast lock. The lock makes a clicking sound when correctly placed.
7. Place a glass, bowl or other suitable container under the spout.
8. The apparatus is now ready for use.

Preparation of food content:

- Always wash fruits and vegetables thoroughly prior to juicing.
- It is not necessary to remove seeds, pits or thin peels before using the appliance.
- Fruits with thick peels, such as oranges and lemons, must be peeled before juicing. It is particularly important to remove all the peel (including the pith), as even small amounts of peel can impart an unpleasant taste to the juice.
- It is also necessary to remove large pits (such as plum and apricot pits) to avoid damaging the appliance.
- Large fruits and vegetables should be cut into pieces that can fit into the funnel (9).

Product use:

1. Start the appliance by turning the On/ off button to position “1” (low speed) or position “2” (high speed).
 - The low speed setting is suitable for juicing soft fruits and vegetables.
 - The high speed setting is suitable for juicing harder fruits and vegetables.
2. Feed the selected fruits and/or vegetables into the appliance through the funnel in shifts, pushing them down using the tamper (1).
 - Be sure to turn the tamper so that its groove fits properly into the funnel.
 - Long vegetables such as carrots should be fed into the funnel’s pointy end first.
3. Press the fruits and/or vegetables gently with the funnel. Too much pressure reduces the amount of juice extracted and can damage the appliance.
4. Stop the appliance before removing the tamper to add more fruits/vegetables in order to avoid food expulsion.

5. Avoid overloading the juicer.
6. Always power the device off by turning the On/ off button to its “0” position before taking off the lid.

Manufacturer’s tips:

- The various apple varieties yield juices with different flavors and consistency. Experiment with different combinations to find your own favorite.
- Leafy green vegetables such as cabbage and spinach can be juiced. Roll the leaves into cylinders of an appropriate size before feeding them into the funnel.
- Fibrous fruits and vegetables as well as those with very firm flesh such as bananas, mangoes, papayas and avocados are not well-suited to juicing, since the result is often mashed fruit instead of juice.
- All types of juice should be consumed right after juicing, as fresh juice quickly loses important nutrients when exposed to the oxygen within the air. Taste can also be affected.
- Pure apple juice turns brown quickly when exposed to air. To prevent discoloration, serve apple juice immediately after juicing or add a little lemon juice.
- Remember that fruit pulp can be used in cakes, vegetable lasagne, muffins, etc.

Cleaning:

1. Remove the plug from its wall socket and allow the apparatus to cool down before cleaning.
2. Clean the motor section with a slightly dampened cloth and, if necessary, a little detergent. Do NOT immerse the motor section in any form of liquid!
 - The centrifuge bowl, fruit pulp holder, base and all other detachable parts can be washed by hand or in a dishwasher.
 - Be careful not to touch the sharp parts at the bottom of the centrifuge bowl.
 - Do not use any kind of strong or abrasive cleaning agent on the appliance or its accessories. Never use a scouring sponge, as the surface may be damaged.
3. Allow all parts of the appliance to dry completely before reassembling.

Product disposal:

This product may not be disposed of along with ordinary household waste, as electrical and electronic waste must be disposed of separately.

Contact your retailer, distributor or the municipal authorities for further information on product disposal.

PRODUCT WARRANTY:

This product is guaranteed under the premise of a 1 year limited warranty period, applicable to the original purchaser and not transferable to a third party user.

Repair or replacement of defective parts are at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/ part. If product repair/replacement won't suffice, the seller has the option of refunding the cash value of the product or component returned.

Product defects not covered under the warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications, or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.

**For Customer Service
Questions or Comments
Please Call: 888.552.0033**

Gourmia
gourmia.com

Gourmia[®]

gourmia.com