

The **Kobo eReader** is one of the electronic mobile devices available in the market today that are designed to make things easier for consumer's convenience. It is an e-book reader or e-reader which is developed specifically to read digital books and periodicals.

This article will show you how to connect the Kobo eReader to the wireless network.

**QUICK TIP:** Make sure you know the wireless settings of your router before connecting your device to the network. To learn how to check the wireless settings of your router, click [here](#).

**Step 1:**

Press the **Home** button.

**Step 2:**

Press the **Menu** button then select **Settings**.

**Step 3:**

Press the center of the navigation pad and select **Wireless**.

**NOTE:** If the setting under **Wireless Status** is **Off**, press the center of the navigation pad to turn it **On**. The Kobo eReader will then scan the area for available wireless networks and display them in the list.

- **Known Network** – wireless network that the eReader has successfully connected to before.
- **Unknown Network** – wireless network that the eReader has not connected to before.

**NOTE:** If you see a lock beside the wireless network name (SSID), then it's secured and you will need a password before you can gain access.

**Step 4:**

Select the wireless network you want to connect then press the center of the navigation pad.

**NOTE:** If the network you want to connect to is a **Known Network**, then the eReader will automatically join that network. However, if the network is an **Unknown Network**, then follow the steps below:

**Step 1:**

Select **Join Network** and press the center of the navigation pad.

**Step 2:**

Enter the password using the virtual keyboard.

**NOTE:** To see the password as you enter it, select **Show Password**.

**Step 3:**

Select **Join Network** and press the center of the navigation pad. Your Kobo eReader should now connect to the wireless network.

**NOTE:** If your eReader cannot connect to the network, it will return you to the password prompt. Check if you have entered your password correctly and try re-joining the network by selecting **Join Network**.

## **Connecting more devices**

Aside from your Kobo eReader, you can also connect other wireless devices to the network. Wireless mobile phones and gaming consoles are very easy to configure as long as you know the wireless settings of your router. Click on the corresponding links below for detailed instructions.

[iPhone®/iPod®](#)

[iPad®](#)

[Android smartphone](#)

[Xbox 360®](#)

[PS3™](#)