



**RAINTIGHT OUTDOOR TIMER
PROGRAM REPEATS EVERY 24 HOURS
TO SET TIMER: (SEE ILLUSTRATION)**



1. Insert **ON (GREEN)** and **OFF (RED)** trippers into dial at desired **ON** and **OFF** times.
2. Turn dial **CLOCKWISE**  one or more complete revolutions until the arrowhead is aligned with time-of-day (AM or PM) in window.
3. Turn lamp or appliance **ON**.
4. Plug extension cord, lamp or appliance into timers receptacle and plug timer cord into outlet, suitable for "wet locations" if outdoors.

FOR EARLY ON OR OFF OPERATION,

Turn manual knob counter clockwise  to desired **ON** or **OFF** position, Timer will follow next scheduled automatic operation.

IN CASE OF POWER FAILURE, RESET TIMER, (SEE STEP 2)

⚠ WARNING Risk of Electric Shock

Do not permit children to operate the timer or pool/spa unless they are closely supervised at all times. Install only on a **GROUND**ED 120VAC circuit protected by a GFCI. Test **GROUND FAULT** protection regularly. If it fails to reset, **DO NOT USE** the pool or spa! Contact a qualified service technician. Always disconnect electricity before servicing this timer or the equipment connected to it. **THIS TIMER IS NOT TO BE USED AS A POWER DISCONNECT.** Timer must be installed vertically at least 3 ft. above ground level and at least 5 Ft. away from edge of Pool or Spa. Wattage of lamps or appliance being controlled should not exceed capacity of timer.

MODEL: P1121 15 AMP (1800 WATT) RESISTIVE; 15 AMP (1800 WATT) TUNGSTEN; 15 FLA (90 LRA) MOTOR-120 VOLT 60 HZ.
INTERMATIC INCORPORATED **MADE IN MEXICO**
154--01980-REV C

