

Product Specifications

Acreage per Charge	1/4
Square Feet per Charge	10,000
Charging Cable Length (ft.)	7
No Load Speed (rpm)	3000
Grass Bag	10.6 gal (40 L)
Wheel Size (in.)	5.5 in. (14 cm)
Assembled Weight (lb.)	23.1 pounds (Battery installed)
Battery Capacity (Ah)	4.0
Deck Size (in.)	16.5
Product Type	Cordless Mower

How do I read my current battery level?

LED's Illumiated	Condition
1- Green, 2-Yellow, 3-Red	More than 60% Charged
1- Not illuminated, 2- Yellow, 3-Red	More than 30% Charged
1- Not illuminated, 2- Not illuminted	Less than 30% Charged.
3- Red	Needs to be charged.

My mower is not starting up. What are some potential issues?

Issue	Possible Cause
Mower fails to start	The safety key may not be inserted
	The motor/blade control is disengaged
	The battery may be faulty or flat
	The mower deck is clogged with grass or debris
	The grass is too tall

Will this unit come with a battery and charger?

Our cordless units ship with batteries and chargers included. The exception to this rule is any unit noted with "CT" or "Core Tool Only". CT units do not ship with the normally included accessories, and require the separate purchase of a battery and charger.

How long does it take to charge my MJ401C lawn mower? & how long will it last?

It will take, on average, 4 hours To fully charge your MJ401C lawn mower depending on the remaining charge of the battery. A fully charged battery will give you a total of 25 minutes of cutting time.