

FUNCTION SETUP GUIDE

K01-0000168-00

Function	Button	Timing (Sec.)	Buzzer	Indicator	Description
Power On		2	Beep once	LED On / LCD On	Press the POWER button for around 2 seconds - you will hear a constant tone (1 second) - and release after a short beep.
Power Off		2	Beep twice	LED Off / LCD Off	Press the POWER button for around 2 seconds - you will hear a constant tone (1 second) - and release after two short beeps.
Cancel Shutdown		5	Beep once	N/A	If you press the POWER button for more than 5 seconds, the UPS will remain Power On.
Forced Shutdown		10~20	N/A	LED Off / LCD Off	If you press the POWER button for more than 10~20 seconds, the UPS will shutdown.
Function Setup (↓)	 Display	0.5	N/A	LED On / LCD On	The toggle frequency is set to one time per 0.5 second. Press the switch to roll down the function menu.
Function Setup (↑)	 Silence Alarm	0.5	N/A	LED On / LCD On	The toggle frequency is set to one time per 0.5 second. Press the switch to roll up the function menu.
Disable Fault Alarm	 Silence Alarm	0.5	N/A	LED On / LCD On	Press the button for 0.5 second to disable fault alarm.
Self Test	 Control	3	N/A	LED On / LCD On	In Line Mode, press the button for 3 seconds. The UPS will perform a Self Test of the battery.
Display On/Off	 Display	2	On: Beep Once Off: Beep Twice	LED On LCD On/Off	Press the DISPLAY button for 2 seconds to turn on the LCD display. The LCD display will illuminate. Press the DISPLAY button again for 2 seconds to turn off the LCD display. The LCD display will be off. Note: The default setting is in off position. The LCD display will darken if buttons are untouched in 60 seconds.
Silence Alarm On/Off	 Silence Alarm	2	On/Off	LED On / LCD On	Press the button for 2 seconds to enable or disable audible alarm. The MUTE icon will appear on the LCD display when audible alarm is disabled.
Sensitivity Setup	 Silence Alarm  Control	3	N/A	LED On / LCD On	Press both buttons at the same time for 3 seconds to enter programming mode. Press the DISPLAY or SILENCE ALARM button to rotate through the options.
					Low Sensitivity (78-142Vac) (Not recommended for computer loads.) 
					Medium Sensitivity (88-139Vac) 
					High Sensitivity (88-136Vac) 
Event Reset	 Display 	3	Beep Twice	LED On / LCD On	Pressing both buttons at the same time for 3 seconds will clear the EVENT counter.
Fault Reset		2	Beep Twice	LED Off / LCD Off	This FAULT icon appears on the LCD display if there is a problem with the UPS. Press the POWER button for to turn off the UPS.