



- 1 Scheibe
- 2 Pin
- 3 Pin
- 4 Spring
- 5 Thick hexagonal nut
- 6 Gasket
- 7 Gasket
- 8 Acorn nut
- 9 Gasket
- 10 Inner hexagon screw
- 11 Hexagon bolt
- 12 Hexagon bolt
- 13 Hexagon bolt
- 14 Sliding bearing
- 15 Bolt
- 16 Board
- 17 Swivel nut
- 18 Push bar
- 19 Leg
- 20 Bakelite handle
- 21 Press bar
- 22 Food tray
- 23 Presser
- 24 Paper tray
- 25 Gear
- 26 Holder of presser
- 27 Bottom board
- 28 Shaft for handle
- 29 Shaft for rack
- 30 Inner hexagon screw
- 31 Body

# OPERATION INSTRUCTIONS

## PATTY PRESS



**JKH-100**



**JKH-130**



**JKH-150**

### INSTALLATION

- Install the machine onto a solid, non-slip surface. This area should be large enough to allow easy access and cleaning
- Put the cellophane discs into the holder at the top of the machine

### USE

- Put one cellophane disc into the holder
- Then place a small quantity of machine meat, according to the thickness required
- Place another cellophane disc on the meat
- Pull the lever down to form the hamburger
- Lift the lever, which will lift the hamburger for easy removal

### CLEANING

Carefully clean the machine with damp cloth and then wipe off with a dry cloth