

COS-YLIC1 / QUICK START GUIDE

THANK YOU FOR PURCHASING YOUR NEW COSMO COOKTOP

- PLEASE DO NOT RETURN TO THE STORE -

If you have questions, please call the experts.

HELP LINE: 1-888-784-3108 or Visit: www.cosmoappliances.com

GETTING STARTED:

1. PLUG IN

Plug the unit into a U.S standard 120-volt electrical outlet

2. PUT THE POT ON THE INDUCTION PLATE


Place your induction compatible pot or pan on center of cooktop.

3. TURN ON

Press and hold the power button (⏻) for 3 seconds, or until you hear a beep, then the display will turn on.


4. OPERATION

- A) Pressing the square button (■) will change modes between Temperature, Wattage or Timer settings.
- B) Use Arrow buttons (▲▼) to increase or decrease settings.
- C) After pressing the function button (■), if there isn't a proper induction compatible pot detected the induction cooker will cause an EO Error on the display.

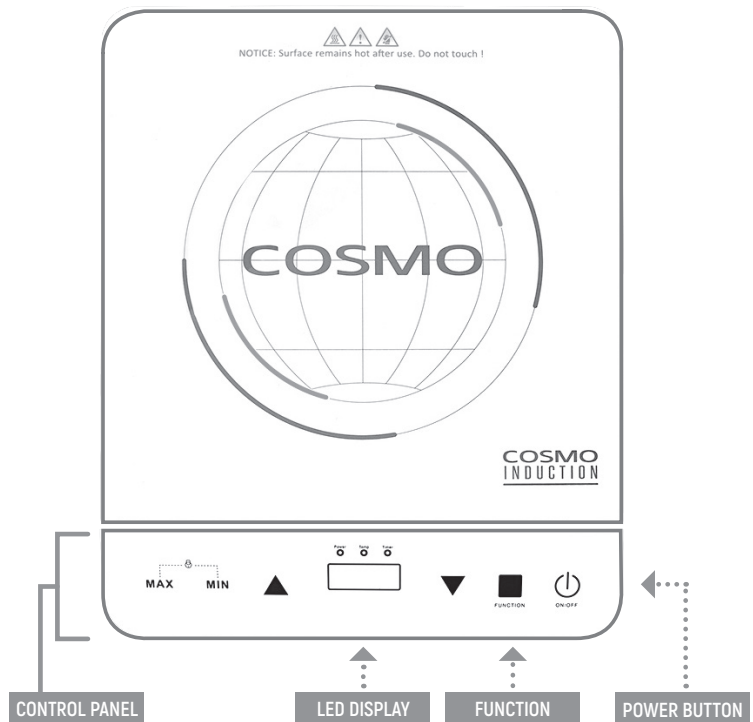

COMMON PROBLEM SOLVING

PROBLEM	CAUSE	SOLUTION
<ul style="list-style-type: none"> • Unit will not power on. 	<ul style="list-style-type: none"> • Unit not powered on properly • Unit not getting power 	<ol style="list-style-type: none"> 1. Hold "Power Button" until you hear a beep. Approx. 3 seconds. 2. Check that power plug is properly connected to U.S standard 120-volt electrical outlet.
<ul style="list-style-type: none"> • EO Error on Display 	<ul style="list-style-type: none"> • Non-Magnetic Cookware is being used 	<ol style="list-style-type: none"> 1. Check that cookware is induction compatible. <p>Induction ready Cookware</p> <ul style="list-style-type: none"> • Iron • 18/0 Stainless Steel • Magnetic Steel • Cookware w/ Induction bottom

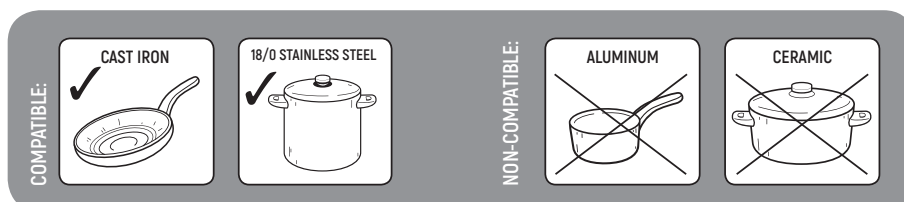

Non-Induction (Will NOT work)

- Glass
- Copper
- Ceramic
- Aluminum
- Plastic
- Wood
- 18/8 Stainless Steel
- 18/10 Stainless Steel