


## Firmware updates


The firmware is the software that is installed on the device itself. Keeping the firmware up to date ensures that you are getting the best experience and best image quality from the DxO ONE. It's important to keep your firmware updated with the latest version of the iOS app.

The availability of an update is signaled by a red dot:

1. On the Application menu icon on top part of the left-hand toolbar (after quitting the capture screen by tapping on the Gallery preview on the upper left).

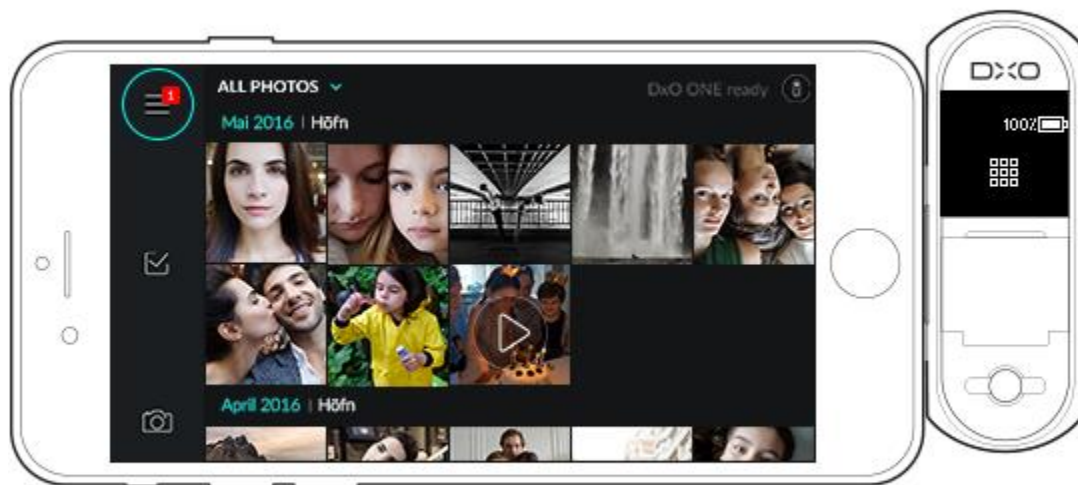

2. In the Update firmware section (after tapping on the Application menu icon on the upper left).

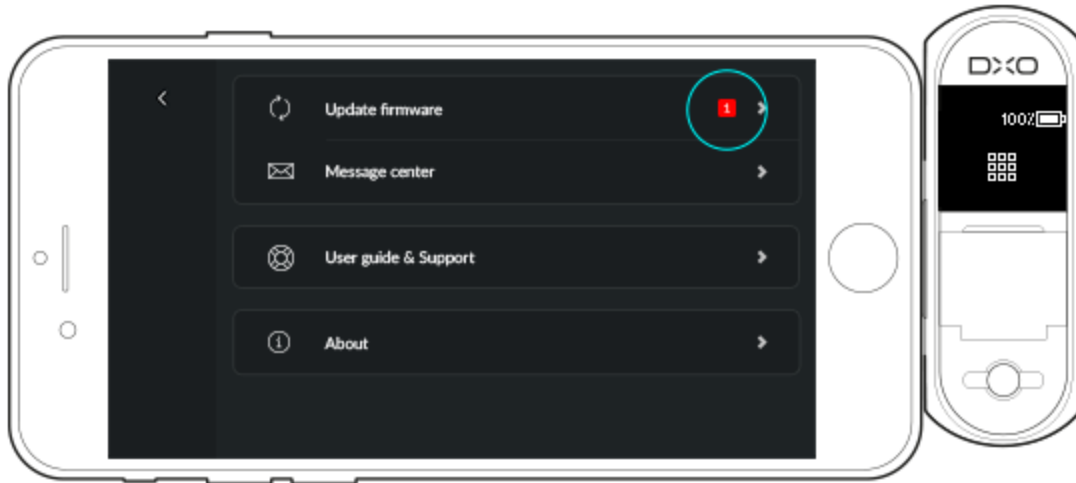

The camera must be connected to your iPhone to be able to display this information.

To update the firmware:

1. Before beginning the download, make sure that:

- Your DxO ONE has a minimum charge of 70% if it is not plugged into a power source.
- You are actively connected to the internet.

2. Tap on the application menu in the upper left.

3. In the following screen, tap on Download.

4. A progress bar will appear during the download. You cannot use your DxO ONE during the firmware update.

5. Your DxO ONE will automatically reboot when the installation is complete.

Do not disconnect the camera from your iPhone or close the app during the update. If you disconnect your iPhone or switch applications at the beginning of the firmware update, the new firmware will not be installed. If you disconnect the camera after reboot, the new firmware will be installed on the camera.

If your iPhone is not connected to Wifi, the application won't automatically download the firmware update when available. Tap on *Download now* to manually start the download over cellular network connection.