

# OWNER'S MANUAL

Hanhheld Walkie Talkies

Item NO.: T48



**EN USER INSTRUCTION**

This set included 2 walkie-talkie units: there are communication devices which operate on mobile on mobile radio frequencies. They come with 8/20/22 (optional) channels as well as back-lit LCD screen, enabling you to communicate over several kilometers free-of-charge (up to 6KM in open areas).

**Note:** Please read these user instructions carefully before using the equipment and retain for future consultation!

### **Specific Recommendations**

- To avoid the risk of burns, do not use the device if the aerial is damaged in any way.
- Do not use the device in a potentially explosive setting (e.g. Around pumps, on the lower deck of a boat or around a fuel-storage installation or chemical products)
- If traveling in a car or by bike, stop before using the device.
- Switch off the device if on an airplane or in a hospital,
- Never use the device in close proximity to a radio that could cause interference.
- Remove the batteries if the device is not used for an extended period of time. Never mix used with new batteries.
- Position the transmitter and antenna at least 5cm from your face. Direct the antenna upwards and speak normally.
- Clean the device with a damp cloth. Avoid the use of cleaning agents and solvents.
- Do not modify the device in any way. In the event of damage occurring, ensure that the device is checked by a qualified professional.
- The device cannot be used to contact emergency services.

## Key Functions



### Before Use the device

#### Removing the belt clip

Before insert batteries into the device, first pull the belt clip latch away from the device.

#### Installing the Batteries

##### A, FOR USE OF NON-RECHARGEABLE BATTERIES:

- 1, Slid down the battery compartment cover.
- 2, Insert 3\* AAA Alkaline (Not included)
- 3, Position the batteries according to the polarity making on the battery compartment.
- 4, After placing batteries into correct positions, replace the battery cover.

##### B, FOR USE OF RECHARGEABLE BATTERIES WITH CRADLE AND ADAPTER

- 1, If your walkie talkie comes with a cradle and wall charger, you should only use the battery pack provided to charge. It cannot charge other type rechargeable batteries.

- 2, After placing batteries into correct positions, replace the battery cover.
- 3, The fully charging time is about 12hours.



Cradle




Adapter




NI-HM battery pack

## Using the device

### 1, Turning the device on/off

Switch on the device: Press and hold on the  3 seconds then you will hear a beep sound.

Switch off the device: Press and hold the  3 seconds then you will hear a beep sound.

### 2, Adjusting the volume

To increase the volume, press the Up  button.

And press the Down  button to decrease the volume.

### 3, Low Battery Indication

The device can detect the low battery level when the battery voltage goes low. When battery voltage is low, the battery icon will flash and a beep will be heard to indicate that the batteries need to be replaced.

### 4, Receiving/transmitting communications:

The devices are in "Reception" mode when it is turned ON and no transmitting. When a signal is received on the current channel, the LCD will display in reception. When you press the PTT (push to talk) button, the devices switches to "Transmission" mode.

Hold the device in a vertical position with the Mic 3-5cm away from your mouth. While holding the PTT button, speak into the microphone in a normal tone of voice. Release the PTT button when you have finished transmitting. For others to receive your transmission, they must be on the same channel with you.

**Note:**

- 1, The talking range will depend on your surroundings and environment. It will be affected by obstructions such as hills or buildings.
- 2, Don't try to use two devices which are less than 1.5m (5 feet) apart. Otherwise, you may experience interference.

## **5, Changing Channels**

Press the MENU button one time, The channel number will flash on the display.

Press the up▲/down▼ button to change the channel.

Press the PTT button to confirm and return stand-by mode.

**Note:** if no button is pressed within 15 seconds during setting, the device will return to stand-by mode.

## **6, CTCSS (Continues Tone Coded Squelch System)**

Press the MENU button twice, the current CTCSS code will flash on the display. Press the up▲/down▼ button to change The 38 available codes.

Press the PTT button to confirm and return to stand-by mode.

License free radio's operating on the 400-470MHZ frequency band, the device has 8/22(option) available radio channels.

If there are many device users near you, there is a chance that some of the users are operating on the same radio channel.

When using CTCSS, a low frequency tone (between 67-250Hz) will be transmitted along with the voice signal. There are 38 available tones to choose from.

You are free to choose one of the 38 available sub-channels.

Due to filtering, these sub-channels will generally not be audible so they will not disturb the communication.

## **7, VOX (Hands free function)**

Press the MENU button three times, the current VOX setting will flash on the display and the VOX icon will display, Press UP▲ button to set the VOX sensitivity level between 1~3 level (level 3 is the high sensitive level).

Press down▼ button until "OF" appears on the display to Turn VOX OFF.

Press the PTT button to confirm and return stand-by mode. In VOX mode, the radio will transmit a signal when it is activated by your voice or other sound around you. VOX Operation is not recommended if you plan to use your device in a noisy or windy environment.

**Note:** VOX mode will be over ride when you press the PTT button.

## **8, Scanning for an active radio channel**

Press and hold the UP▲ button 2 seconds: The "SCAN" function indicator will appear on the display and the channel will scan continuously from 1 to 8 or 1 to 22 (option). Once an active channel is found, the scanning will stop and you can listen to the transmission.

When the transmission is on the found channel stop, the scanning will resume automatically.

**Note:** If you press PTT button while listening to a found channel, the device will go back to stand-by mode on the found channel.

## **9, Monitor**

Press and hold the DOWN▼ button about 3 seconds to active monitor.

Release the DOWN▼ button return to stand-by mode.

## **10, Setting the Call tones**

The device has 10 call tones.

Press the MENU button 4 times, "CA" is displayed and on the current call-tone.

Press the UP▲/Down▼ button to change another call tones.  
Press the PTT button to confirm and return to stand-by mode.

### **11, Sending a call tone**

Press the PTT button one time quickly, the call tone will be transmitted on the setting channel.

### **12, Key Tone On/Off**

Press the MENU button 5 times, "TO" will be displayed.  
Press the UP▲/Down▼ button disable the Key Tone ON/OFF.  
Press the PTT button to confirm your selection and return to the stand-by mode.

### **13, Roger Beep On/Off**

After the PTT button us released, the device will send out a roger beep to confirm that have stopped talking.  
Press the MENU button 6 times, "RO" will be displayed.  
Press the UP▲/Down▼ button disable the roger beep ON/OFF.  
Press the PTT button to confirm your selection and return to the stand-by mode.

### **13, Backlit display**

Press any button except for the MENU button to activate the back light of the LCD display. The back light will light on about 5 seconds.

### **14, Earpiece connection**

The device can be used with earpiece (If there is earpiece packed together with the device).

The connector is located on the top of the device.

Insert the earpiece plug into the connector (2.5mm jack).

There is a small "PTT" button on the earpiece that has the same function as the PTT button on the device.

When you use the PTT button from the earpiece, you must also use the microphone from the earpiece to talk.

**Note:** Don't connect other earpieces, it may damage the device.

### **15, Battery saving function**

When the device has not been used for 6 seconds, the economy mode is automatically activated. This does not affect the reception of transmission and the stand-by mode is automatically re-activated as soon as a signal is detected.

### **16, Built-in Flash light**

Your device has a built-in flash light that can be used in sending light signals or for our lighting needs.

### **17, Lock & Unlock the device**

Press and hold MENU button for 3 seconds to lock the device.  
Press and hold MENU button for 3 seconds to unlock the device.

### **18, Technical specifications**

Frequency 400-470MHZ  
Channel number 8/20/22 channels  
Sub-code CTCSS 38  
TX Power  $\leq 0.5W$   
Range Up to 10 Km in open field  
Battery type 3\* AAA Alkaline/rechargeable batteries

### **Channel and Frequency (MHz) Europe(8CH)**

Ch.	Frequency	Ch.	Frequency	Ch.	Frequency
1	446.00625	4	446.04375	7	446.08125
2	446.01875	5	446.05625	8	446.09375
3	446.03125	6	446.06875		

### **USA(22CH)**

Ch.	Frequency	Ch.	Frequency	Ch.	Frequency	Ch.	Frequency
1	462.5625	7	462.7125	13	467.6875	19	462.6500
2	462.5875	8	467.5625	14	467.7125	20	462.6750
3	462.6125	9	467.5875	15	462.5500	21	462.7000
4	462.6375	10	467.6125	16	462.5750	22	462.7250
5	462.6625	11	467.6375	17	462.6000		
6	462.6875	12	467.6625	18	462.6250		