

SmartyKat®

ELECTRONIC MOTION TOY HOT PURSUIT™

Dieline
Do Not Print

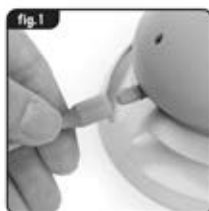


fig. 1

INSTRUCTIONS FOR USE:

Locate and open the battery compartment on bottom of toy with a Phillips screwdriver and insert (3) AA batteries (1.5 VDC) (not included). Ensure the batteries are placed in the correct polarity (+/-). Replace cover.

Connect the wand attachment to the extension on the base by twisting until secure (**figure 1**).



fig. 2

Place the fabric cover over the base. (**figure 2**).

Press button to power ON and select SLOW mode. Press button a second time for FAST mode. Press button a third time to power OFF (**figure 3**).

CARE INSTRUCTIONS: Turn the toy OFF. Wipe with soft, dry cloth. Do not immerse in water.



fig. 3

SAFETY INFORMATION: This toy is fitted with safety devices. Use this toy only as described in the instructions and read all safety instructions to avoid possible damage or injury. Store these instructions in a safe place for future reference. To prevent damage to property, keep away from heat sources, direct sunlight and humidity.

WARNING: For pets only. Contains small parts. Keep out of reach of children. Batteries are to be replaced by an adult. Read all instructions and safety information before use. Pets should be supervised when playing with this toy. Remove toy from pet if any part becomes loose or detached. Store out of pet's reach when not in use. Remove all packaging and dispose of properly, or retain in a safe place, as appropriate.

CAUTION: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), and/or rechargeable batteries of different chemistries (NiCd, NiMH, Lithium, etc.). Ensure the batteries are placed in the correct polarity (+/-). Exhausted batteries are to be removed from product.

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Do not short-circuit battery.

3x **AA** BATTERIES REQUIRED
(NOT INCLUDED)

ENVIRONMENTAL PROTECTION: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please retain packaging for future reference as it contains important information.

Manufactured for
Worldwise, Inc., Dept. SK
6 Hamilton Landing, Suite 150
Novato, CA 94949
(303) 623-3327
cats@smartykat.com

Learn more about your pet. Visit:
www.smartykat.com



This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- 1) This device may not cause harmful interference and
- 2) This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Patent No. 7,823,541

00460-32013-401