

Let's Go Fishin'™

Game

For 1 to 4 Players
Ages 4 and Up



Let's Go Fishin'™ Game Rules

OBJECT OF THE GAME: To catch as many fish as possible.

SETTING UP THE GAME: Turn the battery switch (located on top of the game base) to the “off” position. Open the battery compartment using a coin or screw driver (next to battery switch) and insert one “C” size battery in the direction indicated inside the battery compartment. Close the battery compartment once the battery is inside.

Each player takes a fishing pole. Turn the battery switch to the “on” position; the base will start rotating.

PLAYING THE GAME: As the game base rotates all players simultaneously try to catch as many fish as possible; one at a time.

WINNING THE GAME: After all the fish have been caught, each player counts the fish they caught. The player with the most fish wins. Before placing your game back into the box, manually spin the game base so that ALL fish are in the down position.

We appreciate your comments on this game.
Please address your correspondence to:



Pressman Toy Corp.
3701 West Plano Parkway, Suite 100
Plano, TX 75075

Our Consumer Service number is 855-258-8214.
Calls are accepted Monday through Friday from 10:00 am until 4:00 pm CST.

© 2017 Pressman Toy Corporation, 3701 West Plano Parkway, Suite 100, Plano, TX 75075.
Warning: Not suitable for children under three years old due to small parts. Choking hazard.
Keep this information for future reference. Colors and contents may vary from those illustrated.
Made in Guangdong, China. www.pressmantoy.com
Distributed under license in Australia by Crown & Andrews Pty Ltd, Unit D, 21 Loyalty Road, North Rocks, NSW 2151, Australia. P: +61 2 98983555 E: sales@crowbandandrews.com.au
www.crowbandandrews.com