

How do I turn my CD player on and off?

Press the **Play/Pause** button to turn on the player and start playback. Press the **Stop** button once to end playback of the CD, then press the **Stop** button again to turn the player off.

What does the mode button do?

The mode button controls how you want your CD played back. Your choices are random order, repeat a track, repeat the entire CD or to play the intro of each track.

How do I program the tracks on my CD player?

1. Slide the **Open Switch** to open the CD door to load the CD into the unit.
2. After the CD is loaded, press the **Program Button**.
3. Press the **Skip/Search Buttons** to adjust the track number.
4. Press the **Program Button** to set the selected track number as the first programmed track. Repeat steps 2 and 3 for all subsequent CD tracks.
5. Press the **Play/Pause Button** to begin playing the programmed CD tracks.