 


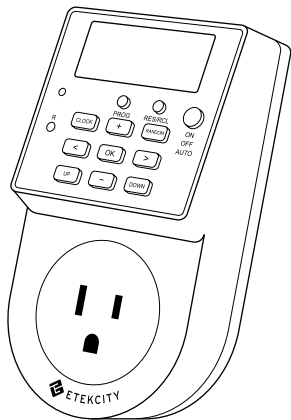

Digital Timer Outlet

Model No.: EDT-1USA



Thank You.

Thank you for purchasing the EDT-1USA Digital Timer Outlet by Etekcity. We are dedicated to providing our customers with quality products for building a better living. Should you have any questions or concerns about using your new product, feel free to reach out to our helpful customer support team at (855) 686-3835 or by email at support@etekcity.com. We hope you enjoy your new product!

Package Contents

1 x Digital Timer Outlet
1 x User Manual

Table of Contents


Safety Information	3
Function Diagram	
<i>Digital Timer Outlet</i>	4
<i>LCD Display</i>	4
<i>Control Panel</i>	5
Set-Up	
<i>First Time Set-Up</i>	6
<i>Internal Battery</i>	7
<i>Setting Up the Clock</i>	7
Operation	
<i>Programming a Timer</i>	8
<i>Programming Additional Timers</i>	10
<i>Resetting a Programmed Timer</i>	11
<i>Setting Up the Random Timer</i>	11
<i>Resetting All Settings on the Outlet</i>	12
Specifications	12
Warranty	13
Customer Support	14

Safety Information

IMPORTANT: Please read and comply with all of the instructions and warnings provided in this manual before using the product. Failure to comply with the instructions and warnings provided herein may result in inaccurate results and/or damage to the product itself.

- This outlet is intended for indoor use only.
- Avoid exposing to high-temperature sources, direct sunlight, or exposure to moisture.
- **DO NOT** attempt to open and repair this device if it malfunctions
- **DO NOT** exceed the maximum load current of 10A (approximately 1200W).
- **DO NOT** use appliances such as refrigerators, air conditioning units, and washing machines with the outlets. Such appliances exceed the maximum load current of 10A (1200W).
- Keep out of reach of children.
- The outlet is best used in areas with proper air circulation.
- When cleaning, use a dry or damp cleaning cloth to wipe the outlet.
- **DO NOT** dispose any part of this product in a fire.
- This device is not intended for use in areas with high humidity, such as bathrooms.
- Discard all parts of this products in accordance with local environmental regulations. Do not dispose in regular household waste.

Function Diagram

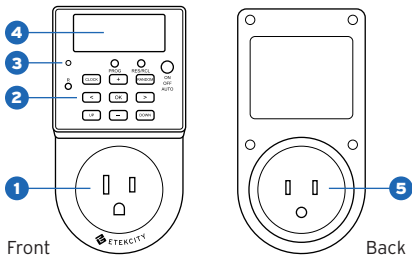


Front

Back

1. Outlet
2. Control Panel
3. On/Off Indicator

4. LCD Display
5. Plug

LCD Display

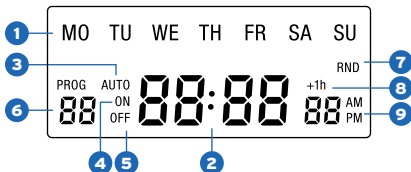

1. Day
2. Clock
3. Auto mode indicator
4. Outlet power on
5. Outlet power off
6. Timer number
7. Random mode indicator
8. Daylight savings mode indicator
9. 12-hour time mode

Control Panel

Button	Function
ON/OFF/ AUTO	Manually turns on or turns off the outlet when pressed. Press and hold to activate Auto Mode to lock in a programmed timer. NOTE: Outlet must be plugged in to be manually turned on or off.
PROG	Allows you to program a timer for the outlet. (See Programming a Timer)
RES / RCL	Allows you to reset or clear an individual timer setting.
CLOCK	Sets up the built-in clock for the outlet. (See Setting Up the Clock)

RANDOM	Sets the outlet to randomly turn on or off in one hour intervals from 6:00 a.m. to 12:00 a.m.
UP / DOWN	Used to select a timer setting when programming a timer.
< / >	Used to select the digits on the display when setting up the clock or timer.
+ / -	Changes the selected digits when setting up the clock or timer.
OK	Confirms selection.
R	Manufacturer Reset button; automatically resets and clears all timers and settings on the outlet.

Set-Up

First Time Setup

Before using your new timer outlet for the first time, remove the plastic film on the control panel. Use a pen or pencil to press and hold the manufacturer reset button (**R**) to reset the outlet. If the display on your timer outlet does not appear, plug the timer outlet into a powered electrical socket and allow it to charge for at least one hour.

NOTE:

- The display may be on when you first receive your timer outlet. This is due to the internal battery powering the timer.



Internal Battery

The timer outlet has a rechargeable internal battery that allows the clock and timer to be set without having to plug in the outlet. When the battery starts to get low, the display will start to dim. To recharge the battery, simply plug in the outlet to a powered electrical socket and allow it to charge for at least one hour.

NOTE:

- The timer outlet can stay on without being charged for 6 months.
- The battery only works when the outlet is disconnected from a power source.

Setting Up the Clock

NOTE: The default setting for the clock is 24-hour time.

1. Press and hold **CLOCK** for 2 seconds.
2. Use the **<** or **>** buttons to select the hour, minute, and day. Press **+** or **-** to change the selected digits on the display.
3. Press **OK** to confirm your selected time.


Setting Up the Clock for 12-Hour Time

The timer outlet can be switched from 24-hour time to 12-hour time. While setting up the clock, press **<** or **>** until all digits of the clock are flashing, then press **+** or **-**. The **"AM"** or **"PM"** symbol next to the clock will appear on the display.

Setting Up the Daylight Savings Clock

The timer outlet has a daylight savings feature that can set the clock forward by one hour.


1. Press and hold **CLOCK** for 6 seconds and the **+1hr** symbol will appear on the screen.
2. Press **OK** to set the daylight savings clock.
3. To turn off this feature, simply press and hold **CLOCK** for 6 seconds once more.

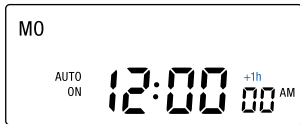


Operation

Programming a Timer

1. Press the program button (**PROG**), and the screen will show the timer number with the **"ON"** symbol.
2. Use **+** or **-** to select your desired hour.

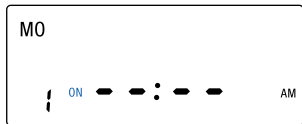

- Press **>** to select the minutes; use **+** or **-** to select your desired minutes.
- Press **>** once more to select the days; use **+** or **-** to select your desired days of the week for your timer.
- Once the on time is selected, press **UP** to set up your off time. The screen will now show the same timer number with the **"OFF"** symbol.
- Repeat steps 3-5 to set your off time.

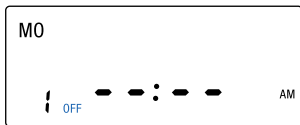

- Press **OK** to once you have set your timer.
- Press and hold **(ON/OFF/AUTO)** for 2 seconds to turn on the Auto function to

- activate the programmed timer.
- Plug the timer outlet into a powered electrical socket.
- Set your desired device to its on position and plug it into the outlet.



NOTE:

- The timer outlet will return to the home screen if no buttons are pressed within 20 seconds or pressing the program button **(PROG)**.
- The backlight will turn on when pressing any button while the timer outlet is plugged in.

Programming Additional Timers

You are able to program up to 20 timers on the timer outlet.

1. To program additional timers, press **(PROG)**.
2. Press or to select a different timer.
3. Repeat steps 3-7 on **Programming a Timer** to program the times and days for each additional timer you wish to set.
4. Press when you have finished setting your timers.
5. Press the **(ON/OFF/AUTO)** for 2 seconds to turn on the Auto function to activate the programmed timers. The **"AUTO"** symbol will appear on the display.
6. To turn off the Auto function, press the **(ON/OFF/AUTO)** for 2 seconds. The **"AUTO"** symbol will disappear from the screen.




(Additional Timer Programmed)

NOTE:

- When programming multiple timers for the same day with the same "on" time, the outlet will prioritize the first programmed timer and will turn off at the first "off" time.
- Pressing **(ON/OFF/AUTO)** after the timer(s) have been programmed will turn off Auto mode.

Resetting and Clearing a Programmed Timer

1. Press **(PROG)**.
2. Use the **(UP)** or **(DOWN)** buttons to select the programmed timer you wish to reset or clear.
3. Press **(RES/RCL)** once to clear the timer.
4. Press **(RES/RCL)** again to reset the timer to its original programmed time.
5. Press **(OK)** when you are finished resetting or clearing the desired timers.

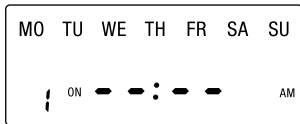

(Cleared Timer)

Setting Up the Random Timer

The timer outlet is equipped with a random setting that can power devices for one hour intervals from 6:00 a.m. to 12:00 a.m. This feature can be used for home security purposes to give the appearance that someone is occupying a room.

1. Press **(RANDOM)** to turn on the random timer. The **"RDM"** symbol will appear on the display.
2. To turn off the random timer, press **(RANDOM)** once more.

NOTE: This function cannot be modified.



Resetting All Settings on the Outlet

To reset all programmed settings on the timer outlet, press the manufacturer reset button **(R)**. The reset is complete when all digits show up on the screen.



Specifications

Voltage	AC 120V / 60Hz
Rated Power	1800W / 15A
Internal Battery	Ni-MH 40mAh

Warranty

TERMS & POLICY

Etekciti warrants all products to be of the highest quality in material, craftsmanship and service for a minimum of 1 year, effective from the date of purchase. Warranty lengths may vary between product categories. Etekciti will replace any product found to be defective due to manufacturer flaws based on eligibility; refunds are available within the first 30 days of purchase. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product. This warranty is non-transferrable. Etekciti is not responsible in any way for any damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety, use, or warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Etekciti and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Should your product prove defective within the specified warranty period, please return the defective unit in its original packaging with (1) an original copy of the invoice, (2) your order confirmation number, (3) and your warranty ID number.

To find out more about extending your warranty, visit www.etekciti.com/warranty or contact customer support.

Date of Purchase	
Place of Purchase	
Order Number	

Customer Support

Should you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team. Your satisfaction is ours!

Customer Support

Etekcite Corporation
1202 N Miller St. Suite A
Anaheim, CA 92806

Toll-Free: (855) 686-3835
Fax: (657) 202-1693
Local: (657) 500-1872
Email: support@etekcity.com

Support Hours

Monday - Friday:
9:00 am - 5:00 pm PST

**Please have your order confirmation number ready before contacting customer support.*

Connect with us @Etekcity.





Scan here to join the community!
Visit us at **www.etekcity.com**

