


Bose Soundwear Companion Wireless Wearable Speaker – Black

Here is a capture from our Owner's Guide on Power On/Off:

Power on/off

Press the Power button .

The battery indicators glow solid white, and a voice prompt announces the battery level.

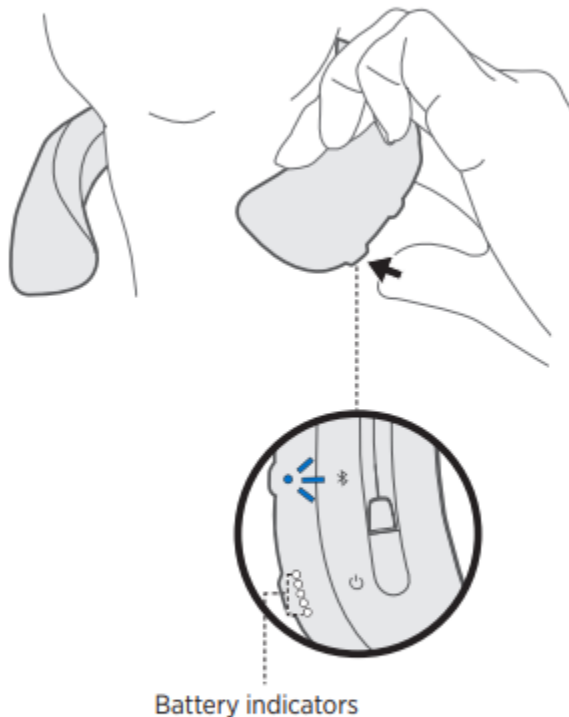

Auto-off timer

The auto-off timer conserves the battery when the speaker is not being used. The speaker switches off when audio has stopped and no buttons have been pressed for three hours.

Note: To adjust the time it takes for your speaker to automatically power off or to disable the auto-off timer, use the Bose® Connect app.

Speaker does not charge

- Make sure the connector on the cable is correctly aligned with the connector on the speaker.
- Secure both ends of the USB cable.

- Try another charging source.
- If your speaker has been exposed to high or low temperatures, let it return to room temperature and then try charging again.
- Reset your speaker (see “Reset your speaker”).
- Your speaker may be in safety protection mode

Here are some FAQs about the product:

How do I charge the SoundWear Companion speaker?

The SoundWear Companion can be charged using the supplied USB cable and plugging it into a USB port on a computer or a wall charger (sold separately). Allow up to 3 hours for the speaker to fully charge.

How long will the battery stay charged?

The battery will provide up to 12 hours of use per charge.