

ROTO CLIPPER®


ELECTRIC NAIL TRIMMER

For More Tips, Tricks, and
Instructional Videos Please Visit
www.RotoClipperTips.com

INSTRUCTION MANUAL

Overview

- A. Protective Cover
- B. Release Keys for Cutter Head
- C. ON/OFF Switch
- D. Battery Compartment Cover
- E. Cleaning Brush
- F. Cutting Head
- G. LED light

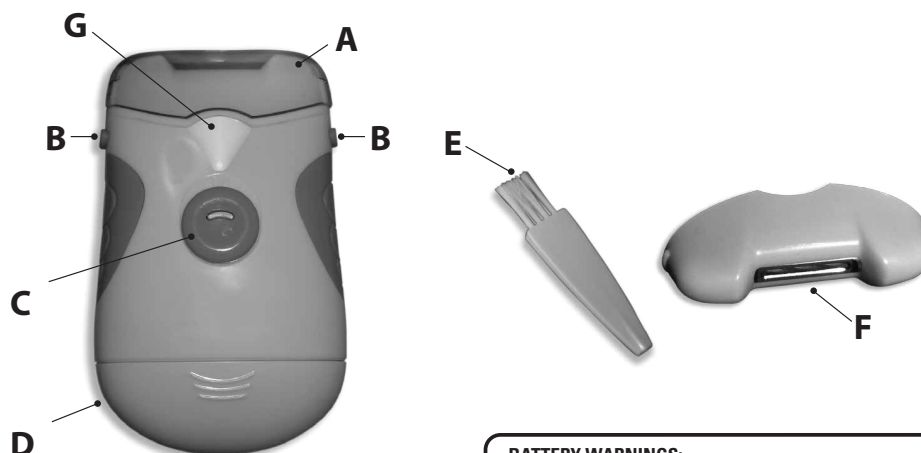

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USE

WARNING - To reduce the injury to persons:

- This device is intended only for trimming or filing human finger and toenails.
- Avoid use on irritated, ingrown, or infected finger or toenails.
- Consult a physician before use if any nail conditions exist.
- Do not rinse unit with water. Only clean the outside of the unit with a soft, dry cloth.
- If any part of the Roto Clipper® Electric Nail Trimmer appears to be damaged or malfunctioning, discontinue use immediately.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

BATTERY WARNINGS:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Batteries must be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Remove batteries if the item will not be used for an extended period of time.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the item before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Exhausted batteries should be removed from the item.

SAVE THESE INSTRUCTIONS

Battery Installation

1. Remove battery compartment cover by pressing your fingers on the two ribbed areas, and pulling the cover down and off.
Note: It may require additional force to remove the battery compartment cover.
2. Insert two "AA" batteries (not included) into the battery compartment in the polarity direction shown inside. (Figure 1)
Note: The Roto Clipper® Electric Nail Trimmer will not turn on if the batteries are inserted incorrectly.
3. Replace the battery compartment cover.


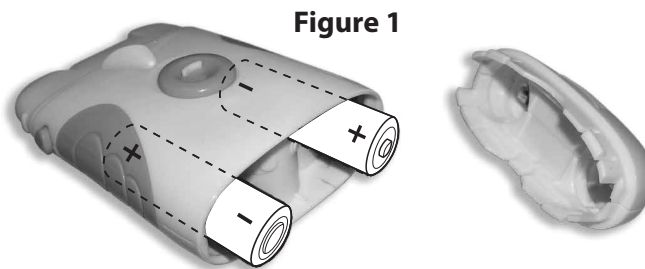


Figure 1

Before Using Your Roto Clipper® Electric Nail Trimmer

For best results, soak your nails in warm water for about 30 seconds before using the Roto Clipper® Electric Nail Trimmer, or use the unit after coming out from the bath or shower.

IMPORTANT: Make sure to dry your fingers thoroughly before using the Roto Clipper® Electric Nail Trimmer, to ensure that no liquids enter the interior of the device.

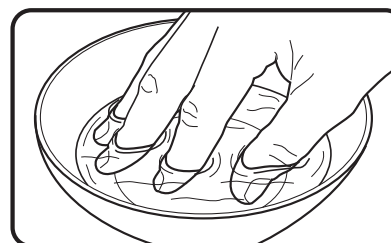

©2016 APG
Roto Clipper is a Registered Trademark of
Lenfest Media Group, LLC
Distributed by Allstar Products Group
Hawthorne, NY 10532

Product Color and Appearance may vary
Patent Pending
Made in China

 
Using Your Roto Clipper® Electric Nail Trimmer

1. Read all of the important safety instructions before use.
2. Remove the protective cover from the clipper. (Photo 1)
3. Press and hold the ON/OFF switch (Photo 2) and slide it forward (Photo 3) to turn the Roto Clipper® Electric Nail Trimmer on.
Note: Be sure to press the white ON/OFF lock while sliding the button forward.
4. When using either the Trimming side or the Filing side of the Roto Clipper® Electric Nail Trimmer, be sure to move the unit evenly and slowly around the fingernail in a left-to-right or a right-to-left motion. The cutting result will depend on the left/right movement speed, the amount of pressure applied, and duration of use. (Photo 4)
5. After each use, be sure to turn the Roto Clipper® Electric Nail Trimmer off and put the protective cover back on the cutter head.


To Increase Cutting Efficiency: Apply more pressure and move the unit left-to-right more frequently around the nail.




1

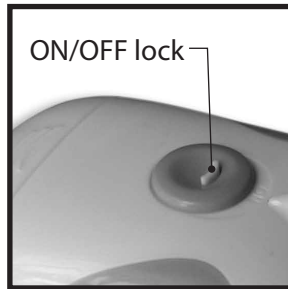

2

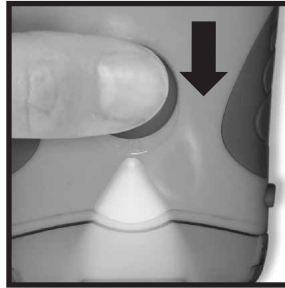

3

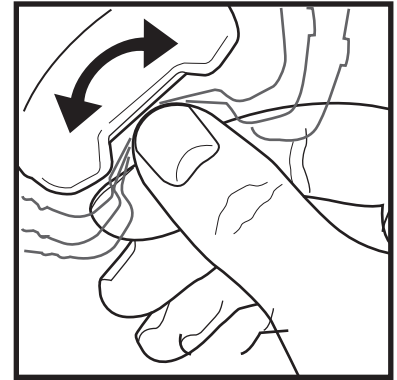 


4

Using Your Roto Clipper® Electric Nail Trimmer In Trimming Mode

When the Roto Clipper® Electric Nail Trimmer is being held with the LED light and power button facing up, then the unit is in Trimming mode. Move the unit evenly around the fingernail in a left-to-right motion. Cutting efficiency can be increased by applying more pressure and moving the unit left-to-right around the fingernail.

 To Increase Cutting Efficiency: Apply more pressure and move the unit left-to-right more frequently around the nail.

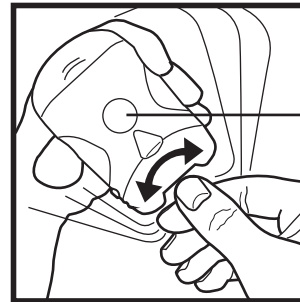


Trimming Mode

Power Button "UP"

Using Your Roto Clipper® Electric Nail Trimmer In Filing Mode

When the Roto Clipper® Electric Nail Trimmer is being held with the LED light and power button facing down, then the unit is in Filing mode.

To Increase Cutting Efficiency: Apply more pressure and move the unit left-to-right more frequently around the nail.

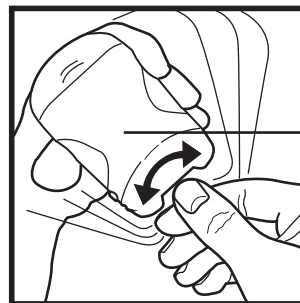


Filing Mode

Power Button "DOWN"

Cleaning Your Roto Clipper® Electric Nail Trimmer

Clean the cutter head by depressing both green release keys and carefully detaching the cutter head. Use the supplied cleaning brush to remove all cutting remains. Then re-attach the cutter head on the device and secure it with the protective cover. Do not clean with water or liquids.

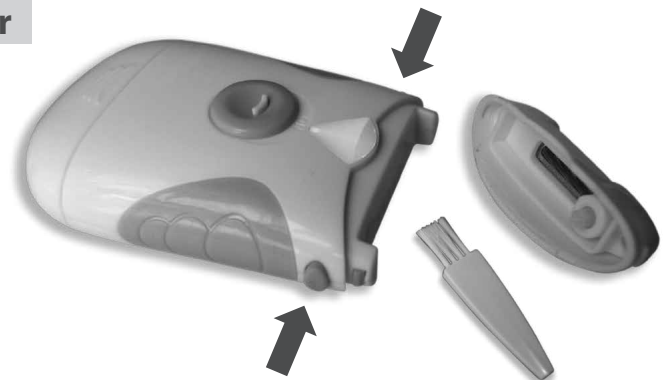

**For More Tips, Tricks, and Instructional Videos Please Visit
www.RotoClipperTips.com**