

Operating Instructions

This appliance is intended for household use only.

This appliance may have a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.

BARRELS WITH TOURMALINE AND CERAMIC

The easy-to-clean barrels with tourmaline gemstone and ceramic emit maximum hair-conditioning ions and far-infrared heat, helping hair retain its own moisture for soft, sleek straight styles in a fraction of time.

Styling Tips

- The Bed Head® Wave Artist™ Deep Waver uses a unique three-barrel design with an extra-wide middle barrel to create the deepest, smoothest waves. The barrels with ceramic emit far-infrared heat for shiny, smooth styles that last all day long.
- Hair should be clean and dried completely before using any styling tool.
- Plug the appliance into an electrical outlet and slide the On / Off switch to the "On" position. Use the heat control dial to select the appropriate heat setting for your hair type.
- **IMPORTANT:** When using the styling iron for the first time, select the **LOWEST** heat setting and test in one small section of hair for 5 to 8 seconds. If you want to use a higher setting, be sure to **GRADUALLY** increase the temperature. Never style

hair for the first time on a high setting as this may damage your hair. Use only as much heat as you need for effective styling. Over time, using more heat than is necessary can result in hair damage. For best results, follow the guidelines below:

HAIR TYPE	HEAT LEVEL
Fine, thin hair	LOW
Wavy to medium hair	MEDIUM
Thick, hard-to-style hair	HIGH

- Allow the barrels to heat for approximately 30 seconds.
- **DO NOT** touch heating barrels while the waver is plugged in or operating. They are extremely hot.
- When styling is complete, slide the On / Off switch to the "Off" position and unplug the styling tool.
- Allow the hair to cool before combing, brushing, or touching.

Locking Switch

When finished using the styling tool, unplug the appliance and allow it to cool. Close the handles, then push the locking switch forward to lock the barrels together for easier storage. To unlock the barrels, push the locking switch back. **DO NOT** engage the locking switch while styling. Locking the barrels onto the hair can cause serious damage to the hair.

**GET
THE
LOOK!**

**BED
HEAD®**

TIGI®

Wave Artist™

**DISTINCTIVE
MASTERFULLY
SCULPTED
WAVES**

**GET
THE
LOOK!**

1. PREP

Get your hair ready for distinctive masterfully sculpted waves! Section dry hair in small pieces and lightly mist with Bed Head™ Masterpiece™ Hairspray.

2. STYLE

Work from the scalp to the ends of dry hair. Starting at the roots, lightly clamp a small section of hair between barrels. Hold your Bed Head® Wave Artist™ Deep Waver in this position for a few seconds, depending on your hair type. Release the handles and let the hair slip out. For continuous waves, match the outermost wave of your hair with the barrel and hold in position again for a few seconds. Repeat the process until desired look is achieved.

NOTE: Smooth curly hair prior to waving by pulling the Wave Artist™ through hair quickly to relax curls.

3. FINISH

Finish your look with a final layer of Bed Head® Masterpiece™ Hairspray to set the style and...voilà!



* Bed Head® Masterpiece™ Hairspray sold only in professional salons

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always “unplug it” immediately after using.
2. **DO NOT** use while bathing.
3. **DO NOT** use near, place or store appliance where it can fall or be pulled into a tub or sink.
4. **DO NOT** place in or drop into water or other liquid.
5. **DO NOT** reach for an appliance that has fallen into water. Unplug it immediately.
6. **DO NOT** use an appliance whose cord has become twisted, bent or otherwise damaged.

WARNING: To reduce the risk of burns,

electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in. Turn off the switch and unplug the electrical cord when not in use.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. **DO NOT** use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped into water. Return the appliance to a service center for examination and repair.

NOTE: Helen of Troy L.P. does not have an authorized service center. However, if this appliance is still under warranty, return it to the Helen of Troy Consumer Service Department for replacement.

5. Keep the cord and appliance away from heated surfaces.
6. Never drop or insert any object into any opening.
7. **DO NOT** use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. **DO NOT** use an extension cord with this appliance.
9. The barrels of this hair waver are hot when in use. **DO NOT** let bare skin and eyes touch heated surfaces. Use the handle.
10. **DO NOT** place the heated hair waver directly on any surface while it is hot or plugged in.
11. **DO NOT** pull, twist or wrap the cord around the appliance.

SAVE THESE INSTRUCTIONS

USER MAINTENANCE INSTRUCTIONS

Your appliance is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hair spray. If cleaning becomes necessary, disconnect the appliance from the power source and wipe the exterior with a damp cloth. If the cord becomes twisted, untwist prior to use.

WARNING:

If any malfunction occurs, DO NOT attempt to repair it yourself. This

appliance has no user-serviceable parts.


STORAGE

When not in use, “unplug it.” Allow appliance to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle cord carefully for longer life and avoid jerking, bending sharply, twisting, or straining cord, especially at plug connections.

(USA)

TOURMALINE CERAMIC DEEP WAYER

BH305

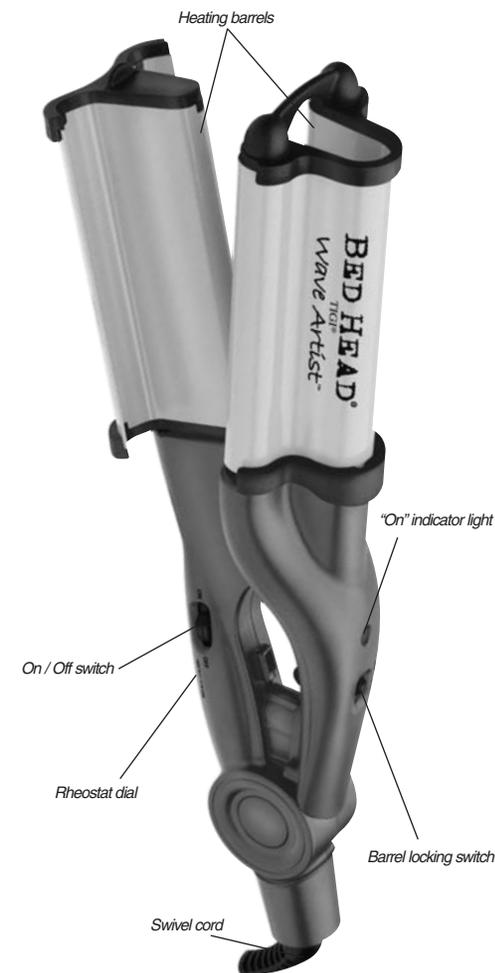


Limited 36-Month Warranty

This appliance is warranted against defects in material or workmanship for 36 months from date of purchase. Any problems arising from misuse, attempts at repair, dropping or extreme wear are not covered by this warranty.

The store where this item was purchased is authorized to make an exchange only if the return is made within 30 days from purchase date. For exchanges after 30 days, send the appliance postage paid along with proof of purchase, a note explaining reason for return, and \$5.00 US to cover handling, insurance, and return postage costs to: Helen of Troy L.P., Consumer Service Department, 1 Helen of Troy Plaza, El Paso, Texas 79912 USA. (California residents are not required to send \$5.00 US.) Toll-free number 1-800-487-7273.

 This warranty gives you specific legal rights, and you may also have other rights, which may vary depending on where you live.



Made in China
Distributed by Helen of Troy L.P.
El Paso, TX 79912 USA
www.HelenofTroyUSA.com

Bed Head™, Masterpiece™, and TIGI® are registered trademarks of Unilever PLC, LP or its affiliates and are used by Helen of Troy L.P.

Wave Artist™ is trademark of Helen of Troy Limited

© 2009 All rights reserved.

For product information, visit us at www.bedheadstyling.com

Printed in China (BH-522)(USA)

The appearance of your appliance may vary from the illustration above.