 


Correct Connect TV & Setting and Play

Introduce of Part of device:

1. Battery Housing need AA X4PCS new Battery.
2. Power ON-OFF LED indicator. Trun ON, LED right up.
3. AV Cable, need connect with TV correct AV port and switch to correct AV signal source.
4. Joystick for movement direction. (UP, DOWN, LEFT, RIGHT)
5. Button A and B for function select & confirm

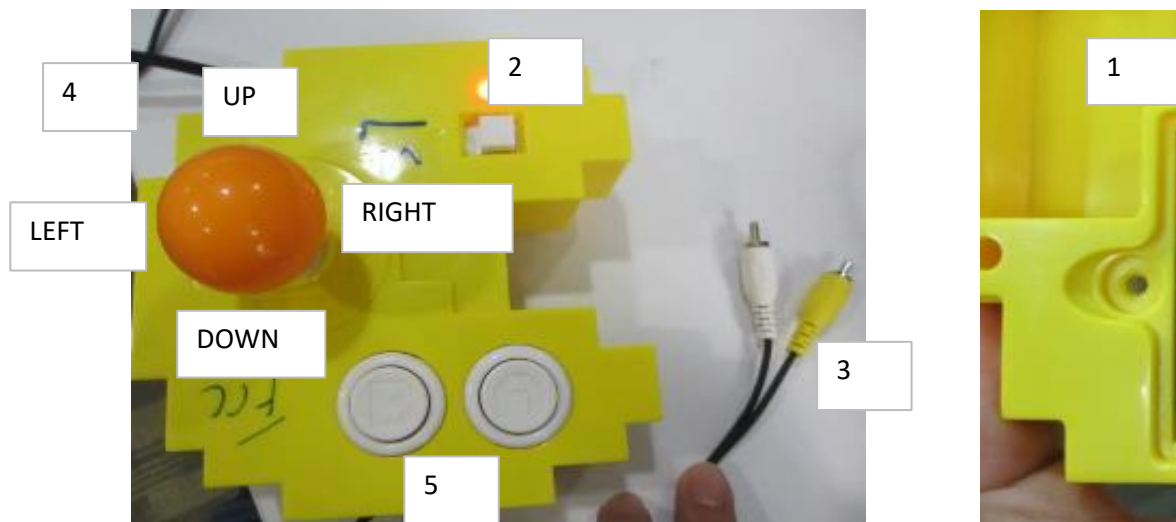

1. Insert new Battery AA X 4PCS
2. Turn ON to Power LED right up
3. AV Cable, need connect with TV correct AV port (Yellow is Video signal line, White is Left



AV port of TV:
Yellow line insert Yellow po
White line insert White port



Setting TV Signal Source to **AV Input.**



Connecting to External Equipment

You can connect many types of external equipment to your TV like a Blu-ray disc player, HD-DVD player, VCR, Digital TV tuner, HDMI equipment, game console or camcorder. To view external so select the input source from **INPUT** on the remote control unit or on the TV. (See page 13.)

CAUTION

- To protect equipment, always turn off the TV before connecting any external equipment.
- Please read the relevant operation manual (Blu-ray disc player, etc.) carefully before making connections.

Connecting a Blu-ray disc player, HD-DVD player, DVD player, Digital TV STB (Air or Cable), VC game console or camcorder

Terminal on the TV	Cable	Term
INPUT 1 or 2 VIDEO AUDIO L R	AV cable (commercially available)	VID
INPUT 1 or 3 COMPONENT Y Pb Pr AUDIO L R	Component video cable (commercially available) Audio cable (commercially available)	
INPUT 2 S-VIDEO AUDIO L R	S-VIDEO cable (commercially available) Audio cable (commercially available)	S-VID
INPUT 4 or 5 HDMI	HDMI-certified cable (commercially available)	
DIGITAL AUDIO OUTPUT DIGITAL AUDIO OUTPUT	Optical fiber cable (commercially available)	

NOTE

- *1 • The S-VIDEO terminal takes priority over the video terminals. (INPUT 2 only)
- *2 • When using an HDMI-DVI conversion cable, input the audio signal to AUDIO terminal of INPUT 5.
- *3 • Depending on the connected equipment, audio will not output from the DIGITAL AUDIO OUTPUT terminal connection. In this case, set the audio formats of the connected equipment to PCM, 32/44.1/48 kHz

Connecting a PC

Terminal on the TV	Cable	Tr

Refer to the TV user manual, some change the input signal type.

Trouble Shooting 2:

If wrong connect TV port,

For example:

AV cable connect with TV COMPONENT IN.

It would:

1.TV Display "No Signal" or White and Black

2.When select the game from the MAIN MENU,it v
TV display Blank or "Invaild format"







(Yellow is Video signal line, White is Audio signal line)



: Audio signal line)

rt.
t.

Trouble Shooting 1: "No Signal" or "Black & White Display" on TV Screen

Player, DVD
source images,

CR,



Signal in HDMI
and 16 bits.

Terminal on PC

On-Screen Display Menu

Input Select

If the image does not come in clearly from the external equipment connected to INPUT 1, you may need to change the input signal type setting from the list below:
Auto/COMPONENT/VIDEO

NOTE

- If the selected signal type is incorrect, images are not displayed at all or are displayed without any color.
- Refer to your external equipment operation manual for the signal type.
- If you set INPUT 1 to Auto, the TV will automatically select the input signal.
- Setting INPUT 1 signal selection to "Auto" when other equipment is connected will result in the following connection priority.

INPUT 1:

- ① COMPONENT VIDEO
- ② VIDEO


HDMI Setup

To watch an HDMI or PC-IN equipment image, select "INPUT4" or "INPUT5" from "INPUT SOURCE" menu using **INPUT** on the remote control unit or on the TV.

Auto View:

Enable: To use View Mode based on signal

video input require to


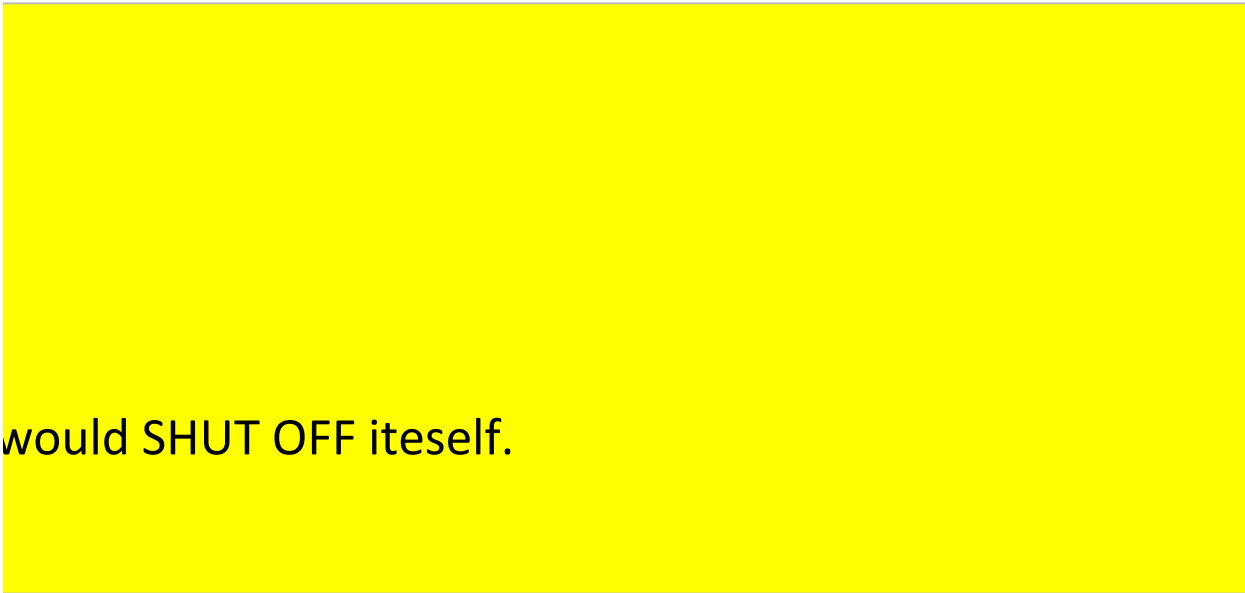


would SHUT OFF iteself.







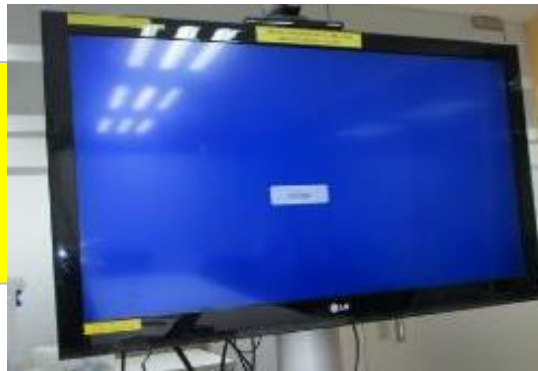 

Caption Setup

This function allows you to adjust the closed caption screen appearance to suit your preference. You can adjust 7 items: "Caption Size", "Font Style", "Foreground Color", "Foreground Opacity", "Background Color", "Background Opacity" and "Character Edge".

Example:

Selectable items available for "Font Style".

Default: The font specified by broadcasting station default font.

Type 0: Proportional font used in the MENU screen

Type 1: Monospaced with serifs.

Type 2: Proportionally spaced with serifs.

Type 3: Monospaced without serifs.

Type 4: Proportionally spaced without serifs.

Type 5: Casual font type.

Type 6: Cursive font type.

Type 7: Small capitals.

NOTE

- For resetting adjustments to the factory preset value, press ▲/▼ to select "Reset", and then press **ENTE**.
 - The default value depends on the broadcasting station.
-





