


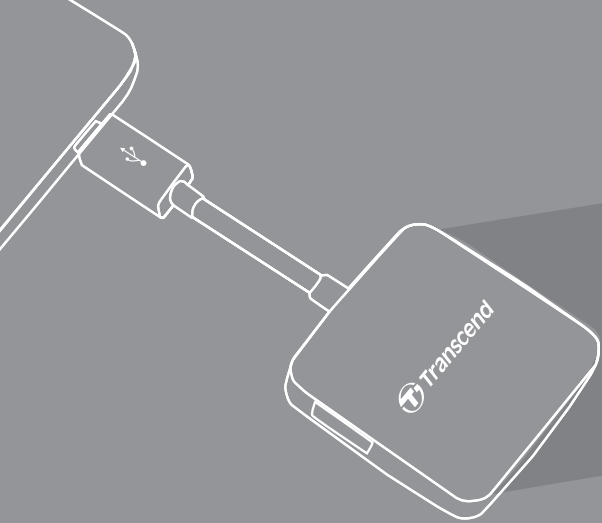

Transcend Elite App Download



\* For Android version 4.0 or later.  
\* This product is not supported on Windows phones.

## RDP9 Compatibility list

| Compatibility |                            | Compatible with conditions |                            | Incompatibility |                              |
|---------------|----------------------------|----------------------------|----------------------------|-----------------|------------------------------|
| Acer          | ICONIA A1-810              | ASUS                       | MeMO Pad ME301T            | Acer            | Tablet Iconia B1-A71         |
|               | ICONIA W3-810              |                            | PadFone Infinity           | ASUS            | PadFone 2                    |
| Samsung       | Galaxy Tab 3 8.0 (SM-T310) | HTC                        | MeMO Pad ME172V            | Google          | Nexus 7                      |
|               | Galaxy Tab PRO 10.1        |                            | One M8                     | G-PLUS          | X805                         |
|               | Galaxy S5 (SM-G900I)       |                            | Desire 600 (606h)          | HTC             | Butterfly J                  |
|               | Galaxy Note Pro 12.2       | HUAWEI                     | One (802W) CHINA 3G        |                 | HONOR 3C (H30-T10)           |
|               | Galaxy Note 3              |                            | Butterfly S                | Samsung         | Galaxy Ace 3 (GT-S7270)      |
|               | GALAXY Note 10.1           | LG                         | MEDIAPAD 7 LITE            |                 | Galaxy Core                  |
|               | Galaxy S4 (I9500/I9505)    |                            | OPTIMUS G PRO              |                 | Galaxy Grand 2 (SM-G7102)    |
|               | Galaxy Mega 6.3 (GT-I9200) | MSI                        | Optimus G2                 |                 | Galaxy Grand Neo (GT-I9060)  |
|               | Galaxy S4                  |                            | PRIMO 81                   |                 | Galaxy Mega 5.8 (GT-I9152)   |
|               | Galaxy S3                  | Samsung                    | Galaxy S2                  |                 | Galaxy Premier (GT-I9260)    |
|               | Galaxy S4 zoom (SM-C101)   |                            | GALAXY Note 2              |                 | Galaxy Win                   |
|               | Galaxy Tab PRO 8.4         |                            | Galaxy S2 Plus             |                 | Galaxy S4 mini (GT-I9190)    |
|               |                            | SONY                       | Xperia Z1                  | SONY            | Galaxy Tab 7.7 PLUS (SC-01E) |
|               |                            |                            | Xperia VL                  |                 | Galaxy Premier I9260         |
|               |                            |                            | Xperia TX (LT29T)          |                 | Xperia T                     |
|               |                            |                            | XPERIA Tablet Z (SGP311TW) |                 | Xperia Z                     |
|               |                            |                            | Xperia AX                  |                 |                              |
|               |                            |                            | Xperia Acro S              |                 |                              |
|               |                            |                            | Xperia Z Ultra             |                 |                              |
|               |                            |                            |                            |                 |                              |
|               |                            | TCL                        | Y900                       |                 |                              |
|               |                            | XIAOMI                     | Redmi                      |                 |                              |

- Please follow the steps and precautions below to ensure optimum function:
1. Please insert the external storage device into the card reader, and then connect the reader to the smart-phone/tablet.
  2. To change the storage device, please remove the card reader first; change the storage device and then reconnect the card reader to the smartphone/tablet.
  3. The reader does not support simultaneous insertion of two cards.
  4. When data transfer is in progress, please do not remove other storage devices on the reader.