

## TelPal Headset



 
## FEATURE

 
- Highly clear communication, microphone anti-noise
- Headset comfortable & durable
- Convenient & useful headset bracket
- DTMF/FSK dual system, auto detection
- Headset volume switch
- Ringer volume Hi/Low/Off adjustable
- AC/DC Power not need
- Microphone work or not work adjustable, microphone indicator
- Incoming call auto-answer(need manual hang up)
- Flash time 100/600ms adjustable
- 30 items 16-digit incoming call records
- 5 items 16-digit outgoing calls records
- 1 group 32-digit auto IP code
- 2-digit PCODE
- 5 local code, filter incoming calls
- 32-digit pre-dialing and correct
- 16-digit LCD display and brightness adjustable
- Redial, call back
- Incoming call ringer, backlight when using

# Packing sheet

- v500 telephone 1pc
- Headset bracket 1pc
- For500 headset 1pc
- Headset spare foam 2pcs
- Line cord 1pc

## Headset usage

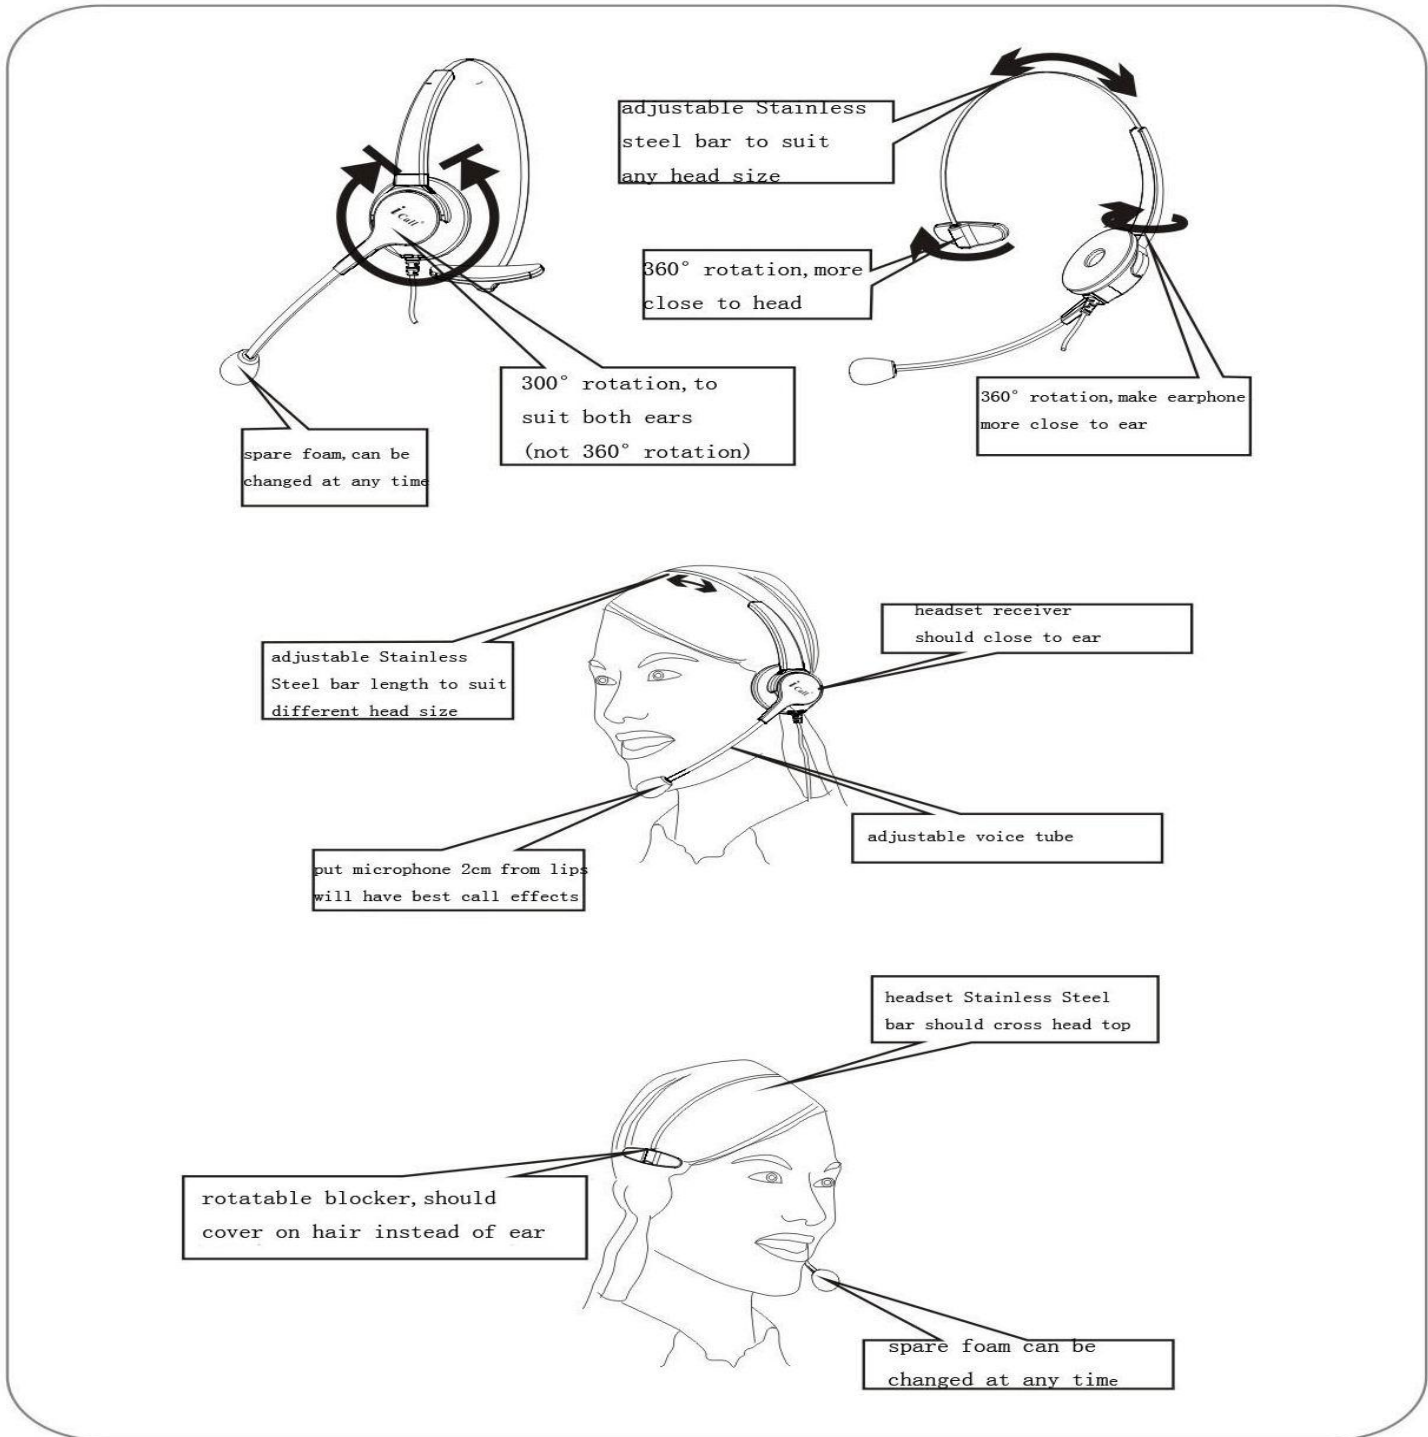

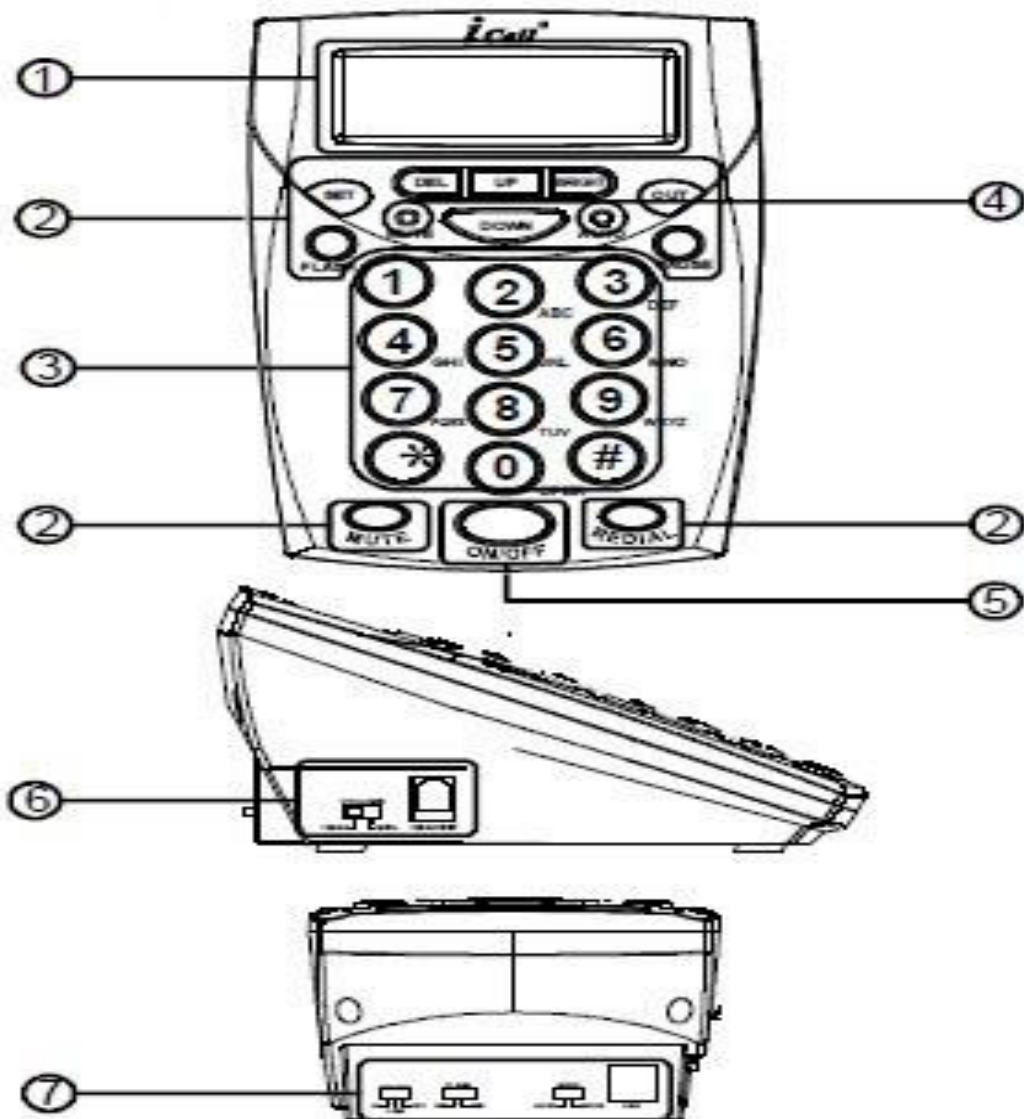

**Key function**

①, LCD screen

LCD screen will show default date after connecting line cord: LCD screen shows call numbers when there is incoming call: LCD screen shows talk time when off-hook.

NEW: means there is unanswered new call or un-reviewed call when blinking.

REP: means it's a repeat call when it shows at call records checking.

②, Function keys

[SET] setting, can enter most functions setting by pressing this key.

[DELETE] delete incoming call numbers or outgoing call numbers, or exit present setting

[UP] page up

[DOWN] page down

[BRIGHT] LCD screen brightness adjust, LCD displays the corresponding variety of bright simultaneity when pressing this key.

[PAUSE] call number will be dialed out after 3.6 seconds by pressing this key before dialing, to suit voice navigation system.

[OUT] check recently dialed numbers

[REDIAL] redial lately dialed numbers at off-hook state by pressing this key; redial LCD screen show numbers at on-hook state by pressing this key.

[FLASH] to transfer calls or to make three way conference, has 100/600ms flash time to suit different PABX system.

[MUTE] microphone will stop working by pressing this button at phone conversation, indicator light will light up; press this key once more will recover microphone.

③, Number keys

④, LED indicator lights

MUTE: microphone not working indicator

AUTO: auto off-hook state indicator

⑤, [ON/OFF] off/on hook key

⑥, Headset socket/headset volume switch

HEADSET: headset socket, connect headset connector

VOLUME: headset volume switch, +MAX: increase volume; MIN: decrease volume

⑦, Telephone line socket/RINGER/FLASH/MODE

LINE: connect telephone line cord

FLASH: flash time switch, 100/600ms switchable

RINGER: ringer volume switch. HI: loud ringer; LOW: low ringer; OFF: ringer off, only headset can hear the ringer

MODE: incoming call answering mode. MOVE: manual answering mode needs to press [ON/OFF] to answer or hand up the phone; AUTO: auto answering calls mode, telephone without ringing (needs somebody on watch, has not auto on-hook function)

## **OPERATION**

### ● SET DATE/TIME

Press "SET" button, the LCD displays setting items, then press UP or DOWN button for selecting corresponding items. During this course, press DELETE key to return to frontal menu. The LCD will display the week and calendar according to setting of the time and date. The time will be renewed when the FSK signal comes in, but DTMF won't.

### ● SET LOCAL CODE

Press [SET] button and then press [UP], LCD display "SET 2 CODE", press [SET] to enter, LCD displays

“CODE---”,press [SET] to enter setting, first“-”blinks(code number will show if local code was set, first local code number blinks).Press [UP] or [DOWN] to select the numbers from 0-9.Press [SET] to enter 2<sup>nd</sup> local code number setting after first local code number set, the rest can be done in the same manner. Press [DEL] button to save setting and exit setting

- SET PCODE

Press [SET] button and then press [UP] twice, LCD display “SET 3 PCODE”, press [SET] to enter setting,LCD displays “PCODE---”, first“-”blinks(PCODE number will show if PCODE were set, first Pcode number blinks).Press [UP] or [DOWN] to select the numbers from 0-9.After PCODE set, press [DEL] button to save setting and exit.

- SET AUTO IP

Press [SET] button and then press [UP] 3 times, LCD display “SET 4 AUTO IP”, press [SET] to enter setting, LCD displays “AUTO IP OFF” and “off” blinks. Press [UP] or [DOWN] to set auto IP ON or OFF. Select “AUTO IP ON”, press [SET] to confirm,LCD displays “INPUTCODE”,enter special service number/card number/pass word according to different telecom company IP service, press [DEL] to delete wrong digitals, press [SET] button to save setting and exit.

When auto IP number was set, telephone will auto adding the IP number when pre-dialing on on-hook state if the dial numbers are start with “0”,or telephone will auto adding AUTO IP number when redial any incoming call numbers or outgoing numbers which is start with “0”.

- DIAL MODE PAULSE/TONE SWITCH

Press [SET] button and then press [UP] 4 times, LCD display “SET 5 P-T”, press [SET] to enter setting,LCD displays “TONE” and blinks. Press [UP] or [DOWN] to set PAULSE/TONE dialing mode. Press [SET] to confirm setting and press [DEL] button to exit.

- CALLS RECEIVING

After receiving the FSK or DTMF calls, the device will detect it and display the call number and the time, date. Will on record how many calls are come in. If in the FSK mode, the time and date will be updated when receive the FSK signals, but the year will be the same. When in the mode of DTMF, all settings will keep the same, because of the DTMF signals only including the phone number but without date and time. The system will use the present time and date for the new calls when receive the DTMF signals; the sequence number of the calls also will be displayed. If it’s a new call, it will display “NEW” above the number. If the number came in before, it will have additional “REPEAT” above the number. It will display  if the number is secret number, will display  if the number is outside the scale, will display  if the number is not recognizable. Telephone will show new in-come call numbers and calling time till the call was answered or review by pressing [UP] or [DOWN] button.

- CHECKING THE INCOMING PHONE NUMBER

Press [UP][DOWN] to enter and for up page and down page to check incoming call numbers, time and date. Quick checking can be entered by pressing [UP] or [DOWN] for more than 3 seconds

- INCOMING CALL REDIAL

Press [REDIAL] key will redial the checking incoming calls, telephone will auto adding“0” and redial long

distance calls when pressing [REDIAL] button.

- **CHECKING THE OUTGOING CALL NUMBER**

Press [OUT] to enter and press [UP] or [DOWN] for up page and down page to check outgoing call numbers, time and date. Quick checking can be entered by pressing [UP] or [DOWN] for more than 3 seconds. Press [REDIAL] to redial the checking outgoing numbers.

- **ON-HOOK PRE DIAL**

Press any desired numbers on on-hook state, press [DEL] to correct wrong digital, press [REDIAL] button after dialing finish.

- **[DEL] KEY**

When set IP NUMBER presses DEL to delete the wrong digital.

When review incoming or outgoing calls, press DEL to delete the telephone number; keep pressing for 3 seconds, to delete all of the numbers.

Press DEL to exit.

- **AUTO IP FUNCTION**

When auto IP state ON and IP was set, telephone will auto adding IP number when pre-dialing on on-hook state, or at redialing incoming or outgoing calls, which is start with "0".

- **PCODE FUNCTION**

When PCODE set, telephone will auto adding PCODE number on pre-dialing or redialing incoming calls when number is more than 6 digitals, outgoing calls will not. Telephone will dial PCODE firstly and then auto IP code when auto IP code added, telephone will auto pause 1 second to suit any PABX when dialing.