

BUYDEEM

DT-6B83

4-SLICE TOASTER

INSTRUCTION MANUAL




BUYDEEM

Shenzhen Buydeem Technology Co., Ltd

8/F, Block A7, Nanshan I Park, 1001 Xueyuan Road, Taoyuan Street,
Nanshan District, Shenzhen City, China.

DT-6B83-90-A1

Please refer to the real product in case of any minor changes.

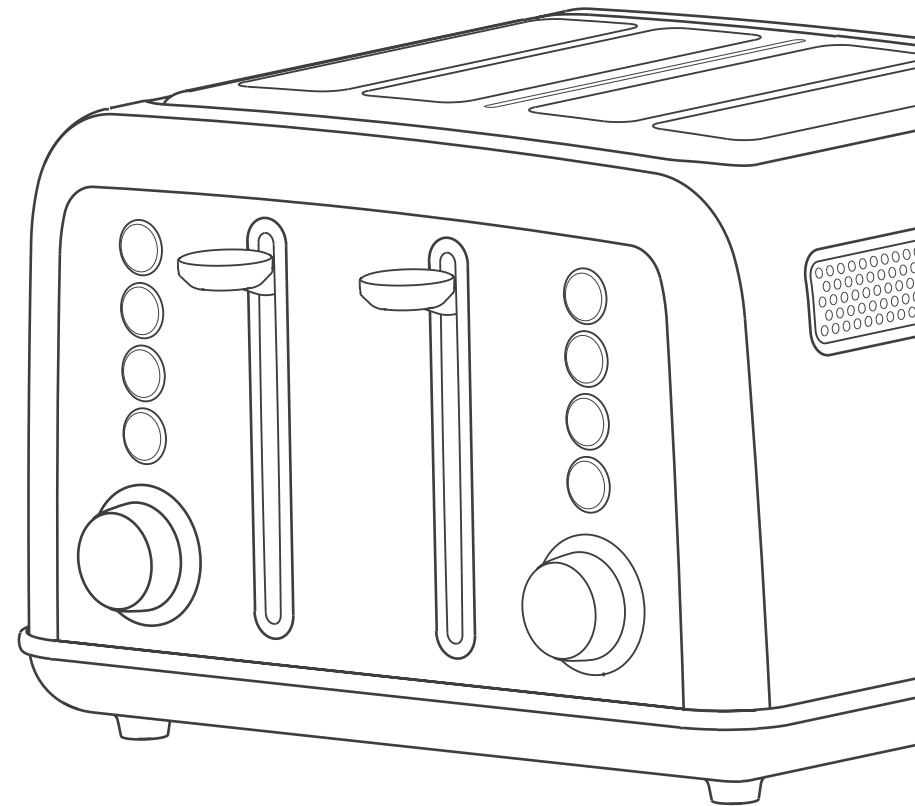

Thank you for purchasing BUYDEEM product. For your safety and continued enjoyment of this product, always read the instruction manual carefully before using.

TABLE OF CONTENTS:

Important safeguards	02~03
Features and Benefits	04~05
Use and Care	06~09
Cleaning and Maintenance	10~12
Warranty	13

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. Read all instructions.
2. **Always unplug from outlet when not in use and before cleaning. Allow to cool before cleaning or handling.**
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electrical shock, do not place any part of the toaster in water or other liquids. See instructions for cleaning.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return the toaster to the store or retailer where purchased for examination or repair.
7. The use of accessory attachments not recommended by BUYDEEM may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for other than its intended use.
12. Oversized foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
13. A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies or walls, when in operation.
14. Do not attempt to dislodge food when the toaster is plugged into electrical outlet.
15. To avoid possibility of fire, do not leave toaster unattended during use.
16. To disconnect, push the Cancel button, then remove plug from wall.
17. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
18. When heating toaster pastries, always use the lightest toast color setting.

IMPORTANT SAFEGUARDS

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

FEATURES AND BENEFITS

1. **Toasting slots**

Toaster slots toast a variety of items.

2. **Cancel Button**

Interrupts toasting process.

3. **Extra-Lift Carriage Control Lever**

Brings the toast close to the top of the toaster, making it easy to remove the smallest items.

4. **Bagel / Muffin Button**

Reduces heat on uncut side of bagel.

LED lights when selected.

5. **Reheat Button**

Reheats without browning or toasting.

LED lights when selected.

6. **Defrost Button**

Defrosts and toasts frozen bread.

LED lights when selected.

7. **Browning Control**

Slide lever sets selected shade. 7 browning levels toast from light to dark.


8. **Slide-out Crumb Tray (not shown)**

Pulls out to clean crumbs that collect in bottom of toaster.

9. **Cord Storage (not shown)**

Takes up excess cord and keeps countertop neat.

FEATURES AND BENEFITS

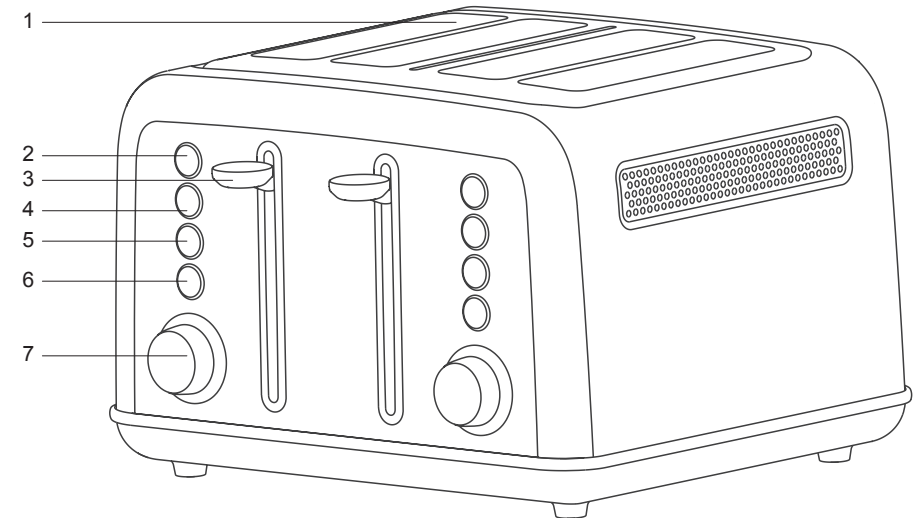

USE AND CARE

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slots. Plug power cord into the wall outlet. Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slots. Plug power cord into the wall outlet.

1. Insert Slice(s) of Bread

Be sure that the carriage is in the up position.

2. Set the Browning Control

Slide lever to the desired position:

Lever Setting	Color
1–2	light
3–5	medium
6–7	dark

3. To Begin Toasting

Press the carriage control lever until it locks into the down position.

NOTE:The Cancel button will illuminate with a white light when the toaster is in operation.

To Stop Cycle

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the Cancel button. After use, unplug the toaster from the electrical outlet.

Some Notes on Browning:

Toasting is a combination of cooking and drying of the bread. Therefore, differences in moisture level from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole-wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher toast setting.
- Thickly cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur.

Very thick pieces may require two cycles.

USE AND CARE

- When toasting raisin or other fruit breads, remove any loose raisins, etc., from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slot.

- Before toasting bagels, slice each bagel into two equal halves.

• Single slice toasting:

If you are toasting a single slice of bread, place the bread in the middle two slots and set the heat selector to a lighter setting than you normally would. The toaster is designed to heat the whole toasting chamber for four slices. By lowering the heat for a single slice, you won't over-toast.

• Frozen Waffles, Pancakes, French Toast and Frozen Bagels:

These items should be warmed before toasting, using the Defrost function. Select your preferred browning shade. Press carriage lever and then select Defrost. For example, when toasting a frozen bagel, select the browning level, press carriage lever, then Bagel button and Defrost. White Bagel and Defrost lights indicate these features are active.

• Toaster Pastries:

Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

Bagel/Muffin Button

The **Bagel feature** just toasts the cut side of bagel, no toasting on other side.

1. Insert slice(s) of bread or halved bagels.

Be sure that carriage is in the up position.

2. Set the Browning control.

3. Press Bagel/Muffin button. White LED indicates bagel feature is activated.

4. Press the carriage control lever until it locks into position.

The **Muffin feature** will heat on both side of the toasting slot for English muffin.

1. Insert slice(s) of English muffin.

Be sure that carriage is in the up position.

USE AND CARE

2. Set the Browning control.

3. Press Bagel/Muffin button for two second. Red LED indicates Muffin feature is activated.

4. Press the carriage control lever until it locks into position.

To Stop Cycle:

When the cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simple press the Cancel button to interrupt. After use, unplug your toaster from the electrical outlet.

Defrost Button

The Defrost button is designed to first defrost and then toast the bread, which extends the toasting cycle slightly.

1. Insert slice(s) of bread.

Be sure that the carriage lever is in the up position.

2. Set the Browning control.

3. Press the carriage control lever until it locks into position.

4. Press the Defrost button. White LED indicates feature is activated.

To Stop Cycle:

When the defrost cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt. After use, unplug the toaster from the electrical outlet.

Reheat Button

The reheat feature allows you to reheat bread without browning or toasting.

1. Insert slice(s) of bread.

Be sure that the carriage lever is in the up position.

2. Press the carriage control lever until it locks into position.

USE AND CARE

3. Press the Reheat button. White LED indicates feature is activated.

To Stop Cycle:

When the defrost cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt. After use, unplug the toaster from the electrical outlet.

Tips:

- Never force foods into the toasting slot. Foods should fit freely between the guide wires.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to bread slices of uneven thickness.
- After use, unplug your toaster from the electrical outlet.

CLEANING AND MAINTENANCE

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean, damp cloth and dry thoroughly. Apply any cleansing agent to a cloth, not to the toaster, before cleaning.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.
6. Any other servicing should be performed by an authorized service representative.

CLEANING AND MAINTENANCE

LIMITED 1 YEAR WARRANTY (U.S. and CANADA only)

This limited warranty is available to consumers only. You are a consumer if you own a BUYDEEM 4-Slice Toaster which was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Buydeem 4-Slice Toaster will be free of defects in materials and workmanship under normal home use for two years from the original date of purchase.

If your toaster should prove to be defective within the warranty period, we will, at our option, repair or replace it at our option, without charge to you. To obtain warranty service, simply send the email Support-US@Buydeem.com for additional information from our Customer Service Representatives.

CLEANING AND MAINTENANCE

BEFORE RETURNING YOUR BUYDEEM PRODUCT

If you are experiencing problems with your BUDEEM product, we suggest that you email to Support-US@buydeem.com before returning the product for servicing. Often, our Consumer Service Representatives can help solve the problem without having the product serviced. If servicing is needed, the representative can confirm whether the product is under warranty and direct you to the nearest service location or return back to the retailers.

Your BUYDEEM 4-Slice Toaster has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by BUYDEEM. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

WARRANTY

Warranty card

BUYDEEM

Dear Customer,

Thank you so much for your purchase! The product comes with a ONE-YEAR warranty.

Should you ever need one, please have the following information handy when contacting us:

Product Model No.: _____ **Product Name:** _____

Factory Serial No.: _____ **Purchase Date:** _____

Customer Name: _____ **Customer Phone:** _____

Please feel free to email us if you have any questions or concerns.

Customer service email: support-US@buydeem.com