

How To Use It:

Make sure dryer is on a hard, level surface. Plug the unit into a standard electrical outlet, and make sure the drain hose is pointing into a sink or other receptacle. The machine should be at least 2" away from any wall.

Place clothes (up to 2.2 lbs.) into the drum making sure that the load is balanced, and not overloaded. Insert the safety lid on top of the clothes, and inside the inner tub, then close the outer lid securely. Always use to contain clothes and prevent them from leaving the drum, which can potentially damage the machine.

Select the spin time by turning the knob on the front clockwise. Release the knob to start spinning.

Once the cycle has completed, open the lid and remove the clothes. 2-3 minutes is normally sufficient.

Opening the lid while running will cause it to pause. Close the lid to resume operation.

Unplug when not in use.

Product Specifications

Includes: Mini Countertop Spin Dryer
Dimensions 13.5" x 13.5" x 15"
Color white & blue

Capacity 2.2 lbs
3-4 dress shirts or
5 T-shirts or
15 pairs of socks or
1-2 pairs of blue jeans
Drainage Hose Yes
Spin Speed 1700 rpm
Power 110V, uses 60W

Great for small loads, camping, travel, delicates and hand washables
Drying time 2-3 minutes