


## FAQs

- How can I connect my mono microphone XLR output to a stereo TRS socket? -
  - To connect the XLR microphone output to a TRS stereo input (3.5mm socket) you will need to buy or make a XLR to stereo TRS cable, to make the cable please follow the instructions in the picture below. This cable will allow connection between the microphone and a camcorder or DSLR camera.

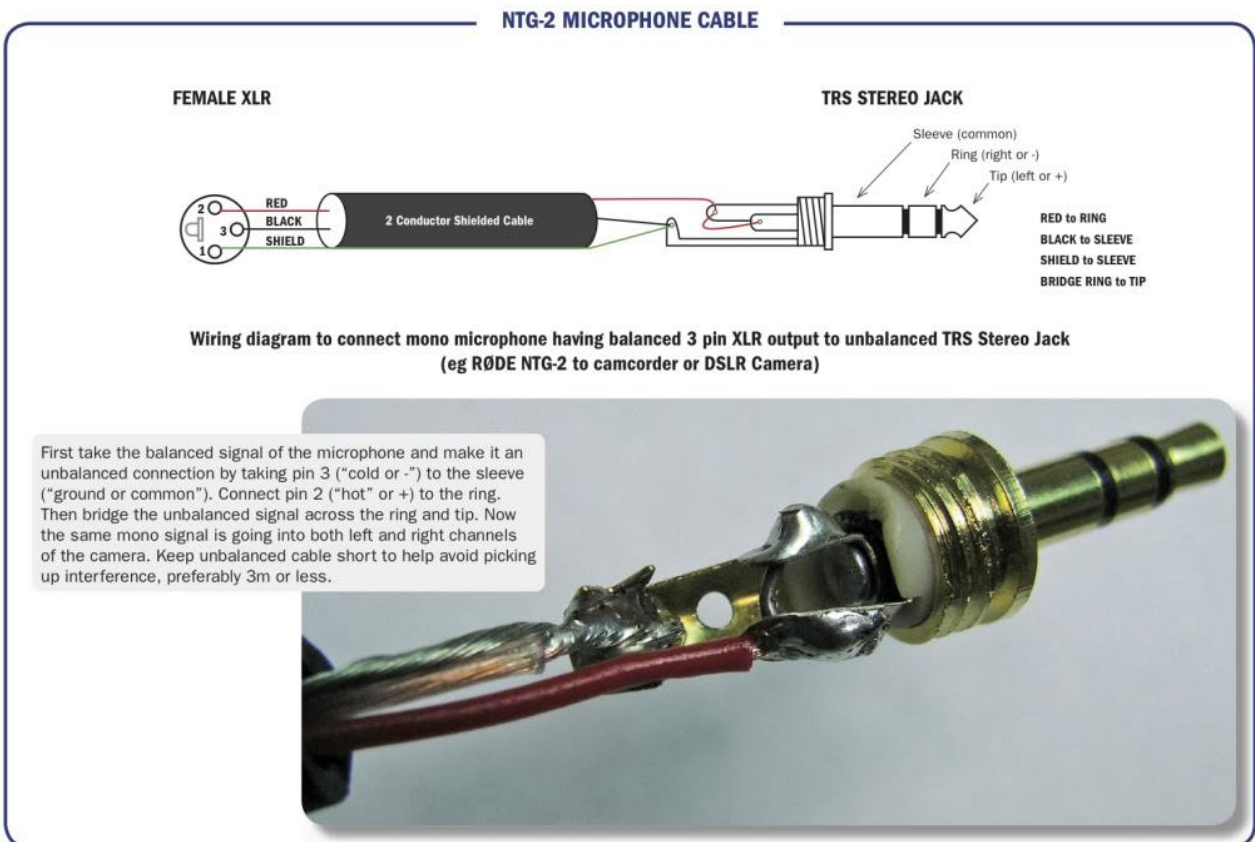

- This cable will allow you to connect your microphone output to a stereo TRS input and receive the audio signal on both the input channels.

- **Please Note:** *Should the microphone require phantom power to operate, this will not be available from a TRS socket.*

🔗 I am having problems using 1.2V NiMH rechargeable batteries with a NTG-2 microphone?-

- There can be power issues when trying to run the NTG-2 from 1.2V batteries, this usually sounds like popping in the audio signal. Our specifications state that the NTG-2 requires 1.5V batteries to correctly power the microphone.