

Specifications

Weight Capacity	300 lb
Height Range	15" to 20"

Important Safety Information

Assembly Precautions

- Assemble only according to these instructions. Improper assembly can create hazards.
- Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
- Keep assembly area clean and well lit.
- Keep bystanders out of the area during assembly.
- Do not assemble when tired or when under the influence of alcohol, drugs, or medication.
- Weight capacity and other product capabilities apply to properly and completely assembled product only.
- When servicing, use only identical replacement parts. Use of any other parts will void the warranty. Only use accessories intended for use with this tool. Approved accessories are available from Harbor Freight Tools.
- Do not expose to heat. Parts of this product are under pressure.
- Once assembled, do not attempt to take this product apart.

Use Precautions

- This product is not a toy. Do not allow children to play with or near this item.
- Use as intended only.
- Inspect before every use; do not use if parts are loose or damaged.
- Do not exceed listed weight capacity. **Be aware of dynamic loading!** Sudden load movement may briefly create excess load causing product failure.
- Maintain product labels and nameplates. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
- Always hold onto seat as you sit down to keep the seat from rolling or tipping.
- To lower seat, sit on the Stool and pull up on the handle until you have lowered the seat to the desired height. To raise seat, stand next to the Stool and pull up on the handle. Release handle when seat has risen to the desired height.

Assembly Instructions




Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this document including all text under subheadings therein before set up or use of this product.

- Place the Tool Tray (E) on a flat level surface.
- Insert the large end of the Lifting Pole (D) into the round opening in the center of the Tool Tray.
- Place the Seat assembly (A) over the top end of the Lifting Pole (D).
- Once the seat is assembled, press down in a controlled, firm manner on the cushion to press the parts together. Make sure seat is properly and firmly assembled before use.

Parts List and Diagram

Part	Description	Qty.
A	Seat Cushion	1
B	Supporting Plate	1
C	Hub	1
D	Lifting Pole	1
E	Tool Tray	1
F	2-1/2" Wheel	5
G	Handle	1
H	Truss Head Bolt M6x20	4
I	Cap Nut M8	5
J	Spring Washer 8	5
K	Lock Pin 3x18	1

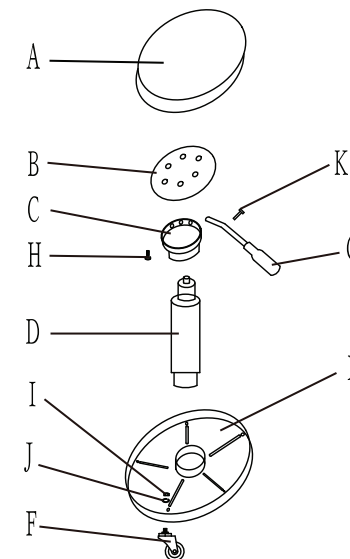

Record Serial Number Here:

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts.

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS DOCUMENT AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.