 
 


Changing the Roller Sticker


1. Push in the black roller cover to release the roller shaft.

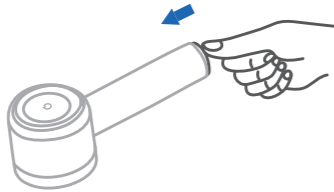


2. Pull out the roller shaft.

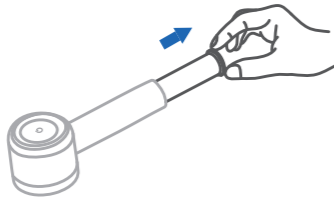


3. Remove the black roller cover from the roller shaft and remove the empty sticker cartridge.

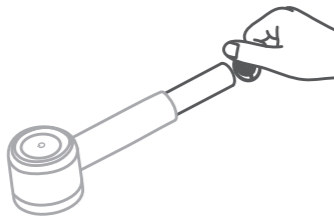

4. Place a new sticker roll onto the roller shaft.

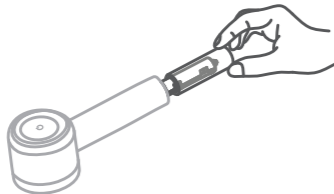

5. Push the roller shaft back in and replace the black roller cover.

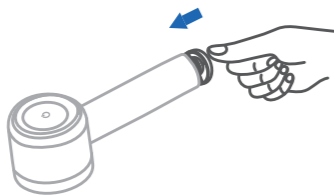

Troubleshooting

Why has the shaver stopped working?

- Make sure that the blade cover is installed correctly.
- Make sure the shaver is charged.
- Check to see if the blade is jammed.
- Contact **Customer Support** for further assistance.

Why is the shaver not removing lint as well as it did before?

- Make sure that the blade cover is installed correctly.
- Make sure the shaver is charged.
- Check to see if you need to clean the inside of the shaver.
- Check to see if the blades are dull. If it is, replace with a new blade assembly.

Warranty Information



Etekcitec warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period. Warranty lengths may vary between product categories.

 
Customer Support

If you encounter any issues or have any questions regarding your new product, please contact our helpful Customer Support Team. Your satisfaction is our goal!

Etekcitec Corporation
1202 N Miller St., Suite A
Anaheim, CA 92806

Toll Free: (855) 686-3835
Email: support@etekcity.com
Support Hours: Mon-Fri, 9:00 am-5:00 pm PST/PDT

*Please have your order confirmation number ready before contacting Customer Support.

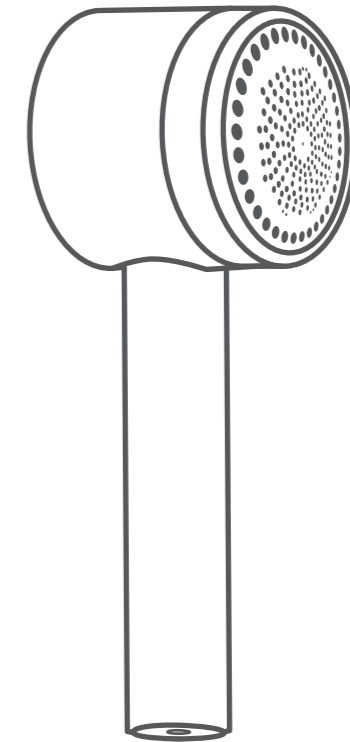

Electric Fabric Shaver and Lint Roller

Model No.: EFS-21

Questions or Concerns?
support@etekcity.com • (855) 686-3835

Thank you for purchasing the **EFS-21 Electric Fabric Shaver and Lint Roller** by Etekcity.

If you have any questions or concerns, please reach out to our helpful Customer Support Team at support@etekcity.com. We hope you enjoy your new fabric shaver!

BECOME AN ETEKCITIZEN

Get exclusive deals, giveaways, and product registration. Better products for better living. Find us here: etekcity.com

Package Contents

- 1 x Electric Fabric Shaver and Lint Roller
- 1 x Charging Cable
- 1 x User Manual
- 1 x Cleaning Brush
- 9 x Sticker Rolls (1 Pre-Installed)


Specifications

Rated Voltage	3.7V
Rated Power	3W
Charger Input	5.0V, ≤300mA
Product Dimensions	192 x 70 x 75 mm

Features


- Extra large 2.75-inch shaving surface
- Stainless steel precision blades
- Portable 2-in-1 design

Function Diagram

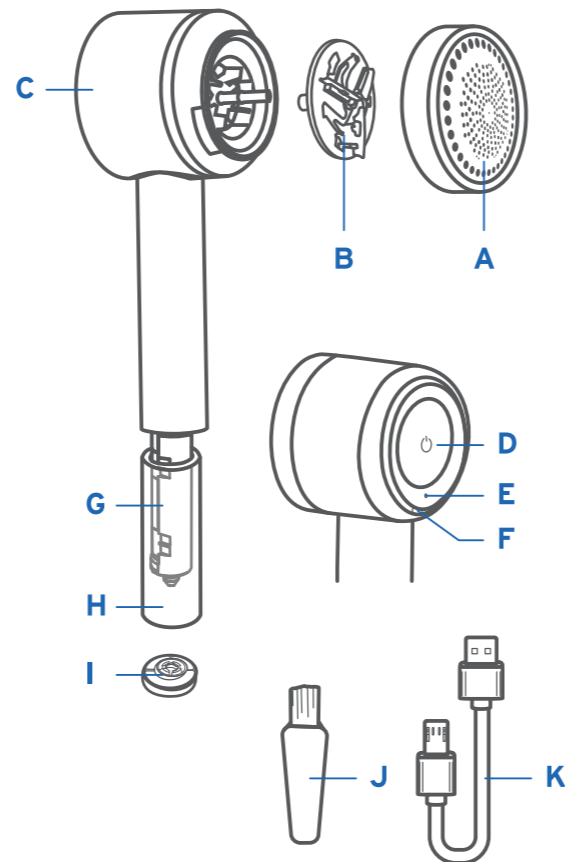

- A.** Blade Cover
- B.** S/S Blade
- C.** Housing
- D.** Power Button
- E.** Power Indicator Light
- F.** Charging Port
- G.** Roller Shaft
- H.** Sticker Roll
- I.** Roller Cover
- J.** Cleaning Brush
- K.** Charging Cable

Removing Lint

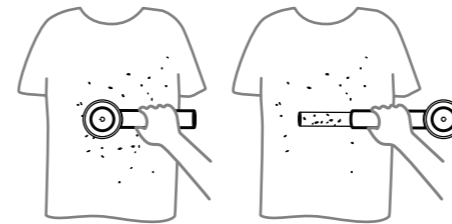

1. Lay the cloth on a flat surface.
2. Press the power button to turn on the shaver, or push in the black roller cover to release the roller.
3. Gently move the shaver or roller back and forth over the cloth until lint is removed.

Changing the Blade



1. Twist the blade cover to remove it.
2. Remove the old blade assembly.



3. Install the new blade assembly.
4. Reattach the blade cover.

Cleaning the Shaver



1. Twist off to remove the blade cover.
2. Remove the blade assembly.



3. Use the brush to clean the blades and empty out the lint inside the shaver.
4. Reattach the blade cover.

Note: To clean the body of the shaver, wipe with a damp cloth. **Do not** immerse or rinse with water.

Charging the Shaver

1. Plug the cable into the shaver's charging port.
2. Plug the charging cable into a powered USB outlet, adapter, or charging pack.

IMPORTANT: The tip of this charging cable is unique to this product. *[Figure 1.1]* Please do not lose this cable. If it becomes lost, please contact Customer Support for a replacement.

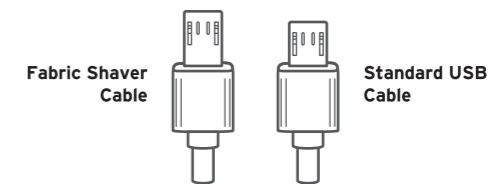


Figure 1.1