

SERVICE INSTRUCTIONS

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the Warranty.
2. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed Warranty.
3. If you have any questions or comments regarding this unit's operation or believe any repair is necessary, please call our Consumer Service Department at 1-800-323-9519 or visit our website at www.crockpot.com.

1 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-323-9519 and a convenient service center address will be provided to you.

In Canada

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1-800-323-9519 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

To register your product, please visit us online at www.crockpot.com.

© 2016 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431. Sunbeam Products, Inc. is a subsidiary of Newell Brands Inc. (NYSE: NWL).

Printed in China
122379 Rev A_16EM1

122379 Rev A
GCDS-CRP49066-JC

CROCK·POT®

◆ THE ORIGINAL SLOW COOKER ◆

Little Dipper® Warmer

Owner's Guide

Read and Keep These Instructions

www.crockpot.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt

to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.

8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. The heating base is subject to residual heat from cooking cycle. Do not touch heating base immediately after removing stoneware. Allow to cool before handling.
14. Use caution when opening the lid during or after a cooking cycle. Escaping steam can cause burns.
15. Do not use appliance for other than intended use. Misuse can cause injuries.
16. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
17. Avoid sudden temperature changes, such as adding refrigerated foods or cold liquids into a heated pot.


18. The slow cooker lid is made of tempered glass. Always inspect the lid for chips, cracks or any other damage. Do not use the glass lid if it is damaged, as it may shatter during use.
19. **CAUTION:** To protect against electrical shock and product damage, do not cook directly in the heating base. Cook only in the stoneware provided.
20. **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.

For appliances with locking lids:

21. Never attempt to lift or carry this appliance by the lid handle. Always use the handles located at each side on the base of the appliance.
22. Do not lock the lid while cooking. Locking the glass lid while cooking may lead to glass breakage, which can cause injuries.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

NORTH AMERICAN MODELS WITH POLARIZED PLUGS:

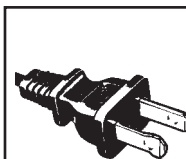

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

POWER CORD INSTRUCTIONS:

A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.

NOTICES:

1. Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your slow cooker to prevent possible damage to the surface.
2. During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.
3. Please use caution when placing your stoneware on a ceramic or smooth glass cook top stove, countertop, table or other surface. Due to the nature of the stoneware, its rough bottom may scratch some surfaces if caution is not used. Always place heat resistant protective padding under the stoneware before setting on a table, countertop or other surface.

HOW TO USE YOUR LITTLE DIPPER® WARMER

Before you use your Little Dipper® Warmer, remove all packaging components and wash the lid stoneware with warm soapy water and dry thoroughly. Never submerge unit in water and always unplug before cleaning. The Little Dipper® Warmer is designed for heating and holding your favorite dip or fondue at the perfect serving temperature.

NOTE: The unit is not designed for use with uncooked meats. If a recipe calls for bacon, ground beef or chicken, it should be fully cooked before combining with other ingredients and heating it in the unit.

1. Fill stoneware bowl with desired dip and cover. The capacity of the stoneware bowl is 1 to 1 ½ cups. Do not overfill stoneware.
2. Heat about 30 to 60 minutes or until dip is hot or completely melted. Stir dip occasionally while melting or heating.
3. Remove cover for serving. The dip will at the perfect serving temperature for 3 to 4 hours.

USAGE NOTES:

- If there is a power outage and you are unaware of how long the power was out, we suggest you discard the food.
- Unplug when heating is done and before cleaning.
- This unit is not ovenproof or microwave safe.
- Always wear oven mitts when handling the unit.

HOW TO CLEAN YOUR LITTLE DIPPER® WARMER

- ALWAYS unplug your Little Dipper® Warmer and allow it to cool before cleaning. **CAUTION:** Never submerge the unit in water or other liquid.
- After emptying, fill with warm soapy water to loosen food remains. Do not use abrasive cleaners a cloth, sponge or rubber spatula will usually remove any residue. To remove any water spots or other stains, use a non-abrasive cleaner or vinegar.
- The outside of the unit may be cleaned with a soft cloth and warm soapy water. Wipe dry. Do not use abrasive cleaners.
- No other servicing should be performed.
- This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

-6-

RECIPES

CREAMY SPINACH DIP

1 8-ounce package cream cheese, cubed	½ of a 10-ounce box frozen chopped spinach, thawed and drained
2 tablespoons grated Parmesan cheese	2 tablespoons diced pimiento
2 teaspoons of finely chopped onion	1 teaspoon Worcestershire sauce
½ teaspoon thyme	¼ teaspoon garlic salt
¼ cup of whipping cream	

Combine cream cheese and whipping cream in greased Little Dipper® Warmer. Cover and heat until cheese is melted, 30 to 60 minutes. Add remaining ingredients. Cover and heat for 30 minutes. Serve with raw vegetables, crackers or bread pieces.

HEARTY BEEF DIP

1 8-ounce package cream cheese, cubed	¼ cup chopped pecans
¼ cup of milk	2 tablespoons chopped green onion
½ of a 2½ ounce package sliced dried beef, diced	1 clove garlic, minced

Combine the above ingredients in order, as they are listed above in greased Little Dipper® Warmer. Cover and heat until cheese is melted, 30 to 60 minutes. Serve with raw vegetables, crackers or bread pieces.

CHOCOLATE DESSERT FONDUE

1 teaspoon butter or margarine	6 1-ounce chocolate candy bars with almonds, broken
1 cup miniature marshmallows	2 tablespoons milk
½ cup whipping cream	

Rub stoneware with butter. Place candy bars, marshmallows and milk in the Little Dipper® Warmer. Cover and heat, stirring every 15 minutes until melted and smooth. Gradually add whipping cream. Cover and continue heating for 30 minutes. Serve with bite-sized pieces of pound cake, marshmallows or fruit.

FIESTA DIP

½ of a 16-ounce can of refried beans	½ cup (2 ounces) shredded Cheddar cheese
¼ cup Mexican salsa	½ green chili pepper, chopped (optional)

Combine all ingredients and place in the Little Dipper® Warmer. Cover and heat 30 to 60 minutes or until cheese is melted. Serve with tortilla chips or corn chips.

-7-

RECIPES

HOT ARTICHOKE DIP

1 6-ounce jar marinated artichoke hearts,
drained and chopped
½ cup grated Parmesan cheese

¼ cup sour cream
¼ cup mayonnaise
1 tablespoon diced pimento

Combine all ingredients in the Little Dipper® Warmer. Cover and heat 30 to 60 minutes or until hot. Serve with tortilla chips.

OTHER USES FOR YOUR LITTLE DIPPER® WARMER

- Warm maple syrup for pancakes or waffles.
- Melt chocolate and keep at the perfect temperature for dipping fruit, cookies or pretzels or for molding candies.

NOTES