

KILBURN - PORTABLE ACTIVE STEREO SPEAKER

Marshall

USER MANUAL



Apple TV, Airport Express, iPhone, iPod, iPod Classic, iPod Nano, iPod Shuffle, iPod Touch, iPad and Safari are trademarks of Apple Inc., registered in the U.S. and other countries.

© 2014 CSR plc and its group companies.

The aptX® mark and the aptX logo are trade marks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

Read these instructions – All the safety and operating instructions should be read before this product is operated.

Keep these instructions – The safety and operating instructions should be retained for future reference.

Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.

Follow all instructions – All operating and use instructions should be followed.

WARNING!

WARNING – To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

WARNING – do not cover.

WARNING – only use attachments/accessories specified by the manufacturer (such as the exclusive supply adapter, battery etc).

WARNING – the plug is the main disconnect device and should be used as such. The disconnect device should remain readily accessible.

WARNING – this active loudspeaker may emit high sound pressure levels.

WARNING – do not listen too close to the active loudspeaker.

WARNING – do not listen for an extended period of time at a high sound pressure level.

WARNING – do not attempt to remove the active loudspeaker chassis, there are no user serviceable parts.

WARNING – do not plug a guitar into the Kilburn.

WARNING – do not insert body parts or objects into the bass port for risk of injury.

DANGER – of dropping the product.

DANGER – of sharp corners.

MOISTURE AND HUMIDITY

The active loudspeaker should be located in a place free from moisture and water.

Do not use this apparatus near water. Do not expose it to rain or dripping water. Do not splash water on it.

INSTALLATION

Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

No naked flame sources, such as lit candles, should be placed on the active loudspeaker.

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

CONNECTION

Connect the active loudspeaker according to the instructions in the manual.

Connect the active loudspeaker only to the correct mains voltage as shown on the equipment.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit the apparatus.

Use only power cables of the type specified in the operating instructions or as marked on the active loudspeaker. Do not substitute the separate power cable included with this active loudspeaker with any other power supply – use only the power cable provided by the manufacturer.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Do not install in an area that impedes access to the power plug. Disconnecting the power plug is the only way to completely remove power to the product and the plug must be readily accessible at all times.

CLEANING

- Clean only with dry cloth.

MAINTENANCE

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

The internal battery is user replaceable according to the instructions in this manual. Only use batteries recommended by Zound Industries and intended for the KILBURN active loudspeaker.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing unless you are qualified to do so.

COMPLIANCE MARKS

This product The product complies with the following European directives: the electromagnetic compatibility directive 2014/30/EU. The low voltage directive 2006/95/EC.

 
This equipment is a Class II or a double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

This device complies with Part 15 rules FCC. Operation is subject to two following conditions:

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference may cause undesired operation.

The content of this document is for information purposes only. Zound Industries reserves the right to change information without prior notifications and at any time.

TURN THE KNOB TO ADJUST THE:
VOLUME
BASS
TREBLE

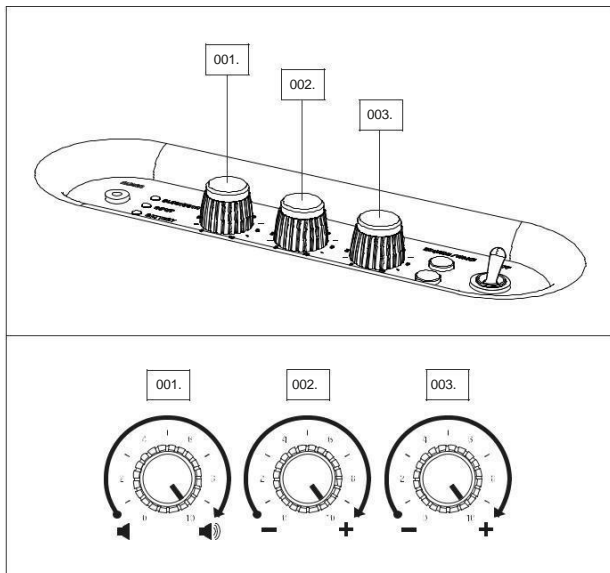

012.

CHARGING THE BATTERY

 
THE KILBURN IS EQUIPPED WITH AN INTERNAL BATTERY SUPPORTING A PLAYING TIME FOR UP TO 20 HOURS AT MID VOLUME. THE BATTERY IS RECHARGEABLE AND CAN BE FULLY CHARGED IN APPROXIMATELY 3 TO 4 HOURS, WHEN COMPLETELY DISCHARGED.

IF THE BATTERY LED STARTS TO FLASH WHEN THE LOUDSPEAKER IS ON BATTERY POWER, THE BATTERY HAS LESS THAN 20% CHARGE LEFT.

PLUG IN THE LOUDSPEAKER TO MAINS POWER AND SET THE POWER

THE BATTERY LED STARTS FLASHING TO INDICATE THAT THE BATTERY IS CHARGING.

WHEN THE BATTERY LED CHANGES TO A FIXED LIGHT, THE KILBURN IS FULLY CHARGED.

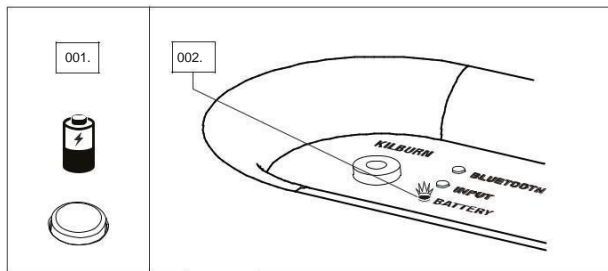

NOTES:

 
- THE POWER SWITCH HAS TO BE SWITCHED ON FOR THE THE DEVICE TO CHARGE. IF THE UNIT IS PLUGGED IN BUT TURNED OFF THEN THE UNIT WILL NOT CHARGE.
- THE LOUDSPEAKER CAN BE USED WHILE CHARGING THE BATTERY.



USING THE KILBURN WITH YOUR DEVICES

THERE ARE TWO WAYS TO CONNECT YOUR PHONE, TABLET, LAPTOP TO YOUR LOUDSPEAKER, WHETHER USING A PHYSICAL CORD OR VIA WIRELESS BLUETOOTH®. BELOW YOU WILL FIND MORE DETAILS ABOUT THE CONNECTION SOURCES, IN TWO CATEGORIES:

WIRELESS CONNECTION VIA BLUETOOTH
CONNECTION VIA THE 3.5MM STEREO PLUG

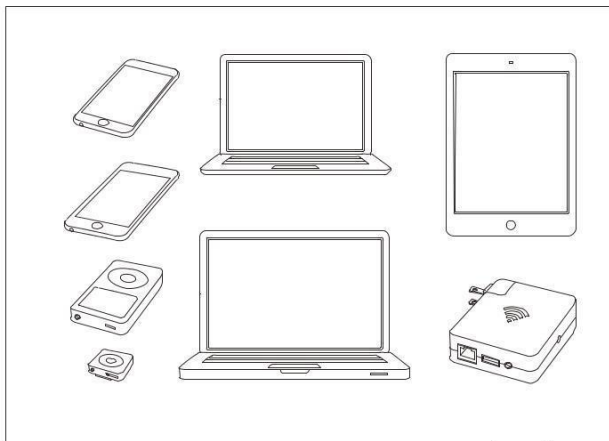

CAUTION: MAKE SURE THAT THE VOLUME IS SET TO LOW ON BOTH THE KILBURN ACTIVE LOUDSPEAKER AND THE MUSIC PLAYER WHEN YOU START PLAYING MUSIC.



TROUBLE SHOOTING

PROBLEM

CAUSE

THE LOUDSPEAKER WILL NOT TURN ON. The internal battery is discharged or the power cord is not plugged into a working wall socket or not plugged into the power socket on the back of the loudspeaker.

THE SOUND IS WEAK OR THERE IS NO SOUND AT ALL.

The 3.5mm cord/input cable/signal cable is not correctly connected to either the loudspeaker or the music player.

The volume level is too low on the loudspeaker.

The volume level is too low on the music player.

THE SOUND IS DISTORTED.

The volume level is too high.

The original sound file (mp3) is of poor quality.

Excessive playback volume.

Too much bass/treble boost.

SHARP CRACKLING/ CLICKING ON STRONG PASSAGES/TRANSIENTS.

Clipping when the amplifier runs out of power.

ERRATIC PERFORMANCE.

Interference from another source or electronic device.

ACTION

Plug the power cord into a working wall socket and plug the connector into the power socket on the back of the loudspeaker to charge the battery.

Unplug and re-plug the 3.5mm cord/input cable/signal cable into both the loudspeaker and the music player.

Turn up the volume on the loudspeaker.

Turn up the volume on the music player.

Turn down the volume.

Try another sound file (mp3) or music player.

Turn down playback level on the volume knob or reduce the sound level on the music player.

Turn down the volume control on the control panel and/or music player. Reduce the bass boost on the control panel or excessive bass boost/eq on the music player.

Turn down the volume on the loudspeaker or on the music player. Reduce the bass boost.

Move the loudspeaker to another spot or turn off or move other electronic devices.

TROUBLE SHOOTING

PROBLEM

CAUSE

BLUETOOTH WILL NOT CONNECT.

The Kilburn is too far away from your device during the pairing process.

BLUETOOTH CONNECTION IS BROKEN OR DISRUPTED.

The Bluetooth connection only works when it is near the device. The connection is automatically broken if the Bluetooth device moves outside of the area. The connection may even be affected due to obstacles such as walls or doors.

THE KILBURN LOUDSPEAKER CANNOT FIND A BLUETOOTH CONNECTION.

The loudspeaker cannot search or connect correctly in the following cases:

- There is a strong electric field surrounding the Kilburn.
- The Bluetooth device is turned off, not available or does not function as it should.
- Please note that items such as, for example, microwave ovens, wireless network adapters, fluorescent lights and gas cookers use the same frequency range as the Bluetooth device, which could lead to electrical disturbances.

THE INTERNAL BATTERY IS NOT CHARGING

The Kilburn is not connected to AC mains power and switched on.

BATTERY IS NOT WORKING/BATTERY LIFE HAS DECLINED

The internal battery is broken or worn out and needs to be replaced.