




BATTERY COMPARTMENT

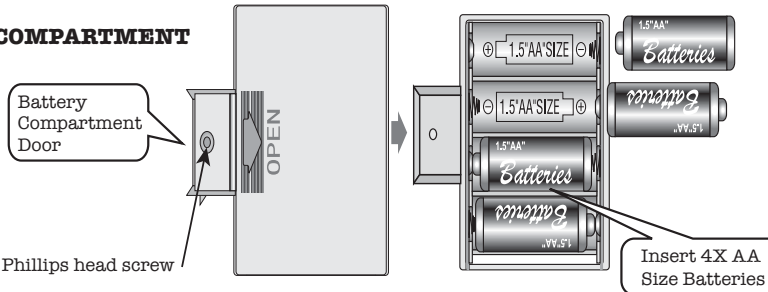


100 SOUNDS

T00	Acoustic Grand Piano	T50	Synth Strings 2
T01	Bright Acoustic Piano	T51	Choir Aahs
T02	Electric Grand Piano	T52	Voice Oohs
T03	Honky-Tonk Piano	T53	Synth Voice
T04	Rhodes Piano	T54	Orchestra Hit
T05	Chorused Piano	T55	Trumpet
T06	Harpischord	T56	Trombone
T07	Clavi	T57	Tuba
T08	Celesta	T58	Muted Trumpet
T09	Glockenspiel	T59	French Horn
T10	Music Box	T60	Brass Section
T11	Vibraphone	T61	Synth Brass 1
T12	Marimba	T62	Synth Brass 2
T13	Xylophone	T63	Soprano Sax
T14	Tubular Bells	T64	Alto Sax
T15	Dulcimer	T65	Tenor Sax
T16	Drawbar Organ	T66	Baritone Sax
T17	Percussive Organ	T67	Oboe
T18	Rock Organ	T68	English Horn
T19	Church Organ	T69	Bassoon
T20	Reed Organ	T70	Clarinet
T21	Accordion	T71	Piccolo
T22	Harmonica	T72	Flute
T23	Tango Accordion	T73	Recorder
T24	Acoustic Guitar (Nylon)	T74	Pan Flute
T25	Acoustic Guitar (Steel)	T75	Blown Bottle
T26	Electric Guitar (Jazz)	T76	Shakuhachi
T27	Electric Guitar (Clean)	T77	Whistle
T28	Electric Guitar (Muted)	T78	Ocarina
T29	Overdriven Guitar	T79	Square Wave
T30	Distortion Guitar	T80	Sawtooth Wave
T31	Acoustic Bass	T81	Calliope
T32	Electric Bass	T82	Bass + Lead
T33	Rock Bass	T83	Warm Pad
T34	Fretless Bass	T84	Sitar
T35	Slap Bass 1	T85	Banjo
T36	Slap Bass 2	T86	Shamisen
T37	Synth Bass 1	T87	Koto
T38	Synth Bass 2	T88	Kalimba
T39	Violin	T89	Bag Pipe
T40	Viola	T90	Fiddle
T41	Cello	T91	Shanai
T42	Contrabass	T92	Tinkle Bell
T43	Tremolo Strings	T93	Agogo
T44	Pizzicato Strings	T94	Steel Drums
T45	Orchestral Harp	T95	Woodblock
T46	Timpani	T96	Melodic Tom
T47	String Ensemble 1	T97	Breath Noise
T48	String Ensemble 2	T98	Bird Tweet
T49	Synth Strings 1	T99	Telephone Ring

100 RHYTHMS

R00	Fusion	R50	Disco
R01	Clup Pop	R51	Electro Pop
R02	16 Beat Pop	R52	Hip Hop
R03	8 Beat Pop	R53	Rap Pop
R04	8 Beat Soul	R54	Techno
R05	Pop Rock	R55	Trance
R06	60's Soul	R56	Funky Disco
R07	8 Beat Rock	R57	Disco Party
R08	Funk	R58	Disco Samba
R09	Twist	R59	Club Latin
R10	British Pop	R60	Club Dance
R11	Rock Ballad	R61	Disco Funk
R12	Limbo Rock	R62	Disco Hands
R13	Hard Rock	R63	Disco Alt
R14	Rock & Roll	R64	Saturday Night
R15	Straight Rock	R65	Hip Shuffle
R16	Jazz Rock	R66	Garage
R17	Schlager Rock	R67	UK Pop
R18	Waltz	R68	Slow & Easy
R19	Samba	R69	Modern Country Pop
R20	Tango	R70	Country Ballad
R21	Cha Cha	R71	Schlager
R22	Paso Doble	R72	Country 1
R23	Rumba	R73	Boogie
R24	Disco Fox	R74	Country 2
R25	Latin Rock	R75	Jazz Big Band
R26	Reggae	R76	16 Beat Shuffle
R27	Bossanova	R77	Jive
R28	Mambo 1	R78	Big Band Fast 1
R29	Mambo 2	R79	Big Band Fast 2
R30	Bolero	R80	Big Band Middle 1
R31	Cumbia	R81	Big Band Middle 2
R32	Latin Disco	R82	Dixie Jazz
R33	Salsa	R83	Big Band Shuffle
R34	Tijuana	R84	Medium Jazz
R35	Slow Soul	R85	Jazz Club
R36	Slow Rock 1	R86	Cat Groove
R37	Slow Rock 2	R87	Jazz Waltz
R38	8 Beat Modern	R88	Bluegrass
R39	8 Beat Adria	R89	Bluegrass 1
R40	Love Song	R90	Bluegrass 2
R41	Pop Ballad	R91	Hully Gully
R42	Classic Piano Ballad	R92	Ober Polka
R43	Piano Ballad	R93	Polka Pop
R44	Acoustic Ballad	R94	Pop Waltz
R45	Analog Ballad	R95	Pub Piano
R46	R&B Ballad	R96	Show Tune
R47	Unplugged	R97	Swing Waltz
R48	Pop New Age	R98	Tarantella
R49	Modern R&B	R99	USA March

37 Key Digital Keyboard INSTRUCTION MANUAL

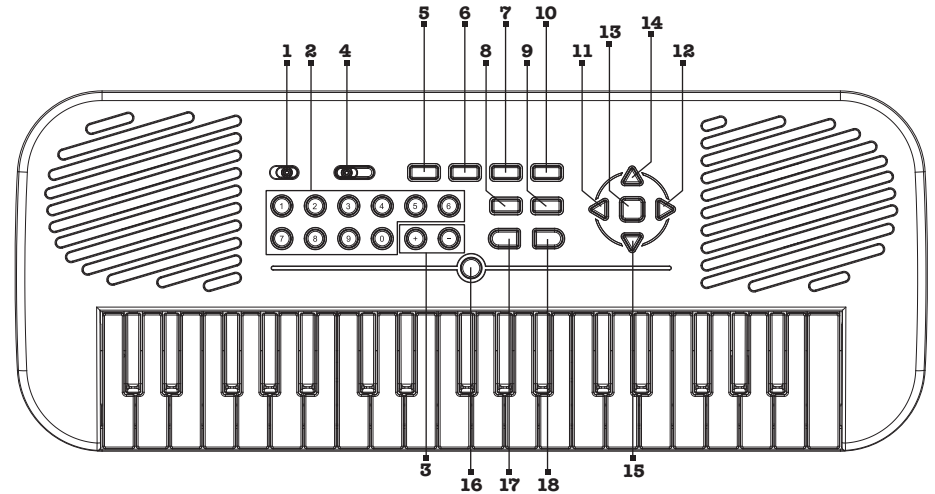

- 1. Power On/Off
- 2. Manual Entry Sounds & Rhythms (0-9)
- 3. Scroll Up/Down (Sounds & Rhythms)
- 4. Volume Up/Down
- 5. Sustain Effect On/Off
- 6. Vibrato Effect On/Off
- 7. One Demo Song
- 8. Record Mode
- 9. Play
- 10. All Demo Songs
- 11. Tempo Up (+)
- 12. Tempo Down (-)
- 13. Select Learning Mode On/Off
- 14. Transpose Up
- 15. Transpose Down
- 16. Play/Stop
- 17. Select "Sounds" Mode
- 18. Select "Rhythms" Mode

Please read all information in this manual thoroughly for usage instructions.

Customer Assistance:

Phone: 888-551-1115 • Email: info@firstact.com

First Act, LLC.
Sunrise, FL 33326 USA

Colors and specifications depicted on this guide may vary slightly from your product.

No part of this publication may be reproduced in any form or by any means without the prior written permission of First Act, LLC.

First Act, First Act Discovery, and the First Act Discovery logo are trademarks of First Act, LLC.

© 2018 First Act, LLC. All rights reserved.

INSTRUCTIONS FOR USE

INTENDED USE: The appliance is used as an electronic musical instrument. It is intended for indoor use only.

PLEASE NOTE: IMPORTANT SAFETY GUIDELINES

- To avoid short circuit, electric shock, or malfunction of the keyboard, DO NOT take it apart. Do not expose the keyboard to high temperatures and damp conditions (e.g., direct sunlight, heating vents, damp rooms, etc.), and do not use it with wet hands. Extreme vibrations, dust, and dirt can also damage the keyboard.
- To avoid physical damage, do not use unnecessary force on the controls.
- Do not drop the keyboard.
- Keep keyboard away from sources of open fire, e.g., such as a candle or fireplace.
- **WARNING!** To avoid the risk of suffocation, keep plastic poly bags away from infants and children!

INSERTING AND CHANGING BATTERIES

1. Open the battery compartment lid, using a Phillips screwdriver.
2. Insert batteries and ensure that they are connected to the correct terminal contact (+/-).
3. Replace compartment lid and fasten screw.

IMPORTANT:

- The battery life is dependent on how frequently the keyboard is used, volume, and quality of the batteries. Replace batteries if volume is reduced or keyboard does not work.
- Batteries: when replacing batteries use the same type: 4X 1.5V AA. If the keyboard will not be used for a long time or the batteries are no longer working, remove them from the keyboard to avoid damage from battery leakage.

ENVIRONMENTAL PROTECTION GUIDELINES FOR DISPOSAL:

- Batteries should not be disposed of in ordinary household waste but must be taken to appropriate local waste management facilities.
- The keyboard should be disposed of in a manner required by local waste management facilities.

PREPARING TO PLAY YOUR KEYBOARD:

Place the keyboard on a firm, plain surface such as a table, or a keyboard stand and keep in a safe position.

SWITCHING THE INSTRUMENT ON AND OFF:

1. To turn on, move POWER selector [1] to ON.
2. To turn off, move POWER selector [1] to OFF.

SETTING VOLUME: To set your volume, move the volume control [4] to the right to increase volume, or to the left to decrease volume.

SELECTING YOUR SOUND: Push the SOUND/RHYTHM selector button [17] and enter the two-digit number of the intended sound using the Manual Entry numerical keys buttons [2]. You can also use the SCROLL UP/DOWN selector buttons [3] to choose your sounds.

SELECTING YOUR RHYTHM: Push the SOUND/RHYTHM selector button again [17] and enter the two-digit number of the intended rhythm using the numerical keys [2]. You can also use the SCROLL UP/DOWN selector buttons [3] to choose your rhythm.

Start the rhythm by pressing the PLAY/STOP button [16]. Stop the rhythm by pressing the PLAY/STOP button again.

Use the piano keys to play along with your selected rhythm.

SETTING YOUR TEMPO:

1. To increase the tempo, use the TEMPO UP (+) button [11].
2. To slow the tempo, use the TEMPO DOWN (-) button [12].

SELECTING A DEMO SONG: Press the ONE DEMO button [7] to start the first demo song. Pressing again will play the next demo song. You can also use the SCROLL UP/DOWN buttons [3] to choose the previous or the next demo song. To stop playing the song, press the PLAY/STOP button [16].

SUSTAIN EFFECT: Press the SUSTAIN effect button [5] to engage this effect. When on, your sounds will sustain longer. Pressing this button again turns the effect off.

VIBRATO EFFECT: Press the VIBRATO effect button [6] to engage this effect. When on, you will hear a pulsating effect added to your sound. Pressing this button again turns the effect off.

RECORDING AND PLAYBACK: To record a melody, press the RECORD button [8]. The recording will start with the first pressed key on the keyboard. You can record up to 92 notes.

To play back your recorded melody, press the PLAY button [9].

TRANSPOSING: Use this button to raise or lower the pitch of the keyboard keys by 1/2 step. This is useful when needing to "tune" the keyboard to a recording or other instruments. You can shift the pitch up or down a total of six 1/2 steps.

1. Press the TRANSPOSE UP (+) button once to transpose up 1/2 step.
2. Press the TRANSPOSE DOWN (-) button once to transpose down 1/2 step.

LEARNING MODE: Choose one of the demo songs (see SELECTING A DEMO SONG). Now press the SELECT LEARNING MODE ON/OFF button [13] and play any keys on the keyboard to start the learning mode. In this mode you always play the right note, no matter which key is pressed. Use this mode to focus on the song's rhythm without having to worry about the right notes.

CLEANING: Clean only with a dry, dust-free cloth.

AC ADAPTER INPUT

(NOTE: AC ADAPTER NOT INCLUDED)

Connect AC adapter

Use only output 5Vdc, 500mA AC adapter

MICROPHONE INPUT (select models)

- Insert the microphone plug into MIC jack.
- Sing along while you play.
- Do not point the microphone directly at the keyboard speaker.