




K3 USER MANUAL

I.PRODUCT INTRODUCTION

1.PRODUCT DESCRIPTION

Multi-functional Microphone YEMENREN K3 is a combination of microphone and loudspeaker. It is a perfect Karaoke product which could satisfy your singing needs in the situations like small family gatherings and family members meetings. You don't have to buy expensive and professional equipment for it any more. Hope you could enjoy the fun of singing and the happy hours you spend with your family while using this product.

2. PRODUCT APPEARANCE AND BUTTON FUNCTIONS

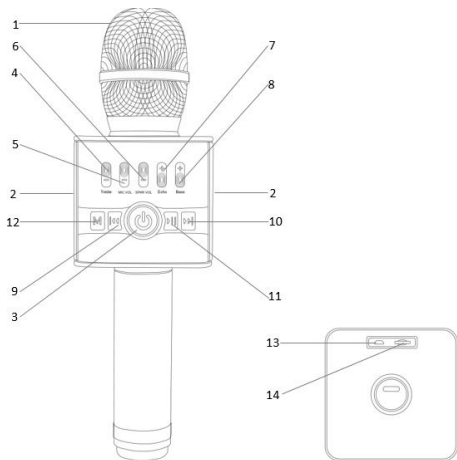

There are two loudspeakers on the “2” position

NO.	Name	Functions
1	Microphone	Collect sounds, especially human voices
2	Double loudspeakers	Speaker function (including human voice and music)
3	Power button	Power on/off (press and hold)
4	Treble	Adjust the microphone input effect, the larger the Treble value, the better the input treble effect
5	MIC VOL	Adjust the microphone input volume
6	SPKR VOL	Adjust the loudspeaker volume
7	Echo	Adjust the microphone input effect. It is the most important tuning button.
8	Bass	Adjust the microphone input effect, the larger the value, the deeper the input effect.

No.	Name	Functions
9	PREV	Switch to the last song. Press and hold to rewind.
10	Next	Switch to the next song. Press and hold to fast forward.
11	Play/Pause	Play or pause the song.
12	M Button	Press the M button to stop the music inputting function, and it only can input through the microphone; press the M button again to restore the music inputting function.
13	Micro USB	Charging/audio input
14	Micro SD	Insert Micro SD card to play the music in it.

SPKR=Speaker

MIC=Microphone

M=Multi-function

II.HOW TO USE

- 1. Power on/Power off:** Press and hold the power button for about 3 seconds in any state to power on or off. It will have a warning tone when you power on or off.
- 2. Charge:** Use the data cable below.
Connect the A end to K3's Micro USB Slot and B end to a computer or a USB charger to charge K3.



- 3. The product has two following usage scenarios:**
 - A. Loudspeaker scene**
 - B. Karaoke scene**

A.Loudspeaker Scene:

Use the device simply as a loudspeaker. You need to set the MIC VOL to the lowest to reduce the noise inputting.

There are three conditions when it's in the loudspeaker scene:

Condition1:

The playing device has Bluetooth function (such as a smart cellphone), then the operation is as below:


- a) Press and hold the power button to turn on the device, and now the device in in the Bluetooth pairing state. Turn on your smart cellphone's Bluetooth function and search for the pairing name "K3". Press it to pair. You will hear a prompt tone if the pairing is completed.
- b) When it's done, turn on the music playing App to play your favorite music.

Condition2:

The playing device doesn't have Bluetooth function (such as a traditional MP3 player or an old model laptop), then the operation is

as below:

(Find the following audio cable from the box)

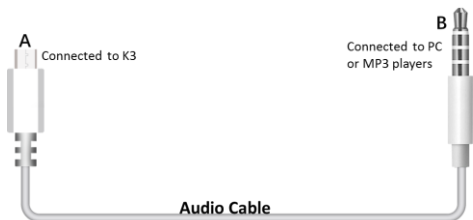

Connect the A end to K3's Micro USB Slot and B end to the playing device which don't have Bluetooth function (such as a traditional MP3 player or an old model laptop).

Condition3:

Use a Micro SD card to play the music

- a) Download music files to the Micro SD card;
- b) Insert the card to K3's Micro SD card slot; Use the Prev/Next button to choose the music in the Micro SD card in due order.

Note: The product doesn't include a Micro SD card. You need to buy it separately.

B.Karaoke Scene

You need to set the MIC VOL to a suitable value (generally the largest) in this scene.

Use Bluetooth or an audio cable to connect the music player and K3. and refer to the loudspeaker scene for the three connecting ways.

You could start singing to the microphone following the rhythm of the music when the loudspeaker plays the accompaniment.

You could use Treble, Echo, Bass, and MIC VOL to adjust the human voice effect.

Note: You'd better keep your mouth right above the microphone while singing to ensure a good effect due to the unidirectional microphone.

III.TECHNICAL PARAMETERS

Items	Specification
Product Model	K3
Dimension	245*75*75mm
Net Weight	313g
Slot	Micro USB and Micro SD
Battery Type	Type: 18650, lithium battery
Battery Capacity	2800mAh
Charging Time	3-4 hours
Charging Voltage and Current	DC 5V~1A
Loudspeaker Output Power	2*3W (6W)
Expansion Slot	Support Micro SD card (TF card)

IV.FREQUENTLY ASKED QUESTIONS

1. CAN'T CONNECT THE DEVICE TO A CELL PHONE VIA BLUETOOTH

- a) Check if the device is powered on. The device will enter the pairing state automatically after power on, and wait for the external Bluetooth device to connect.
- b) Check if the device has already connected to another cell phone or Bluetooth device. If it is so, please disconnect another cell phone or Bluetooth device.
- c) Clear all the pairing names on the phone, and search for the pairing name "K3" again.
- d) Don't move the phone far away from K3 while pairing.

If the above methods don't work, maybe your phone is not compatible with K3. You could find the audio cable, and connect the Micro USB end to K3, and the 3.5mm connector to the phone.

2. THE SOUND IS INTERMITTENT VIA BLUETOOTH CONNECTION

- a) Check if the phone is far away from K3, or there are obstacles between them.

Check if there is strong wifi signal near K3 or the phone, because Bluetooth and wifi are both in 2.4G frequency range.

3. THE LOUDSPEAKER HAS A BUZZ WHEN THE DEVICE IS STANDBY.

- a) It will produce internal current when the microphone and the loudspeaker are both on, so there will be some internal noise.
- b) The microphone is still collecting some external sounds when it's standby.
- c) Turn the MIC VOL to the lowest when you don't use the microphone to reduce the buzz, and keep K3 away from the strong electromagnetic environment.

4. HOW TO AVOID WHISTLING

Whistling is the sharp sound the microphone makes when there is an obstacle close to the microphone, and forms a closed, semi-enclosed space.

For any microphone, whistling is a normal phenomenon, and the key is how to avoid it. Please refer to the following methods:

- a) Please turn off K3 using the power button when you don't use it.
- b) Please keep the microphone facing up, and make sure there isn't any other object near it when you put K3 somewhere temporarily.
- c) Please turn the MIC VOL to the lowest when you only use the loudspeaker.

(5) WHAT SHOULD I DO IF I WANT TO RECORD A SONG ON APPS LIKE YOKEE AND SHARE IT?

- a) We suggest you buy some professional recording equipment, or use an ordinary headphone with a MIC if you want to record a song.
- b) Although multi-function microphones like K3 have wonderful performance in the Karaoke singing area, but recording songs are not their strong point. An ordinary headphone with a MIC may have better recording effect than most of the multi-function microphones on the market.

6. THE BUTTON DOESN'T RESPONSE. IT CAN'T BE POWERED OFF EVEN IF YOU PRESS AND HOLD FOR 3 SECONDS.

Press and hold the power button for more than 10 seconds to reset the device.

7. THE MUSIC SOUNDS UNREAL OR LAGGING WHEN IT'S PLAYING VIA BLUETOOTH.

Maybe the volume is too high or the battery is too low.

Please charge K3 at once and adjust to a suitable volume when you play the music next time.

8. THERE IS NO SOUND FROM THE MICROPHONE.

Please check if the MIC VOL button is at the lowest position. If it is so, please turn up the MIC VOL volume.

YEMENREN

Support.us@yemenren.net