


Hamilton Beach

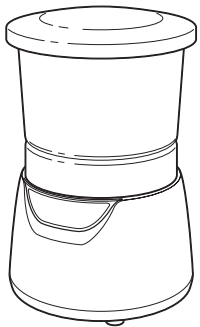

Stack & Press™ Food Chopper Hachoir Picadora

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use. Lire avant utilisation. Lea antes de usar.

In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

hamiltonbeach.com | USA: 1.800.851.8900

Aidez-nous à protéger l'environnement

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, Inc. a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

hamiltonbeach.ca | Canada : 1.800.267.2826

Ayude a Hamilton Beach a Hacer la Diferencia

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc., ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

hamiltonbeach.com.mx | México: 800.71.16.100

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put cord, plug, or base in water or other liquid.
3. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
4. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

5. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
6. Turn the appliance OFF(●), then unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
7. Avoid contacting moving parts.
8. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
9. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter, or touch hot surface including stove.
12. Keep hands and utensils away from the cutting blades while chopping food to reduce the risk of severe injury to persons or damage to the food chopper. A scraper may be used but must be used only when the food chopper is not running.
13. Blades are sharp. Handle cutting blades carefully when inserting or removing, emptying the bowl, and during cleaning.
14. This appliance is intended for processing small quantities of food for immediate consumption. This appliance is not intended to prepare large quantities of food at one time.
15. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
16. Be certain lid is securely locked in place before operating appliance.
17. Do not attempt to defeat the lid interlock mechanism.
18. Do not use appliance for other than intended use.
19. Do not place on or near a hot gas or electric burner, or in a heated oven.
20. Check that the appliance is OFF (●) before plugging cord into wall outlet. To disconnect, turn the control to OFF (●); then remove plug from wall outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
21. Do not remove cover until blade has completely stopped rotating
22. Be careful if hot liquid is poured into the food processor bowl as it can be ejected out of the appliance due to a sudden steaming.
23. **CAUTION!** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

SAVE THESE INSTRUCTIONS


Other Consumer Safety Information

This appliance is intended for household use only.

⚠ WARNING Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

Parts and features

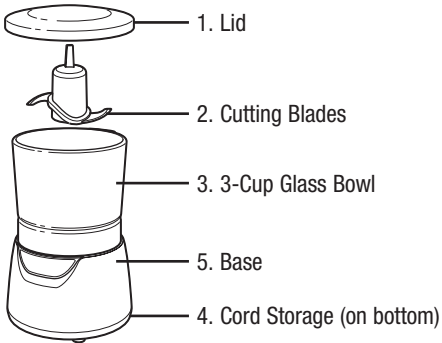

How to use the food chopper

IMPORTANT: Before first use, follow instructions in “Care and cleaning.”

1. Make sure chopper is unplugged. Place bowl onto base.
2. Carefully place blade in bowl over center shaft. Turn until blade slips down to bottom of bowl.
3. Place food in bowl.
4. Place lid on bowl.
5. Plug into electrical outlet. Press lid to chop. To turn off, release lid. Do not remove lid until blade has stopped turning.
6. Unplug; remove lid. Remove bowl from base. Carefully remove blade.
7. Use cord wrap on bottom of unit for easy storage.

Chopping tips

- The bowl has a capacity of 3 cups. For liquid ingredients, do not exceed 1 1/2 cups (MAX LIQUID FILL line on bowl).
- For more control, process by pressing lid briefly, then releasing. Check consistency and continue if desired.
- Tear bread into pieces; then process to make bread crumbs. Break crackers or cookies into pieces; then process into crumbs for use as recipe ingredients or pie crusts.
- To chop carrots, celery, mushrooms, green pepper, or onion, cut into 1-inch chunks and place in bowl. This will result in more uniform consistency.
- Chop nuts; mince parsley, basil, chives, or garlic.
- Do not process raw meat, coffee beans, or whole, hard spices in the food chopper. This could damage the chopper.

Care and cleaning

⚠ WARNING Electric Shock Hazard. Do not immerse base, cord, or plug in water or any other liquid.

1. Wash lid, bowl, and cutting blade in hot, soapy water or in top rack of dishwasher. Cutting blade is sharp; handle carefully.
2. Reassemble for safe storage.
3. To clean the base, wipe with a damp cloth. Do not use abrasive cleaners.

Processing chart

TO MAKE	INSTRUCTIONS
Bread Crumbs	Tear bread slices (up to 3) into 6 pieces.
Cheese, Parmesan	Cut in ½-inch cubes. Process ½ cup of cubes at a time.

Cookie Crumbs	Break into pieces. Use up to 2 cups of pieces.
Fruit, Chopped	Cut fruit into large chunks. Place up to 2 cups pieces into chopper.
Garlic, Minced	Peel; then process 1 or more cloves at a time.
Graham Cracker Crumbs	Break into 4 pieces. Place up to 6 crackers in chopper at a time.
Herbs, Chopped	Place up to 1 cup in chopper.
Nuts, Chopped	Place up to 1 cup in chopper.
Parsley	Pinch off sprigs from bunch.
Vegetables	Cut vegetables into 1-inch chunks. Place up to 2 cups in chopper at a time.

Limited warranty

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

PRÉCAUTIONS IMPORTANTES

Pour utiliser un appareil électroménager, vous devez toujours prendre des mesures élémentaires de sécurité pour réduire le risque d'incendie, d'électrocution et/ou de blessure corporelle, en particulier les mesures suivantes :

1. Lire toutes les instructions.
2. Pour éviter les risques d'électrocution, ne pas immerger le cordon, la prise ou la base dans l'eau ou tout autre liquide.
3. Cet appareil n'est pas destiné à être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites, ou manquant d'expérience et de connaissance, sauf si elles sont étroitement surveillées et instruites sur l'utilisation de l'appareil par une personne responsable de leur sécurité.
4. Cet appareil ne devrait pas être utilisé par des enfants. Garder l'appareil et son cordon hors de la portée des enfants.
5. Une surveillance étroite est requise pour tout appareil utilisé près des enfants. Surveiller que les enfants ne jouent pas avec l'appareil.

6. Fermer l'appareil (●), puis le débrancher de la prise lorsqu'il n'est pas utilisé, avant d'assembler ou de désassembler des pièces ou avant de le nettoyer. Pour le débrancher, tenir la fiche et la retirer de la prise. Ne jamais tirer sur le cordon.
7. Éviter de toucher des pièces mobiles.
8. Ne pas faire fonctionner un appareil électroménager avec un cordon ou une fiche endommagée, ou lorsque l'appareil ne fonctionne pas bien ou a été échappé ou endommagé d'une manière quelconque. Le remplacement et la réparation du cordon d'alimentation doivent être faits par le fabricant, son agent de service ou toute personne qualifiée de façon à éviter tout danger. Appeler le numéro de service à la clientèle fourni pour des renseignements concernant l'examen, la réparation ou l'ajustement.
9. L'utilisation d'accessoires non recommandés ou vendus par le fabricant d'électroménagers peut provoquer un incendie, l'électrocution ou des blessures.
10. Ne pas utiliser à l'extérieur.
11. Ne pas laisser pendre le cordon de la table ou du comptoir et éviter tout contact entre le cordon et les surfaces chaudes incluant la cuisinière.
12. Pendant la transformation des aliments, garder les mains et les ustensiles loin des lames de coupe pour réduire le risque de blessure corporelle grave et les dommages au hachoir. Un racloir peut être utilisé, mais uniquement lorsque le moteur du hachoir est arrêté.
13. Les lames sont tranchantes. Manipuler les lames de coupe avec soins pendant l'insertion ou le retrait, lors du vidage du bol et pendant le nettoyage.
14. Cet appareil est conçu pour transformer de petites quantités d'aliments à servir ou à utiliser immédiatement. Cet appareil n'est pas conçu pour transformer de grandes quantités d'aliments en une seule fois.
15. Pour éviter les risques de blessures, ne jamais placer la lame de coupe sur la base sans avoir préalablement installé le récipient correctement.
16. S'assurer que le couvercle est en place et verrouillé correctement avant de faire fonctionner l'appareil.
17. Ne pas tenter de démonter le mécanisme de verrouillage du couvercle.
18. N'utiliser cet appareil que pour les fonctions auxquelles il est destiné.
19. Ne placer jamais votre appareil électroménager à proximité ou sur un brûleur électrique ou à gaz chaud ou dans un four chaud.
20. S'assurer que l'appareil est OFF (●/arrêt) avant de brancher la fiche dans la prise de courant. Pour débrancher, tourner la commande à et mettre à OFF (●/arrêt) puis débrancher la fiche de la prise de courant. Pour débrancher, saisir la fiche et la retirer de la prise. Ne pas tirer sur le cordon d'alimentation.
21. Ne pas enlever le couvercle avant que la lame ait complètement fini de tourner
22. Soyez prudent lorsque vous versez un liquide chaud dans le bol du robot culinaire, car il peut éclabousser hors de l'appareil en raison de la production d'une vapeur soudaine.
23. **ATTENTION !** Afin d'éviter un danger découlant d'une réinitialisation accidentelle du rupteur thermique, se dispositif ne doit pas être alimenté par l'entremise d'un appareil de connexion externe, comme une minuterie, ou connecté à un circuit qui est régulièrement mis sous et hors tension par le service public.

CONSERVER CES INSTRUCTIONS

Autre consigne de sécurité pour le consommateur

Cet appareil est conçu pour une utilisation domestique seulement.

⚠ AVERTISSEMENT Risque d'électrocution: Cet appareil électroménager possède une fiche polarisée (une broche large) qui réduit le risque d'électrocution. Cette fiche n'entre

