

How to Charge the Joy-Con Controllers

Applies to: Nintendo Switch

Instructions for charging the Joy-Con controllers.

Additional Information:

- It takes approximately 3 ½ hours to fully charge the Joy-Con controllers.
- The Joy-Con Charging Grip (model No. HAC-012) is not included in the Nintendo Switch bundle. This product is sold separately.

Complete These Steps:

The Joy-Con can be charged in the following ways:

While attached to the Nintendo Switch console.

1. [Attach the Joy-Con](#) to the Nintendo Switch console and power it on.
 - In order for the Joy-Con to charge while attached to the Nintendo Switch console, the console must be connected to the AC adapter and powered on or in Sleep Mode.
2. [Charge](#) the console.

How to Charge the Nintendo Switch Console

The Nintendo Switch console is compatible with the Nintendo Switch AC adapter only (model No. HAC-002).

The Nintendo Switch console requires approximately 3 hours to fully charge.



While attached to the Joy-Con Charging Grip.

1. [Attach the Joy-Con](#) to the Joy-Con Charging Grip.
2. Connect the Joy-Con Charging Grip to the Nintendo Switch dock using the USB cable that was included with the Charging Grip, or connect it directly to the Nintendo Switch AC adapter (HAC-002).

