

Manufacturer **Camera Model**

SONY

Camera Model	8-16mm F4.5-5.6 DC HSM	10-20mm F3.5 EX DC HSM	10-20mm F4-5.6 EX DC HSM / EX DC	17-50mm F2.8 EX DC OS HSM / EX DC HSM *3	17-70mm F2.8-4 DC MACRO OS HSM C013 / DC MACRO HSM C013 *3	18-35mm F1.8 DC HSM A013	18-200mm F3.5-6.3 DC MACRO OS HSM C014 / DC MACRO HSM C014 *3	18-250mm F3.5-6.3 DC MACRO OS HSM / DC MACRO HSM *3	18-300mm F3.5-6.3 DC MACRO OS HSM C014 / DC MACRO HSM C014 *3	4.5mm F2.8 EX DC CIRCULAR FISHEYE HSM	10mm F2.8 EX DC FISHEYE HSM	30mm F1.4 DC HSM A013
α33	0	0	0	0	0	0	0	0	0*6	0	0	0
α55	0	0	0	0	0	0	0	0	0*6	0	0	0
α57	0	0	0	0	0	0	0	0	0*6	0	0	0
α58	0	0	0	0	0	0	0	0	0*6	0	0	0
α65	0	0	0	0	0	0	0	0	0*6	0	0	0
α77	0	0	0	0	0	0	0	0	0*6	0	0	0
α99 *4 *7	0	0	0	0	0	0	0	0	0*6	0	0	0
α100	0	0	0	0	0	0	0	0	0*6	0	0	0
α200	0	0	0	0	0	0	0	0	0*6	0	0	0
α230	0	0	0	0	0	0	0	0	0*6	0	0	0
α300	0	0	0	0	0	0	0	0	0*6	0	0	0

