



MASTER BOX LABEL



PICTURE BOX



OPTIGRILL GC702D



GC702D PLATES




PLUG IN THE OPTIGRILL



PRESS THE ON BUTTON



OK BUTTON WILL BRINK  
PRESS IT TO START THE PREHEAT

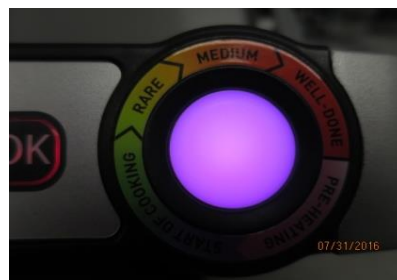

PREHEAT LIGHT WILL BLINK  
UNTIL IT REACHES  
TEMPERATURES  
THEN THE OPTIGRILL WILL  
BEEP & LIGHT WILL GO SOLID





WHEN OPTIGRILL HAS REACHED THE END OF START COOKING THE GRILL WILL BEEP AND GO INTO RARE & LIGHT WILL TURN YELLOW



AT THE END OF RARE THE GRILL WILL BEEP AND THE GRILL WILL GO INTO MEDIUM AND THE LIGHT WILL TURN ORANGE.

IF AT THE END OF PREHEATING A VERY THIN PIECE OF FOOD IS PLACED ON THE GRILL YOU MAY HAVE GRILL TO START OF COOKING.  
IF FOOD IS ON THE GRILL AFTER YOU HAVE PRESSED OK THE GRILL WILL THINK YOU ARE GOING MANUAL TURN WHITE. GRILL WILL NOT PREHEAT OR OPERATE AS A SELECTION.



TO USE THE MANUAL PRESS M AND THE OK BUTTON



IF NO FOOD IS ON THE GRILL, THE GRILL WILL GO INTO PREHEAT



IF FOOD IS ON THE GRILL WHEN YOU PRESS MANUAL & OK THE GRILL WILL IMMEDIATELY GO INTO MANUAL & LIGHT WILL TURN WHITE.



PICTURE BOX LABEL



GRILL LABEL



SELECT WHAT IS BEING COOKED



OPEN THE GRILL & PLACE YOUR  
FOOD ONTO IT AND THEN CLOSE  
THE GRILL.  
START OF COOKING WILL BEGIN  
& LIGHT WILL TURN BLUE





AT THE END OF MEDIUM THE  
GRILL WILL BEEP AND THE GRILL  
WILL GO INTO WELL DONE AND  
THE LIGHT WILL TURN RED

NE TO PRESS OK TO GET THE  
QUALLY AND THE LIGHT WILL



AT THE END OF PREHEAT IT WILL  
GO INTO MANUAL AND THE  
LIGHT WILL BE WHITE.