

## Aiworth VOICE RECORDER



# Aiworth





Thank you for choosing Aiworth voice recorder. Thank you for purchasing this product. This is the Quick Start Guide, which provides you with instructions on the basic operations of the recorder. Please read it carefully before using this product. If you have any question, please be free to contact us.

## 1. Charging for your recorder

Connect it to your computer with USB cable, it will charge.  
Charge time between 3 to 4 hours, turn on voice recorder before charging.

You could also connect to your cell phone adaptor for charging.

Notes:

	(1) Enough battery power
	(2) Battery has half power
	(3) Battery is almost exhausted
	(4) Battery is too weak

Charge time between 3 to 4 hours, turn on voice recorder before charging

When Battery display (3) and (4), functions maybe limited, please recharge

## 2. On/Off/Standby

On/off slide switch is located on the right side of the voice recorder.

Slide the switch turn on or turn off the voice recorder.

The voice recorder includes a standby mode.

To enter or exit standby, hold the “PLAY” button for 2 seconds.

### **3. Record option.**

#### **3.1 How to RECORD and SAVE.**

Keep your recorder on, press “REC” to record, press “stop” to save the recording.

#### **3.2 How to PAUSE and RESUME your recording.**

During recording, press PLAY/PAUSE, pause the recording.

If you want resume it, just press PLAY/PAUSE again, it resume the recording

#### **3.3 How to playback recordings.**

1. If you want to listen immediately after recording, you can only press “PLAY”.

2. You can also find your all recording files in the “Record Mode”.

Keep your recorder on, press “M” to enter “Record Mode”, and then you can see all recording files.

Press the “PREVIOUS/NEX” button in the right side to select files you want to play.

Then press “PLAY/PAUSE”, start to playback your recordings.

Notes: 1. Pressing the REC button during any status or modes (beside while playing a file) will enter record mode.

2. While recording, the LED will long on red. The LED will flash when the recording is paused.

## 4. How to Upload MP3 Music files

While on, connect the Voice recorder to a computer's USB socket using the provided USB cable. The voice recorder will confirm connection when the following image appears on the LCD:



The voice recorder will come up as a Removable Disk or a Mass Storage Device on My Computer. Access the voice recorder then open the Record folder then the DVR folder. The DVR folder contains recorded files which you can save on to your computers hard drive.

– To upload MP3 music files on to the Voice Record, access the voice recorder using My Computer and transfer music MP3's in to the main location. There is no folder to save MP3's in or a need to create one.

## 5. How to delete files

### 5.1 How to delete recording

Press "PREVIOUS/NEX" button to select "Record Mode" .

Press the "M" button to enter it.

Press "PREVIOUS/NEX" button to select the recording you want to delete.

After finding the file, press "DEL/A-B" button.

There are there choice: "Delete file" , "Delete all" , "Exit" .

Press "M" button to delete it.

Notes:

1. Please be careful when you choose “Delete all” .
2. If you want to leave the “Delete” page and to go for the menu page, just press “M” button for 2 seconds.

## **5.2 How to delete music.**

Press “PREVIOUS/NEX” button to select “Music Mode” .

Press the “M” button to enter it.

Press “PREVIOUS/NEX” button to select the recording you want to delete.

After finding the file, press “DEL/A-B” button.

There are there choice: “Delete file”, “Delete all” , “Exit” .

Press “M” button to delete it.

Notes:

1. Please be careful when you choose “Delete all” .
2. If you want to leave the “Delete” page and to go for the menu page, just press “M” button for 2 seconds.

## **6. How to enter the A-B repeat function.**

During playback, press the DEL/A-B button to enter the A-B repeat function.

- Once pressed, the ‘A’ mark will be selected. Press the button again to select the ‘B’ mark.
- Then the file will repeat from the ‘A’ mark to the ‘B’ mark.
- To restart the marks, press the DEL/A-B button and repeat above process.
- To resume normal playback,

Press the “M” button to enter “setting”

Select “Repeat” into “music mode”

press “Normal” .

Notes: Only during playback, press the “DEL/A-B” enter this function.

## **7. How to set the system time.**

Press the “PLAY/PAUSE” button for two seconds, open the device.

Press the “PREVIOUS/NEX” button to select the “Setting Mode” .

You can see the “System Time” is in the first place

Press “M” button to select it.

Press Vol- and Vol+ button to choose the year/month/day, hour/minute/ second.

Take setting the year for example.

Press “Vol-” or “Vol+”, choose the year and the data will flash.

Press the “PREVIOUS/NEX” button to reset the year.

And press “Vol+”, continue to set the month/day, hour/minute/second through repeating above steps.

Notes: 1. Only when the data flash, you can reset it by press the “PREVIOUS/NEX” .

2. When you complete all setting operation, the device will auto-jump into the previous page by pressing “M” button.

## **8. How to set the language.**

Like the steps of setting the system time, enter the “Setting Mode” .

Press the “PREVIOUS/NEX” button to find the “Language” .  
Press “M” button, enter setting.  
Press the “PREVIOUS/NEX” button to find the language you want to set.  
Finally, Press “M” button.  
Note: When you complete all setting operation, the device will auto-jump into the previous page by pressing “M” button.

## **9. Other options in the “Setting Mode”**

Press “M” button enter the “Setting Mode”

### **9.1 Record Type**

Press “PREVIOUS/NEX” to choose “Recorder Type”  
Press “M” button to enter it.  
There are 6 options. Press the “PREVIOUS/NEX” to choose the type you want.  
6type:  
Middle-recording  
Middle VOR  
Long-recording  
Long VOR  
High-fidelity recording  
High VOR  
Press “M” button when you have a choice. And the device will auto-jump into the previous page.

### **9.2 Record Form**

Press “M” button to enter it.  
There are 3 choices. You still choose them by pressing the

“PREVIOUS/NEX” button.

3choices:

Microphone

Audio Input

Exit

Still press the “M” button when you have a choice. Page will automatically jump into the previous one.

### 9.3Backlight

Press “M” to enter “Backlight” for adjusting the backlight brightness for the LCD. Press the “PREVIOUS/NEX” button to increase or decrease brightness. Adjust in 3 steps from 2 to 29.

### 9.4 Power off

Press “M”, enter it. There are two functions under this option:

- ‘Off time’ is the idle off time function. Adjust in 10 minute steps between 10 to 60 minutes by pressing the Up or Down button. Press the Mode button to select an Off time. 0 minute is to turn off this function. Once the unit is idle for the selected Off time, the voice recorder will enter standby. Hold the Play button for 2 seconds to exit standby.
- ‘Sleep time’ will turn off the unit within the selected minutes even while the voice recorder is in use, i. e. recording or playback. Adjust in 10 minute steps between 10 to 120 minutes by pressing the Up or Down button. Press the Menu button to select a sleep time. 0 minute is to turn off this function. Once the selected sleep time lapses, the voice recorder will enter



standby. Hold the Play button for 2 seconds to exit standby. Complete all setting operation, press “M” will auto-jump into the previous page.

### 9.5 Contrast: Adjust the contrast for the LCD

Press “M” button to enter “contrast” .

Press the “PREVIOUS/NEX” button to increase or decrease the contrast.

### 9.6 Memory info

Shows the amount of available memory left in a percentage.

Press the “M” button to exit.

### 9.7 Firmware version

Show the current Firmware Version.

Press the Mode button to exit.

### 9.8 Exit

Press the Mode button to exit settings mode and to go back to the main menu.

## 10. Specifications:

Features		Specifications		
Memory capacity		2GB	4GB	8GB
Record times	HQ (128 kbps)	1920Mins	3840 Mins	7680Mins
Record	SP (64	4230Mins	8460	16920Mi

times	kbps)	s	Mins	ns
Record times	LP (32 kbps)	8280Mins	16560 Mins	33120Mins
Frequency		20Hz – 20KHz		
Maximum output		300mW		
Storage Media		Embedded flash		
Built-in MIC		Omni-directional microphone		
External		Dynamic 20mm, 16ohm		
S/N(Ratio)		80db		
Display		128 X 64 Lattice Screen		
External input	Stereo earphone	3.5mm Stereo socket		
	External Microphone	3.5mm Stereo socket		
	USB Cable	PC Interface USB 1.1/USB2.0		
Recording format		WAV		
Supported Music file		MP3 / WAV		
Dimensions		83mm*35mm*12mm		
Weight		40g (Including battery)		
Operating Temperature		0 – 600C		
Battery (Full charge)	Recording	Up to 20 hours		
	Playback	Up to 10 hours		

## 11. FAQ

Problem	Reason	Measure
The LCD does not	Low battery	Timely

show	Whether turn on	Charge;Turn on the power supply
Can not record	Not transferred to the recording state,Low battery Memory capacity to the limit or full	Transferred to the recording state;Timely charge; Remove part of the file or move to an external device.
Unable to open the recording file	Low battery There is no audio file the volume in a minimum	Timely charge; check the file; Adjust the volume;
Letters appearing on the screen is abnormal	The language choose whether correct	Choose the right language
Speaker no sound	check the plug of headphone, the volume to a minimum, check the recording format is correct	Remove the headphones; adjust the volume Select the correct recording format
No sound from	Make sure that the headset is properly connected he volume in a	Connect the headset; Adjust the volume; Check the

headphones	minimum Recording or MP3 files have been destroyed in the manufacture of different levels of noise, and even play silent;	recording or MP3 files whether are destroyed, to ensure the integrity of the document;
Can not be normal upload / download the audio file	Check the USB cable for damage, Connectio n of USB whether normal Check if there are blank memory;	Ensure USB cable is not damaged Check the connection of USB Remove the blank memory;
Time setting not save	Enter setting model; After time setting OK, only press the PLAY/PAUSE key to turn it OFF, ON/OFF button can not be turned OFF,	This part is mainly the clock timing with MCU