

L57 User Manual

Product Key Function

Operation Guide

- 1 . Switch ON
- 2 . Switch OFF
3. Recording
4. Recording Settings
5. Playback
6. Playback Settings
7. Bookmark Function
8. Switch MUSIC/DVR Folder
9. Delete
10. Viewing Files
- 11 . System Settings
12. Recording Format

1.Switch ON The Recorder

Push the POWE button① from“OFF”to“ON”Screen will lighten on (when power button at “ON”position , you could also press and hold PLAY button 3 seconds to boot on or shut down the device, we suggest you switch ON/OFF the recorder by this way)

2.Switch OFF The Recorder

Push down the power button from“ON”to“OFF”position. The device will be totally shut down (during recording, please do not do like this, it is same like you are working with your computer, and suddenly someone plug off your computer power plug, files will be damaged)

3.Recording

(1) When the device is ON, press “REC”button , it is showing “please wait..”, and start to record , screen will show the ②L.R left/right audio track dynamic balanced wave. If recording indicator light is open, the indicator light will blink.


Press “STOP”button, it saves recordings.

(2) At the status of recording, press “PLAY”, pause recording; Press “PLAY” again, it will resume to record.

NOTE: recording file name will named by system Year, month, day, seconds. For example: 20170925113939.WAV,

4.Recording Settings:

Recording LCD Display

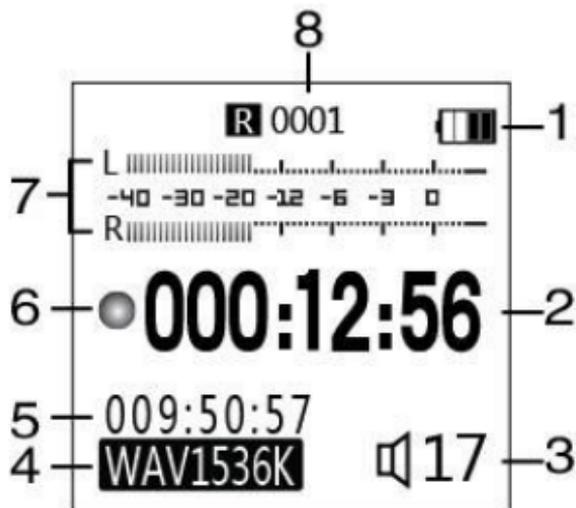

Recording Mode	
NO	Name
1	Battery display
2	Currently recording time
3	Volume
4	Recording bit rate
5	Remaining recording time space
6	Recording Status Indicator
7	L/R dynamic balanced wave
8	Total recordings count

4.1 Recording Quality Setting : At the stauts

of pause/stop recording ,
press ①“MENU”enter“menu options” , and
then press ② “ ⏪ ”or ③“ ⏩ ”to
select“Recording Settings”

Press“MENU”again enter the sub me,
Select“Recording Quality”, and press
“MENU”enter it.

It has “1536kpbs”,“128kpbs”.“64kpbs”for
selection , Press“MENU”again to confirm
selection.

4.2 Open/Close Record LED Indicator

Light : At the status of pause/stop recording, press ①“MENU” enter “ menu options”, and then press ②“ ⏮ ”or ③“ ⏭ ”to select“Record Settings”

Press“MENU”enter the sub menu ,
Select“Record led”, and press“MENU”enter it

Select “open” or “close”, and then press
“MENU”confirm selection.

Now the recording led indicator light will

ON/OFF based on your selection.

4.3 Subsection Record : At the status of pause/stop recording, press ①“MENU” enter “menu options”, and And then press ②“ |◀◀ ”or ③“ ▶▶| ”to select “Record Settings”

Press “MENU” enter the sub menu, Select “Subsection record”, and press “MENU” enter it

Press ② “◀◀” or ③ “▶▶” to select Half hour / One hour / Two hour / CLOSE, and then press “MENU” to confirm the selection.

4.4 Voice Activated Mode : At the status of pause/stop recording, press ①“MENU” enter “menu options”, and then press ②“|◀◀”or ③“▶▶|” to select “Record Settings”

Press“MENU” enter the sub menu , Select “Voice-activated mode”, and press “MENU” enter it

In this level, it could set the AVR mode open or close, and control the voice activated sensitive.

Select “AVR Mode”, and press “MENU” enter it. Select “ON/OFF”, If select “ON” and

press “MENU” confirm selection.

Now press “REC” to record, screen will show “VOX” near the speaker volume icon. That means voice activated function was successfully open

Voice Activated Sensitive: It could select from level one to level five. Higher level means it could pick up voice from long distance and even a quiet whisper or noise will be recorded.

We suggest open the record monitor function,

and put on with earphone to adjust the the best level for different recording surrounding.

4.5 Record Monitor: At the status of pause/stop recording, press ①“MENU” enter “menu options”, and then press②“⏪”or ③“⏩”to select “Record Settings”

Press “MENU” enter the sub menu ,
Select “Record Monitor”, and
press “MENU” enter it

Press ② “|◀◀” or ③ “▶▶|” to select “open”
or “Close” and then press ① “MENU”
confirm selection

4.6 Auto Record: At the status of pause/stop
recording, press ① “MENU” enter “menu
options”, and then press ② “|◀◀” or ③
“▶▶|” to select “Record Settings”

Press“MENU”enter the sub menu ,
Select“Auto Record”, and press“MENU”enter
it

In this menu, it could open the auto record
function, and set start time, end time, Auto
Record Cycle

Press ②“|◀◀”or ③“▶▶|”to select“Record
on/off” enter it, select“ON” or “OFF” Press
①“MENU” to confirm selection, it is used to
select to open and close the Auto Record
Function

Start Time: set when it starts to record

End Time: set when it ends the recording

Record FM Cycle: set the auto record repeat cycle “Once”, “Daily”, “Work Day”

5. Playback

At the status Music/DVR mode, press “PLAY”, it starts to playback, press “PLAY” again, it will pause playing

At the status of pause/stop playback, press


“ |◀◀ ” or “ ▶▶| ” select previous / next recording / songs.

Press and hold “STOP” button, it could switch between MUSIC/DVR folder

Press “+” or “-” to adjust the speaker volume.

6. Playback Settings:

Playback Display :

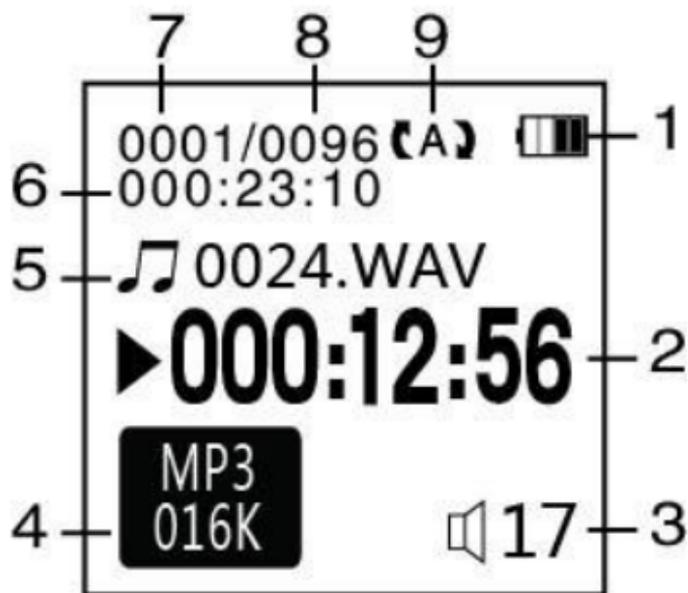

Music Mode	
NO	Name
1	Battery display
2	Playing time
3	Speaker volume
4	Music format / bit rate
5	Song name / Artist
6	Remaining time of the song
7	Current song
8	Total songs count

6.1 A-B Repeat: At the status of playback, press and hold ①“MENU”, it will set the A-B repeat start point ②“A”.

Now the screen will display and flash “B”, press and hold “MENU” button again to set end point “B”.

And then screen will display “A-B”, it will playback and repeat from point A to point B.

Press and hold “MENU” button again, it will exit A-B repeat function

6.2 Repeat Mode: at the status of playback, press ①“MENU” button, enter “menu options”

Press ② “⏮” “⏭” to select “play settings” , and then press ①“MENU” enter the sub-menu.

It could set the play mode and sound settings

In play mode: we could set Repeat (repeat one, repeat all), viewing play (play 10s seconds of each file), Shuffle (play in random)

In sound setting: it has 6 Equalizer for selection, Off, Rock, Pop, Soft, Jazz, Classical, Techno

7. Bookmark

At the status of recording, press ①“MENU”, it will add a bookmark to your recording, and screen will display a flag. During recording, each time press ①“MENU” it will add a bookmark at this time point, and single recording file could add maximum 10 bookmarks

8.Switch MUSIC/DVR folder

At the status of standby, press and hold “STOP” button, it will switch between “MUSIC” and “DVR” folder (NOTE: press &

hold “STOP”, it will switch between the MUSIC/DVR folder)

9.Delete Mode :

At the status of pause/stop playback or recording, press ①“MENU” button enter “menu options”.

Press ②“|◀◀” or ③“▶▶|” to select “ Delete file”, and then press ①“MENU” enter it.

Press ②“|◀◀” or ③“▶▶|” to select “Delete” or “Delete All”, press①“MENU” confirm deletion. Screen will display “Yes/No”, select “Yes” and press①“MENU” it will delete files (when delete all, that means all recordings

or songs on your recorder will be erased, more file or large files, it needs longer time to delete, at this status, please do not shut down the device, otherwise, it will damage files, and occur unexpected errors)

10. Folder View :

At the status of stop/pause playback and recording, press “MENU” button, enter “menu options”, press “|◀◀” or “▶▶|” to select “Folder View”

Press “MENU” enter it, and then press “|◀◀” or “▶▶|” to select “RECORD” or “song name” , press ①“MENU” confirm the

selection.

11. System Settings

Sleep Timer: It could set the time to shut down the device. Available selection: “OFF, 10mins, 30mins, 60mins, 90mins, 120mins”. When select the time, the device

will start to count down, and no matter it is recording or playing, it will force to shut down the device

Backlight Timer: it set for the screen be lighten on time, available selection: 10seconds, 20seconds, 30seconds, Always on.

We suggest you do not selection Always on, except in need, when always on, it will consume a lot of battery power

Brightness: it set for the screen be from brightness to dim.

Press M(menu) button, enter menu options,

press FF or REW to select system setting,

Press M(menu) enter it

Find Brightness, press M(menu) enter it.

And then press FF or REW to adjust the brightness, and then press M(menu) to confirm setting.

Date and Time : This device comes with high accurate electronics circuits, when the battery has power, after setting correctly time, it will keep the time. If battery is totally drained, device will be reset to default factory setting time.

Language/ 语言 : The device comes with

multiple language

Information : It will show the firmware version and disk space information

Format Device : Enter this setting, press “◀◀” or ③ “▶▶” to select “Yes” or “No”, and press “MENU” to confirm it.

Select “Yes”, and confirm it. All data on the device will be erased, and cannot be restored, be careful when use this.

NOTE: make a backup of the files before you format the device

Factory Settings : Enter this setting, press “◀◀” or ③ “▶▶” to select “Yes” or “No”, and press “MENU” to confirm it.

Select “Yes”, and confirm it. It will restore to factory default setting.

If don't need to restore to factory setting, press “STOP” to cancel it.

12.Recording Format: (8GB)

WAV Format	1536Kbps
Time	720Minutes

MP3 Format	128Kbps	64Kbps
------------	---------	--------

Time	8730 Minutes	17400 Minutes
------	--------------	------------------

NOTE : The form shows the maximum recording file time could be stored in the device, not the battery time

Technical Parameter:

Product Dimension	100*27*10mm
Screen Size	96*64 LCD screen
USB Socket	USB 2.0 High Speed
Memory	8GB
Battery	3.7V230mAh Lion Polymer
8GB Storage	PCM 1536Kbps around 12

Time for Recordings file	hours
Music Playback Battery Time	12 hours (full charge, playback with earbud, screensaver)
Max Battery Time	Full charged, recording at 64kbps could work 20 hours
Support Music Format	MP3/WAV/FLAC/APE/ogg /WMA
Record Bit Rate	1536kbps 128kbps 64kbps
Support System	Windows98/Second/Edition /Millennium/Edition/2000/

	XP/Windows7/ Windows 8
Earphone Output	Max 10mW + 10mW(32Ohm)
	Freq 20Hz ~ 20KHz
	S/N ratio >90dB
	distortion factor 0.05%

Please remember frequently charging your voice recorder even you won't use it for long time. When battery is totally drained, it will do harm to your voice recorder

The manual content is subject to its newest version.

Trouble Shooting Guide

1) No Voice Recordings / No Songs

If there is no voice recordings, or you have deleted all recordings in your voice recorder, when you open your voice recorder, you will see “ no voice recordings” on the screen. Don't worry, you could just go ahead to press REC, it will records, because no any recordings on the device, so some button seems not work.

When show “no songs”, it is because there is no music file on the device, and Just press and hold STOP button switch back to DVR folder.

2) Format Error / Disk Error

Disk Error: do not format your voice recorder on the computer, especially on the Mac computer, that will cause system firmware damaged. When device is

formatting, do not shut down the device. If mistakenly this happened, contact us for system upgrade support@evistr.com

Format Error: this usually happens from 2 aspect:

A. During recording, directly push down the POWER BUTTON to OFF position, that will cause file damage, before switch off your voice recorder, you need to press STOP save the recordings first

B. Computer do not support the .wav file. The recordings were saved as .wav format. For WINDOWS 10 or MAC user may encounter with this issue. Don't worry

You could download the free VLC Media Player to solve this issue

<http://www.videolan.org/vlc/>

Or you could try to recorder at low bit rate, the recording will save as MP3 format

3)How to connect to computer

Use the attached micro USB cable connect to your computer, or your android phone cable

If you failed connect it to your computer, you could contact us, support@evistr.com we will help you solve it, or you could do some trouble shooting

Or you could go to the simple way, just change a new socket or new cable. Because this issue usually happens like you failed connect your flash drive to your computer, they are the same issues.

3) Cannot find my recordings in the recorder

This mainly because when you open the voice recorder, it reads the MUSIC folder, you could long press STOP switch back to music folder

Or you could connect it to your computer to check whether there is recordings in your recorder

4) How to open voice activated function

Go to menu options, find record settings, enter it , select Voice-activated Record, open AVR mode, and press M confirm it.

Now press REC, you will see VOX on the screen, it means you have successfully set voice activated recording function

6) Press REC, it not recording

First check, the recording light blink or not, and the dynamic balanced wave is waving or not

Second, can you see VOX on the screen

If so, it means you have open the voice activated recording function, during this setting, it will only records when high enough decibels sound detected, you could go to record setting, find voice activated sensitivity, and adjust it. It helps

But we suggest you could close the AVR mode, if you do not want this function

7)Why it is only playing 10 seconds each recordings / music

This is because you enter view playing mode, it will playback 10 seconds of each file

At the status of playback, you could press M (menu), enter menu options, find Play settings enter it

Change the play mode to repeat all, press M

(menu), confirm your setting

8) Why it playback in random

In play setting, find play mode, find “Shuffle”, select close, and press M (menu) confirm your setting.

9) How to use the A-B repeat function

During playback, press and hold M, you will see A on the screen, and B is blink, it selected the start point

Long press M again, select point B

Now it will playback between Point A to B

10) The recording is noise

Don't recording near computer, electric fans, air conditioner, sound bar that will easily cause noise, the recorder will pickup this statics noise

11)It suddenly shows delete file

It is because enter the delete mode, select NO, and press M(menu) confirm it, you will exit the delete mode.

12) My recorder auto boot on

This is because the AUTO record function is open, go to record setting, find AUTO record function, and close it.

13) It seems something wrong with the recorder, and cannot correct the settings

Do not worry, go system setting,and select factory setting, restore it to factory setting. And all settings will be restored in default.

Mostly issue will be solved.

14) Space is full

When space is full, you could connect to your computer, and copy out your recordings, and back it up to your computer, and then eject your recorder.

Go to menu options, in system setting, find format device, format the device, all files will be erased. And release new space for your future recording.

The voice recorder has a limited storage at 8GB, so after a while of using, it may be full of storage, you need to back up it on your computer

We will regular update our E-book, based on our customer feedback. We hope to get more interaction from your side, and let us know more we could do, you could visit more of this information from our website:
<http://blog.evistr.com>

Or contact our customer support Support@evistr.com let us help you upgrade the system firmware, when there is a troubles with your recorder, and cannot correct it.