 


# DELLA

## 5.8QT AIR FRYER

Part No. 048-GM-48268

### Instruction Manual

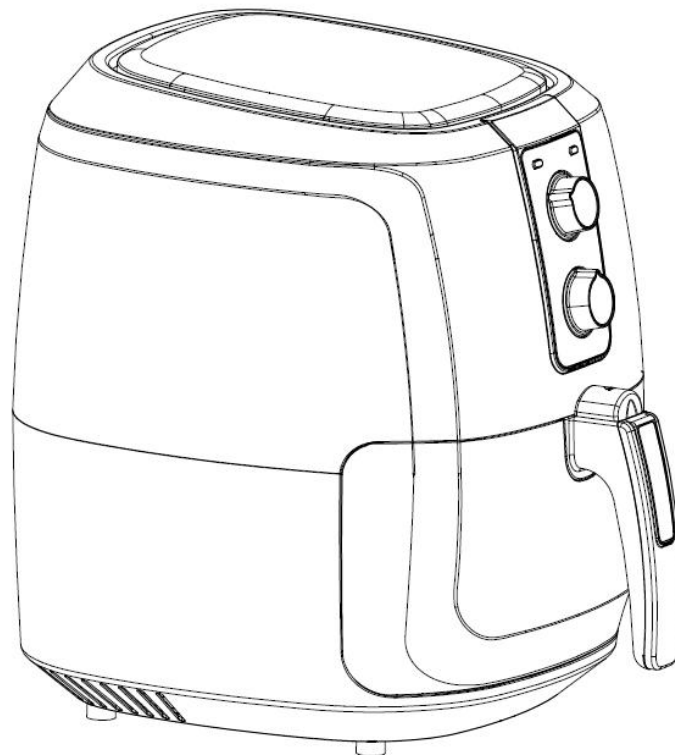


**Easy & good life**

Please carefully read the instruction manual, before using the product. Keep the manual for reference in future.

## Product Structure Diagram:

1. Fry basket
2. Fry drawer
3. Protective cover
4. Push-release button
5. Handle bar
6. Air inlet
7. Power light
8. Heating Indicator lamps
9. Temperature controller (180~390°F)
10. Timer (0-30min)
11. Air outlet
12. Power cable

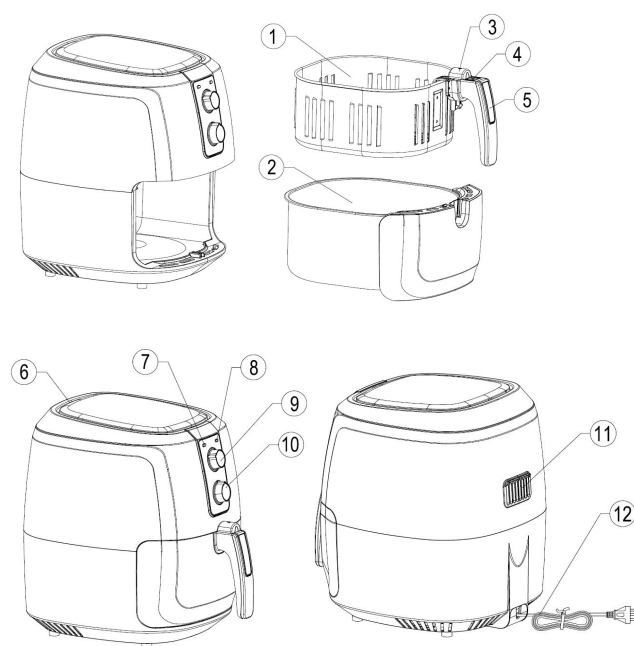

## Cautions:

- Please carefully read the instruction manual, before using the product. Keep the manual for reference in future;
- The product contains electronic elements and heating elements. Do not immerse it in water or wash by water;
- Do not pull the fry basket out while the unit is in use. If in need, please set the timer to 0 before removing the fry basket;
- Do not cover the air inlet and outlet while the unit is operating. Do not touch inside of the product while it is hot;
- Do not fill oil in the basket, otherwise the unit may catch fire;
- High temperature air will flow out through the outlet during the product working process. Please keep a safe distance. Do not put hands and/or faces close to the outlet. When move the basket, please be aware that the unit and the basket will be hot.

## **Security Warning:**

- Do not use the AC power except 120V to avoid electric shock, fire and other accident;
- Please exclusive use socket above 16A. If used with other electric appliance, socket will easy to be abnormal fever, even spark;
- Do not damage, pull or twist the power cord, use it carry heavy loads, or transform it, to avoid electric shock, fire and other accidents. Damaged power cord must be repaired by manufacturer, maintenance department and other similar professional maintenance staff;
- Please do not plug and unplug with wet hands, otherwise can cause electric shock;
- Please keep the plug clean to avoid electric issues;
- Plug tightly, otherwise, easy to cause electric shock, short circuit, smoking, sparking and other dangerous;
- Keep the product away from children at all times.
- Do not place the product on or near the flammable or explosive material, such as tablecloths, curtains and others, to avoid fire hazard;
- Please place the produce away the wall or furniture to avoid damage to wall and/or furniture.
- The appliances are not intended to be operated by means of an external timer of separate remote-control system

This appliances is intended to be used in household applications.

## **Instruction:**

1. Insert power cable into the earthed power socket;
2. Turn the Temperature Controller to desired temperature
3. Turn the Timer to 3 minutes for preheating.
4. When the Yellow Light off, pull the fry drawer out from the appliance, place the food material inside the fry basket (Attention: do not exceed the maximum line);
5. Insert the fry drawer back into appliance;
6. Set the timer to the desired cooking time;
7. When cooking cycle is complete you will hear a chime with 5 beeps. Pull the basket out, place on tray / counter top and remove your meal.

(Note: For best cooking results, open and shake the basket during the cooking process )

## **Care and Maintenance**

1. Please unplug the power cord and let it cool before cleaning products.
2. Used a damp cloth to wipe the surface of the fryer, do not use corrosive liquids for cleaning. Always clean after use.
3. Never place the power cord or the appliance in. Doing so will do irreversible harm and the product will be permanently damaged.
4. Please store the appliance in a cool and dry place.


## **Technical Specifications:**

1. Rated Voltage: 120V
2. Rated frequency: 60Hz
3. Rated power: 1800W
4. Fry basket capacity:5.8QT
5. Net weight: 12Lbs
6. Product Size: 12.2\*14.6\*15Inches

## Troubleshooting:

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Does not work	● Power cord has not been inserted into the power socket	● Closely insert the power cord into the grounded power socket.
	● Did not set the timer	● Set the timer to desired cooking time, then product able to connect with power.
Food is rare when time out	● Too much food in the basket	● Fry food in turns
	● Temperature set is too low	● Set to an appropriate temperature, re-fry food.
	● Cooking time is short	● Set an appropriate cooking time, re-fry food.
Did not fry food evenly	● Some type of food material should be shaking in middle of cooking time	● In the middle of cooking process, pull the drawer out and shake it for separate the overlapped food material, then push the drawer back to continue.
Fried food is not crisp	● Some food materials have to be fried with oil	● Plush a thin layer of oil on the surface of the food material first, then start to fry them.
Can not smoothly push the drawer back to product	● The drawer with too many food materials is too heavy	● The food material in the basket can not exceed the max. line.
	● The basket is not correctly placed in the drawer.	● Press the basket into the drawer.
	● Handle bar stuck	● Place the handle bar in horizontal position.
Smoking	● Frying oily food	● Normal phenomenon.
	● Fryer contain oil from last use	● Please clean the drawer and basket after use.
<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Does not work	● Power cord has not been inserted into the power socket	● Closely insert the power cord into the grounded power socket.
	● Didn't set the cook model	● Set the timer to desired cooking time, then product able to connect with power.
	● Didn't click the ON/OFF button (8) after select cook model.	● Click the ON/OFF button (8)
Food is rare when time out	● Too much food in the basket	● Fry food in turns
	● Temperature set is too low	● Set to an appropriate temperature, re-fry food.

	<ul style="list-style-type: none"> <li>● Cooking time is short</li> </ul>	<ul style="list-style-type: none"> <li>● Set an appropriate cooking time, re-fry food.</li> </ul>
Did not fry food evenly	<ul style="list-style-type: none"> <li>● Some type of food material should be shaking in middle of cooking time</li> </ul>	<ul style="list-style-type: none"> <li>● In the middle of cooking process, pull the drawer out and shake it for separate the overlapped food material, then push the drawer back to continue.</li> </ul>
Fried food is not crisp	<ul style="list-style-type: none"> <li>● Some food materials have to be fried with oil</li> </ul>	<ul style="list-style-type: none"> <li>● Plush a thin layer of oil on the surface of the food material first, then start to fry them.</li> </ul>
Can not smoothly push the drawer back to product	<ul style="list-style-type: none"> <li>● The drawer with too many food materials is too heavy</li> </ul>	<ul style="list-style-type: none"> <li>● The food material in the basket can not exceed the max. line.</li> </ul>
	<ul style="list-style-type: none"> <li>● The basket is not correctly placed in the drawer.</li> </ul>	<ul style="list-style-type: none"> <li>● Press the basket into the drawer.</li> </ul>
	<ul style="list-style-type: none"> <li>● Handle bar stuck</li> </ul>	<ul style="list-style-type: none"> <li>● Place the handle bar in horizontal position.</li> </ul>
Smoking	<ul style="list-style-type: none"> <li>● Frying oily food</li> </ul>	<ul style="list-style-type: none"> <li>● Normal phenomenon.</li> </ul>
	<ul style="list-style-type: none"> <li>● Fryer contain oil from last use</li> </ul>	<ul style="list-style-type: none"> <li>● Please clean the drawer and basket after use.</li> </ul>

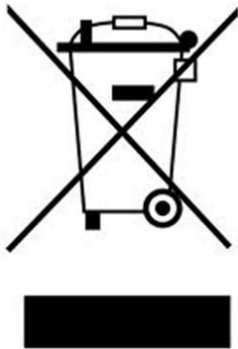

**Correct Disposal of this product:**

This marking indicates that this product should not be disposed with other household wastes throughout the EU / USA. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material resources.

**Warranty Card:**

Model		Sales Date	
Invoice Number		Retail Store	
Date	Content		Maintenance Staff (signature)