


PLYLE[®]

PLR44MU

OWNER'S MANUAL Mobile Audio System

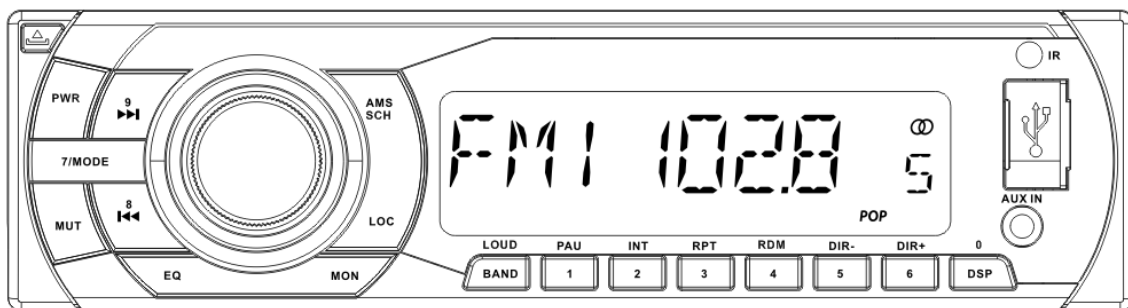

- **PLL Synthesizer Stereo Radio**
- **Automatic Memory Storing**
- **Full Detachable Panel**
- **Preset Equalization**
- **USB Interface**
- **SD/MMC Interface**

www.pyleaudio.com


CONTENTS

Installation	3
Take out screw before installation.....	3
DIN Front-Mount (Method A)	3
Installing the unit	3
Removing the unit	4
DIN Rear-Mount (Method B).....	5
Using the detachable front panel	6
Wiring Connection	7
Operation	8
Location of keys	8
Switching on/off the unit.....	9
Faceplate release	9
Sound adjustment	9
Loudness.....	9
Display information	9
Liquid crystal display.....	9
Reset function	9
Radio operation.....	9
Switching to radio mode.....	9
Selecting the frequency band.....	10
Selecting station	10
Automatic memory storing& program scanning.....	10
Station storing	10
USB play operation	10
Selecting tracks in single step.....	10
Selecting directory up/down	10
Pausing playing	10
Previewing all tracks.....	10
Repeating the same track	10
Playing all tracks in random	10
SD/MMC operation	10
Remote control.....	12
Specification.....	13
Trouble shooting.....	14

INSTALLATION

Notes:

 - Choose the mounting location where the unit will not interfere with the normal driving function of the driver.
- Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system work properly.
- Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.
- Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.
- If installation angle exceeds 30° from horizontal, the unit might not give its optimum performance.



- Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from the heater, or where it would be subject to dust, dirt or excessive vibration.


DIN FRONT/REAR-MOUNT

This unit can be properly installed either from "Front" (conventional DIN Front-mount) or "Rear" (DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis). For details, refer to the following illustrated installation methods.

DIN FRONT-MOUNT (Method A)

Installation Opening


This unit can be installed in any dashboard having an opening as shown below:

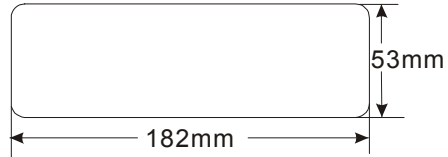

Installing the unit


Be sure you test all connections first, and then follow these steps to install the unit.

1. Make sure the ignition is turned off, and then disconnect the cable from the vehicle battery's negative (-) terminal.
2. Disconnect the wire harness and the antenna.
3. Press the release button on the front panel and remove the control panel (see the steps of "removing the front panel").
4. Lift the top of the outer trim ring then pull it out to remove it.
5. The two supplied keys release tabs inside the unit's sleeve so you can remove it. Insert the keys as far as they will go (with the notches facing up) into the appropriate slots at the middle left and right sides of the unit. Then slide the sleeve off the back of the unit.

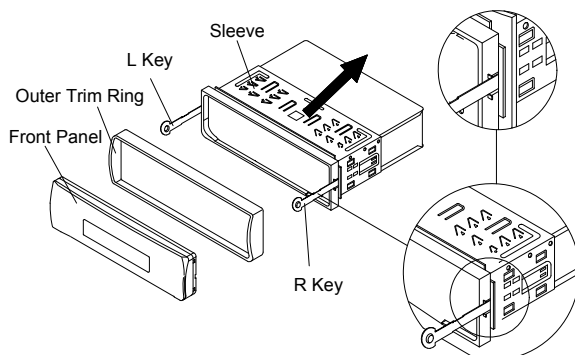

INSTALLATION


6. Mount the sleeve by inserting the sleeve into the opening of the dash bend open the tabs located sleeve with a screwdriver. You will be able to make contact. Examine which ones will be effective. Bending open the tabs behind the dashboard will hold the sleeve in place.

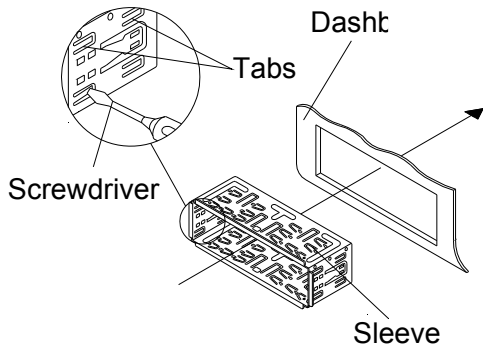

7. Reconnect the wire harness and the antenna and be careful not to pinch any wires or cables.
8. Slide the unit into the sleeve until it locks into place.
9. To further secure the unit, use the supplied metal strap to secure the back of the unit in place. Use the supplied hardware (Hex Nut (M5mm) and Spring Washer) to attach one end of the strap to the mounting bolt on the back of the unit. If necessary, bend the metal strap to fit your vehicle's mounting area. Then use the supplied hardware (Tapping Screw (5x25mm) and Plain Washer) to attach the other end of metal strap to a solid metal part of the vehicle under the dashboard. This strap also helps ensure proper electrical grounding of the unit.

Note to install the short threading terminal of the mounting bolt to the back of the unit and the other long threading


terminal to the dashboard

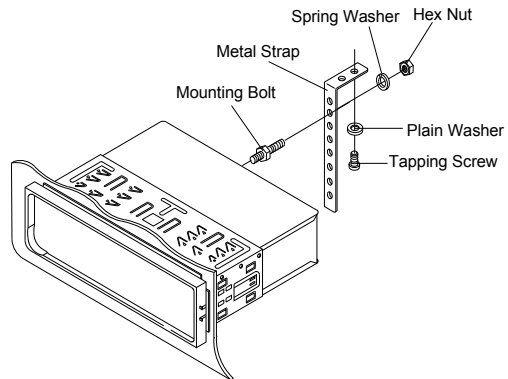

10. Reconnect the cable to the vehicle battery's negative (-) terminal. Then replace the outer trim ring and install the unit's front panel (see the steps of "installing the front panel").

Removing the unit

1. Make sure the ignition is turned off, then disconnect the cable from the vehicle battery's negative (-) terminal.
2. Remove the metal strap attached the back of the unit (if attached).
3. Press the release button to remove the front panel.
4. Lift the top of the outer trim ring then pull it out to remove it.
5. Insert both of the supplied keys into the slots at the middle left and right sides of the unit, then pull the unit out of the dashboard.

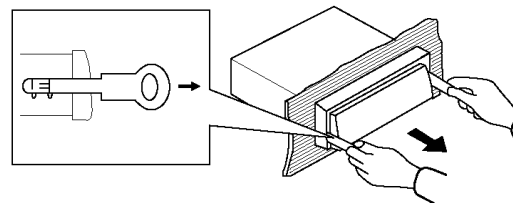


DIN REAR-MOUNT (Method B)

If your vehicle is a Nissan, Toyota, follow these mounting instructions. Use the screw holes marked T (Toyota), N (Nissan) located on both sides of the unit to

INSTALLATION

fasten the unit to the factory radio mounting brackets supplied with your vehicle.

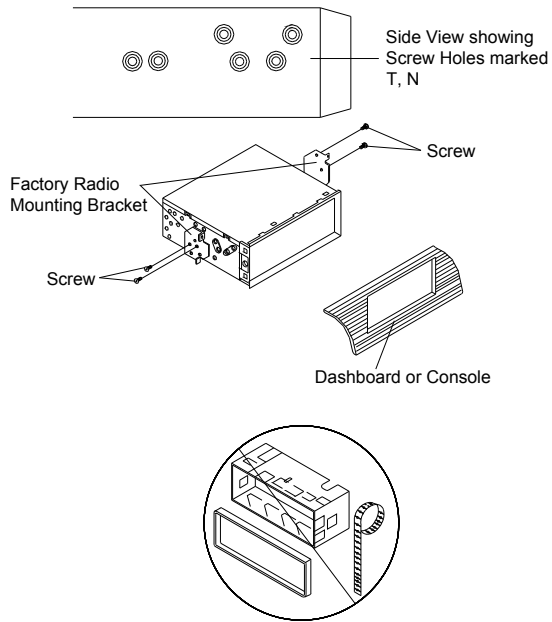

To fasten the unit to the factory radio mounting brackets.



Align the screw holes on the bracket with the screw holes on the unit, and then tighten the screws (5x5mm) on each side.

Note: the outer trim ring, sleeve and the metal strap are not used for method B installation.


USING THE DETACHABLE FRONT PANEL

REMOVING THE FRONT PANEL

1. Press the release button (▲) on the front panel and pull off the front panel.

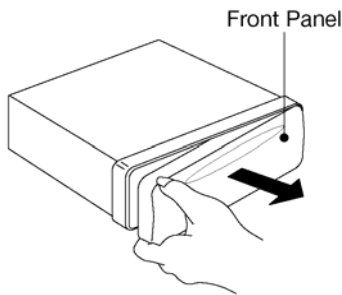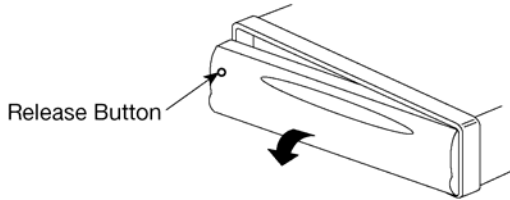


2. Keep front panel into the case.

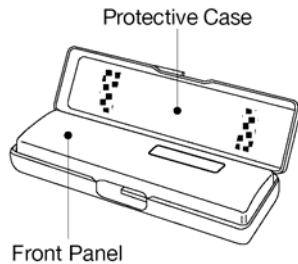

INSTALLING THE FRONT PANEL

To install the front panel, insert the panel into the housing and make sure the panel is properly installed. Otherwise, abnormality occurs on the display or some keys will not function properly.

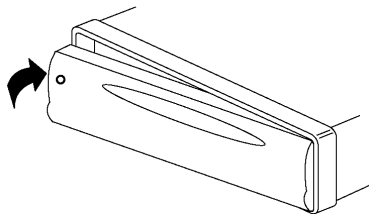


Precautions when handling

1. Do not drop the front panel.
2. Do not put pressure on the display or control buttons when removing or installing the front panel.
3. Do not touch the contacts on the front panel or on the main unit body. It may result in poor electrical contact.
4. If any dirt or foreign substances adhered on the contacts, they can be removed with a clean and dry cloth.
5. Do not expose the front panel to high temperatures or direct sunlight in anywhere.
6. Keep away any volatile agents (e.g. benzene, thinner, or insecticides) from touching the surface of the front panel
7. Do not attempt to disassemble the front panel.


WIRING CONNECTION

ISO CONNECTION

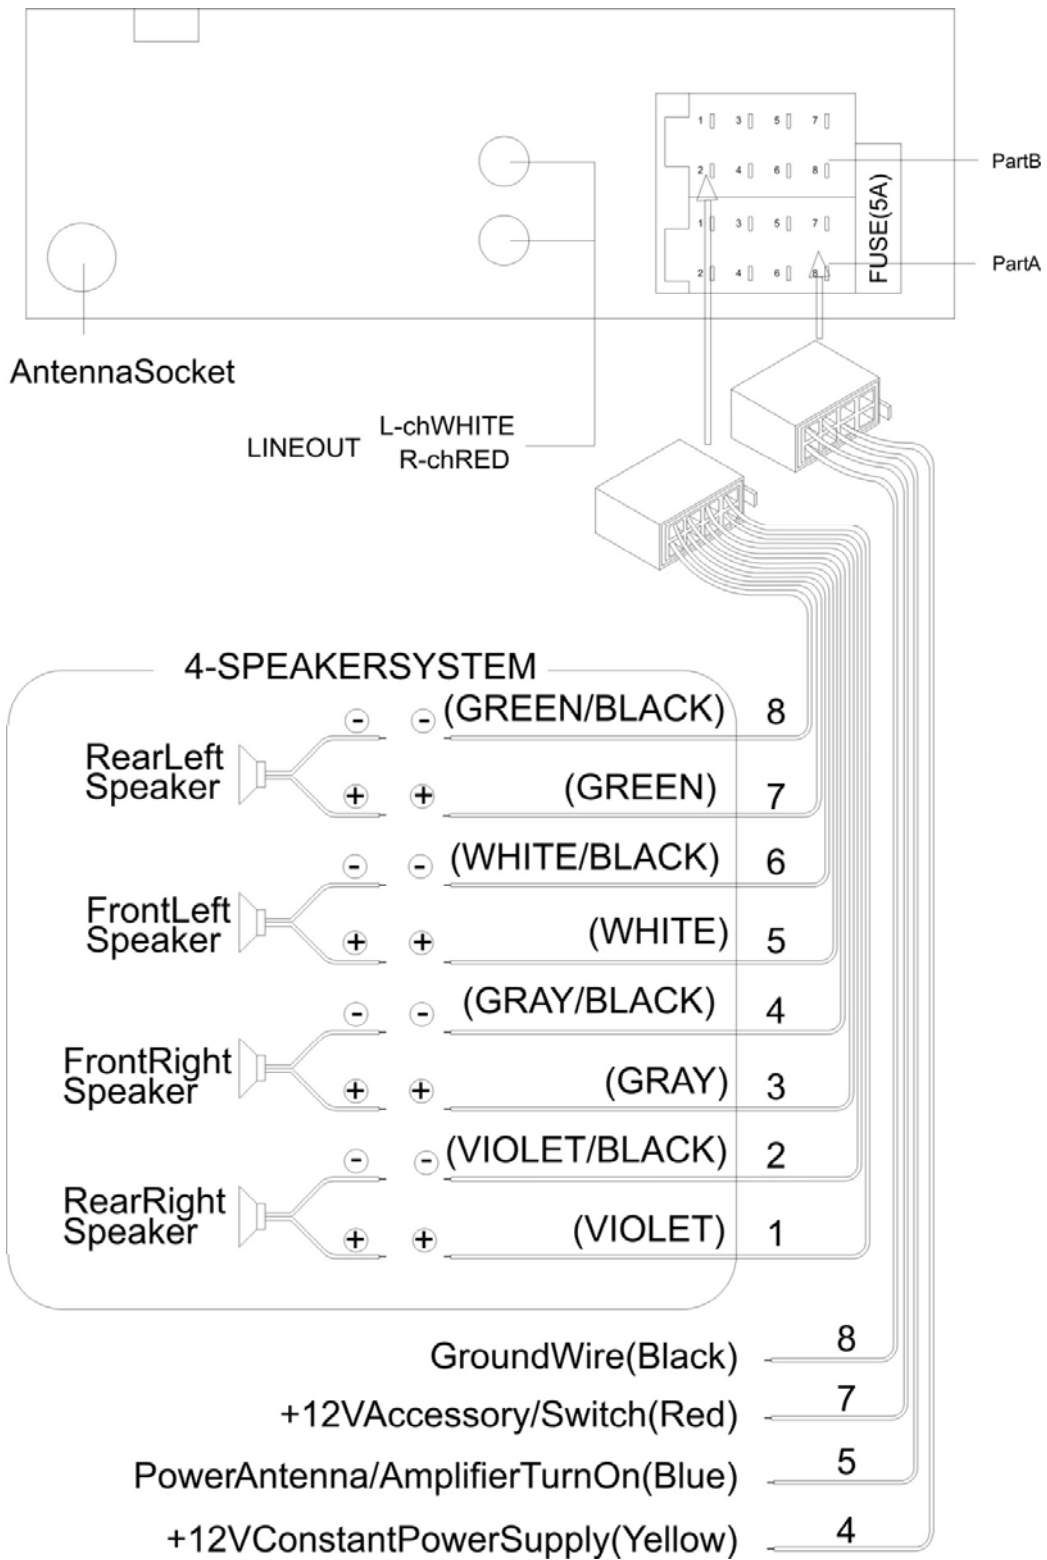

OPERATION

LOCATION OF KEYS

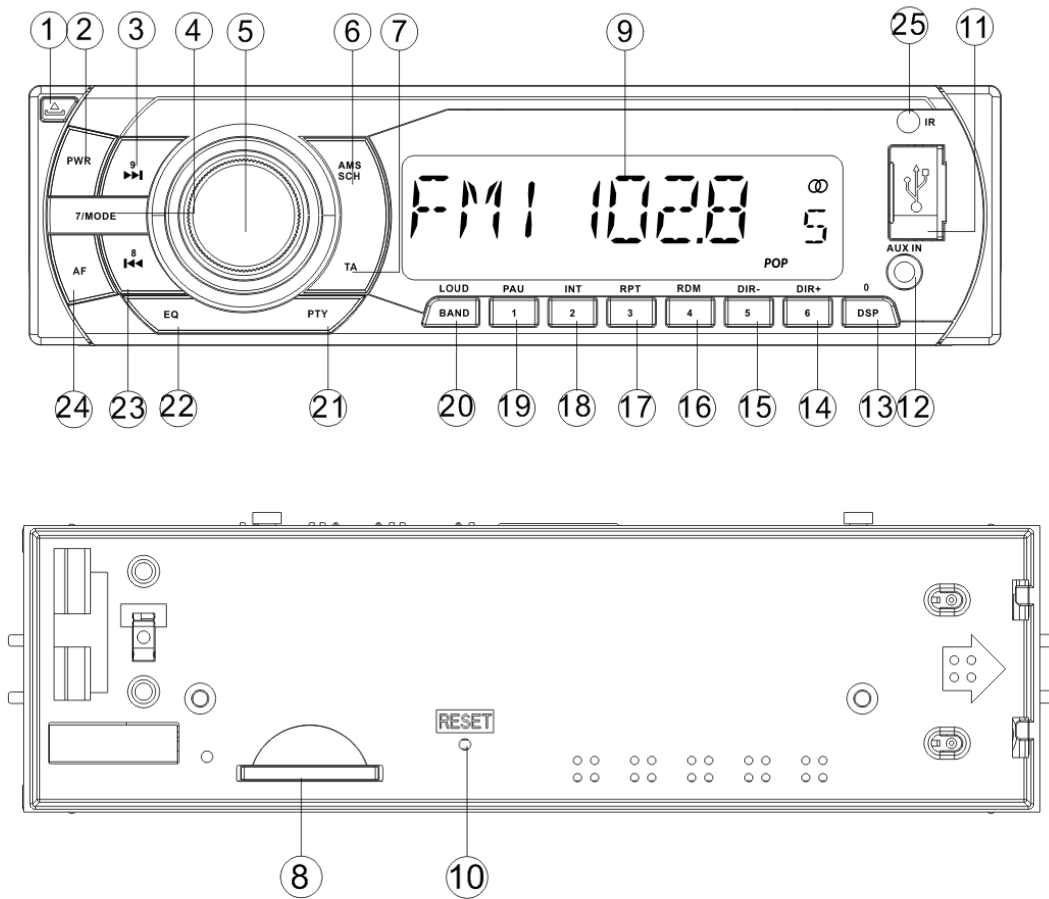

- 1. (release button)
- 2. PWR
- 3.
- 4. 7/MODE
- 5. SEL/VOL
- 6. AMS/SCH
- 7. LOC
- 8. Reset button
- 9. LCD
- 10. SD/MMC interface
- 11. USB interface
- 12. AUX IN
- 13. 0 DSP
- 14.6 DIR+


- 15.5 DIR-
- 16.4 RDM
- 17.3 RPT
- 18.2 INT
- 19. 1 PAU
- 20. BAND/LOUD
- 21. MON
- 22. EQ
- 23.
- 24. MUT
- 25. IR

OPERATION

SWITCHING ON/OFF THE UNIT

Press **PWR** button (2) to turn on/off the unit.

FACEPLATE RELEASE

Press release button  (1) to detach the removable faceplate.

SOUND ADJUSTMENT

Press **SEL** button (5) shortly to select the desired adjustment mode. The adjustment mode will change in the following order:

→BAS-TRE-BAL-FAD-LOUD-EQ-DX-ST-VOL

BAS: bass
TRE: treble
BAL: balance
FAD: fader
LOUD: loudness
EQ: equalization
DX: distance
ST: STEREO
VOL: volume

By rotating the audio knob (5) clockwise or counter-clockwise, it is possible to adjust the desired sound quality.

LOUDNESS

Long press the **BAND** button to active the **LOUD** function. Press it and hold again to cancel this function.

MUTE

Press **MUTE** button (24) to mute down the sound instantly. If any button is pressed in the mute state, the mute state is released.

LOCAL

Press **LOC** button (7) to select between local and distant stations.

 
Local setting for reception of strong station, and a distant setting for reception of weaker stations. This function is effect during **SEEK** operation.

MONO

Press **MON** button (21) to select mono or stereo mode. You can sometimes improve reception of distant stations by selection

EQUALIZATION

Press **EQ** button (22) shortly to turn on equalization function and to select desired audio mode. There are five kinds of mode as below:



DISPLAY INFORMATION

Press **DISP** button (9) to show the time

LIQUID CRYSTAL DISPLAY

Exhibit current frequency and activated functions on the display .


RESET FUNCTION

RESET button (8) must be activated with either a ballpoint pen or thin metal object. The **RESET** button is to be activated for the following reasons:

- Initial installation of the unit when all wiring is completed.
- All the function buttons do not operate.
- Error symbol on the display.

Note: if press **RESET** button (8), the unit can't work yet, please use a cotton swab soaked in isopropyl alcohol to clean the socket on the front panel.

As photos :

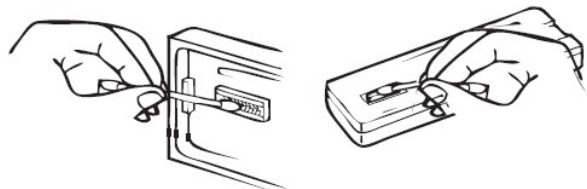

RADIO OPERATION

• SWITCHING TO RADIO MODE

Press **MODE** button (4) to select radio

OPERATION

mode, the radio mode appears in the display together with the memory band and frequency.

- **SELECTING THE FREQUENCY BAND**
At radio mode, press **BAND** button (20) shortly to select the desired band. The reception band will change in the following order:

→FM1→ FM2→ FM3 → MW1→ MW2

- **SELECTING STATION**
Press **▶▶** button (3) or **◀◀** button (23) shortly to activate automatic seek function. Press for several seconds until “**MANUAL**” appears on the display, the manual tuning mode is selected. If both buttons have not been pressed for several seconds, they will return to seek tuning mode and “**AUTO**” appears on the display.
- **AUTOMATIC MEMORY STORING & PROGRAM SCANNING**
 - Automatic memory storing
Press **AMS** button (6) for several seconds, the radio searches from the current frequency and checks the signal strength until one cycle search is finished. And then 6 strongest stations are stored into the corresponding preset number button.
 - Program scanning
Press **AMS** button (6) shortly to scan preset station. The radio is holding at that preset number for several seconds with release mute, then searches again.
- **STATION STORING**
To received a station, Press one of the preset button (1~6) for 2 seconds. current station is stored into the number Button.

USB PLAY OPERATION

On the front panel of the unit, there is an USB interface (11). You can connect an USB driver through this interface (11). When you connect an USB driver through the interface, the unit will search the MP3 files or WMA files in the USB driver and start to play MP3 files or WMA files automatically. If in other mode, you can also press **MODE** button (4) to select USB mode.

It supports the MP3/WMA file in the device, the operation please refer to the following instruction.

SELECTING SONGS IN SINGLE STEP

Press **▶▶** button (3) or **◀◀** button (23) to move to the following song or the previous song. Track number shows on display.

SELECTING DIRECTORY UP/DOWN

Press **5 DIR-**button (15) or **6 DIR+**button (14) to select previous directory or next directory.

PAUSING PLAYING

Press **1 PAU** button (19) to pause playing. Press it again to resume playing.

PREVIEWING ALL FILES

Press **2 INT** button (18) to **INTRO** each file. Shortly press again to stop intro and start to play.

REPEATING PLAYING

Press **3 RPT** button (17) to continuously repeat the same file. Press it again to repeat all files.

PLAYING IN RANDOM ORDER

Shortly press **4 RDM** button (16) to play all files in random order. Press it again to cancel the function.

SD/MMC OPERATION

There is a SD/MMC interface (10) on the front panel of the unit.

When you insert a SD/MMC card in the

OPERATION


SD/MMC interface, the unit will search the MP3 files or WMA files in the card and start to play automatically. The operation is the same with the USB play operation described above.

If in other mode, you can also press **MODE** button (4) to select SD/MMC mode.

CAUTION:

When there are important files in the USB Device or SD card, do not connect it to the main unit to play, because any wrong operation may cause files loss. And our company assumes no responsibility for this.

REMOTE CONTROL HANDSET(OPTIONAL)

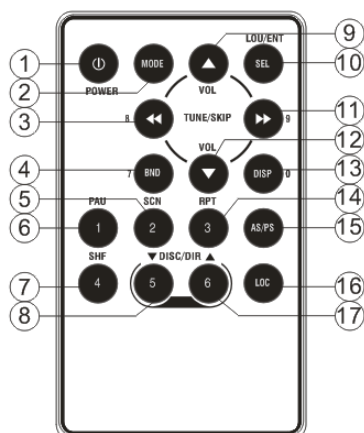

FUNCTION KEY & CONTROL

- POWER Power ON/OFF Button
- MODE Mode Button(S,T,U,7,For MP3/WMA Operation)
- TUNE/SKIP◀◀ (8) Tune/SKIP Down Button(V,W,X,8 For MP3/WMA Operation)
- 7/BND Band Select Button(When pressed shortly)
- SCN Scanning Button(D,E,F,2 For MP3/WMA Operation)
- PAU Pause Button (A,B,C,1 For MP3/WMA Operation)
- SHF Shuffle Button (J, K, L 4 For MP3/WMA Operation)
- DIR▼ DIR▼ Button
- VOL▲ Volume Up Button
- SEL (LOU/ENT) Sound Mode Select Button
- TUNE/SKIP▶▶ (9) Tune/SKIP Up Button(Y,Z,SPACE,9 For MP3/WMA Operation)
- VOL ▼ Volume Down Button
- DSP(0) Display Button(␣,-,+,0 For MP3/WMA Operation)
- RPT Repeat Button(G,H,I,3 For MP3/WMA Operation)
- AS/PS(D-AUD) Automatic Memory Storing & Program Scanning Button (Mode Select Button For MP3/WMA Operation)
- LOC Local/Distant Select Button
- DIR▲ DIR▼ Button

SPECIFICATION

GENERAL

Power Supply Requirements	: DC 12 Volts, Negative Ground
Chassis Dimensions	: 178 (W) x 107 (D) x 50 (H)
Tone Controls	
- Bass (at 100 Hz)	: ± 10 dB
- Treble (at 10 kHz)	: ± 10 dB
Maximum Output Power	
- Version V	: 4x60 watts
Current Drain	
- Version V	: 5 Ampere (max.)
- Power Version)	

RADIO

For 2 Bands (Europe) FM

Frequency Coverage	87.5 to 108 MHz
IF	10.7 MHz
Sensitivity (S/N=30dB)	4 μ V
Stereo Separation	>25dB

AW

Frequency Coverage	520 to 1710 kHz
IF	450 kHz
Sensitivity (S/N=20dB)	36 dBu

TROUBLE SHOOTING

Before going through the checklist, check wiring connection. If any of the problems persist after checklist has been made, consult your nearest service dealer.

Symptom	Cause	Solution
No power	The car ignition switch is not on	If the power supply is connected to the car accessory circuits, but the engine is not moving, switch the ignition key to "ACC"
	The fuse is blown.	Replace the fuse
No sound	Volume is in minimum	Adjust volume to a desired level
	Wiring is not properly connected	Check wiring connection
The operation keys do not work	The built-in microcomputer is not operating properly due to noise	Press the reset button
The radio does not work. The radio station automatic selection does not work	The antenna cable is not connected	Insert the antenna cable firmly
	The signals are too weak	Select a station manually