

Using a Nintendo Switch Pro Controller

In addition to the Joy-Con controllers, you can also play Nintendo Switch with the Pro Controller (sold separately). This controller allows you to play comfortably for longer periods of time when the console is in TV mode or tabletop mode.

When you are using the console in TV mode, you can attach the Pro Controller to the dock with the USB charging cable (HAC-010) to pair or charge it.



When the Pro Controller is done charging, you can disconnect it from the USB charging cable and use it wirelessly.



USB Type-C™ and USB-C™ are trademarks of the USB Implementers Forum.