

PARTY BUBBLE MACHINE

WARNINGS

CAUTION: RISK OF ELECTRIC SHOCK. DISCONNECT THE APPLIANCE FROM ELECTRIC SUPPLY BEFORE REFILLING LIQUID, CLEANING OR PERFORMING MAINTENANCE.

- Keep this device dry. Party Bubble Machine is not waterproof or splash proof. If moisture, water or bubble solution gets inside the housing, immediately unplug and seek professional maintenance help.
- Keep Party Bubble Machine upright.
- Turn off power when not in use.
- For indoor and outdoor use.
- Adult use only. Place out of reach of children. Never leave unit running unattended.
- Do not transport with liquid in reservoir
- Turn off machine when refilling.
- Position output of bubbles away from people
- Extended use will make all surfaces slippery. Use caution.
- To wash, simply rinse plastic reservoir out with water.

UNPACKING

Open shipping carton and check to see that all equipment has arrived intact. Before the initial setup of your Party Bubble machine, make sure that there is no evident damage from transportation. Seek professional maintenance if the unit housing or cable is damaged. If damaged, do not attempt to plug in. *Party Bubble Machine does not come with bubble solution.*

Please check your shipping carton for the following items.

1. One Party Bubble Machine Unit
2. Two adjustable handle fasteners
3. Metal handle

SETUP

1. Open shipping carton and remove all packing materials from the bubble machine.
2. Place bubble machine on flat surface.
3. Line up handle with the two holes on each side of the machine.
4. Screw handle fasteners into holes and position handle as desired.
5. Fill reservoir with bubble machine bubble solution. Make sure your bubble solution level does not exceed the screw holes on the reservoir. Liquid may leak and cause damage to electrical components and/or electrical shock.

NOTE: Not all bubble solution is made for the Party Bubble Machine. Use only bubble machine bubble solution. Other bubble solutions may shorten the life of your machine. Do not overfill.

6. Plug into three-prong grounded electrical outlet only.
7. Hit the on/off switch and watch thousands of bubbles fill the room.
8. Turn off your machine when not in use.

DETAILS

Voltage: AC110-220-240 - v / 50 to 60 hz

Power: 50 w

Insurance: 3 a motor: AC112-220 - v

Liquid consumption: 40 oz. (1.2 liters) per hour

Features: spray distance of 6.5 ft.