



# **Spro2**

## **User Manual**

## About This Manual

Thank you for choosing this ZTE device. Read this manual and keep it for future reference.

### Copyright

**Copyright © 2015 ZTE CORPORATION**

**All rights reserved.**

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

### Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to [For Your Safety](#) to be sure to use the device properly and safely.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at [www.zteusa.com](http://www.zteusa.com)) for more information on self-service and supported product models. Information on the website takes precedence.

### Disclaimer

ZTE Corporation expressly disclaims any liability for faults and

damages caused by unauthorized modifications of the software. Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

## Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*<sup>®</sup> trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.



Qualcomm<sup>®</sup> Snapdragon<sup>™</sup> processors are products of Qualcomm Technologies, Inc.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.



DLP is the trademark of Texas Instruments.



microSDHC Logo is a trademark of SD-3C, LLC.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby

Laboratories.

Other trademarks and trade names are the property of their respective owners.

**Version No.:** R1.0

**Edition Time:** September 21, 2015

# Contents

<b>Getting Started</b> .....	<b>10</b>
Getting to Know the Spro2.....	10
Installing the microSDHC™ Card (Not Included).....	13
Charging the Battery .....	15
Powering the Spro 2 On and Off .....	16
Restarting the Spro2 .....	16
Waking Up the Spro2 .....	16
Initial Set Up .....	17
Turning the Projector On and Off.....	17
Adjusting the Projection.....	18
Using the Touch Screen .....	19
Getting to Know the Home Screen .....	22
<b>Personalizing</b> .....	<b>25</b>
Changing the System Language .....	25
Setting the Date and Time .....	25
Changing the Notification Sound .....	25
Turning On/Off Other System Sounds .....	26
Adjusting Volume .....	26
Switching to Silent Mode .....	26
Applying New Wallpapers.....	26
Changing Screen Brightness.....	27
Protecting the Spro2 with Screen Locks .....	27
Protecting the Spro2 with Encryption .....	28

<b>Knowing the Basics</b> .....	<b>30</b>
Monitoring the Device Status.....	30
Managing Notifications.....	31
Entering Text .....	33
Editing Text.....	35
Opening and Switching Apps .....	36
<b>Projection</b> .....	<b>37</b>
Projecting a File Saved in the Spro2 .....	37
Projecting an HDMI Source.....	38
Projecting a File Saved on the USB Device.....	39
Projecting a Source on the Phone Using Miracast - Wi-Fi	
Display .....	41
<b>Remote Control</b> .....	<b>43</b>
Downloading and Installing the Remote Control App .....	43
Connecting to Spro2 and Using the Remote Control App..	43
<b>Connecting to Networks and Devices</b> .....	<b>47</b>
Connecting to Wi-Fi® .....	47
Using Wi-Fi Direct® .....	51
Connecting to Bluetooth® Devices.....	53
Connecting to the Computer Using USB .....	56
Connecting to a USB Device.....	59
Connecting to a Webcam.....	60
Setting the Spro2 as a Virtual Hotspot (LAN Access Point)	61
Connecting to Virtual Private Networks .....	63

 
<b>Accounts .....</b>	<b>65</b>
Adding or Removing Accounts.....	65
Configuring Account Sync .....	66
<b>Gmail™ .....</b>	<b>67</b>
Opening Your Inbox.....	67
Switching Accounts .....	67
Writing and Sending a Message .....	68
Replying to or Forwarding a Message .....	68
Working with Gmail Labels .....	69
Changing Gmail Settings.....	70
<b>Web Browser.....</b>	<b>71</b>
Opening the Browser .....	71
Using Multiple Browser Tabs .....	71
Downloading Files.....	72
Changing Browser Settings .....	72
<b>Gallery .....</b>	<b>73</b>
Opening Gallery .....	73
Working with Albums .....	73
Working with Pictures.....	74
Playing Videos .....	75
<b>Play Music .....</b>	<b>76</b>
Copying Music Files to the Spro2 .....	76
Playing Music.....	77
Managing Playlists .....	79

 
 
<b>Video Player .....</b>	<b>80</b>
Opening the Video Library .....	80
Playing and Controlling Videos .....	80
<b>Sound Recorder .....</b>	<b>81</b>
<b>More Apps.....</b>	<b>82</b>
Camera .....	82
Dolby.....	82
Downloads.....	82
File Manager .....	83
Google Apps.....	83
<b>Google Play™ Store .....</b>	<b>85</b>
Browsing and Searching for Apps .....	85
Downloading and Installing Apps.....	85
Creating a Google Wallet™ Account .....	86
Managing Downloads .....	86
<b>Settings.....</b>	<b>87</b>
Network.....	87
Device.....	88
Local .....	91
Projector Settings .....	96
<b>Troubleshooting.....</b>	<b>98</b>
<b>For Your Safety .....</b>	<b>100</b>
General Safety.....	100

Radio Frequency (RF) Energy.....	101
FCC Compliance.....	102
Distraction.....	103
Product Handling .....	104
Electrical Safety .....	107
Radio Frequency Interference .....	107
Explosive Environments .....	109

# Getting Started

## Getting to Know the Spro2

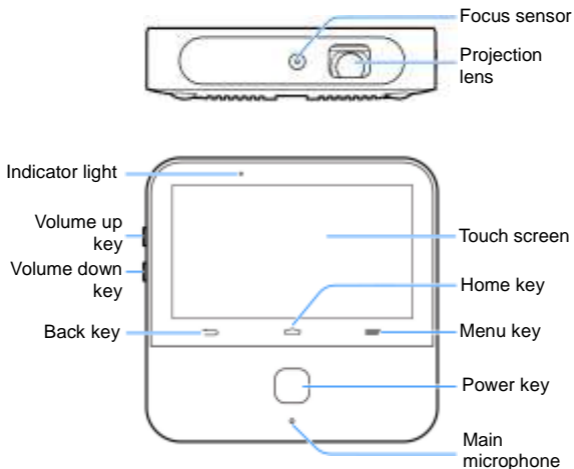

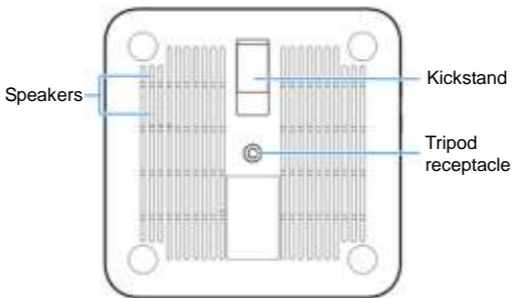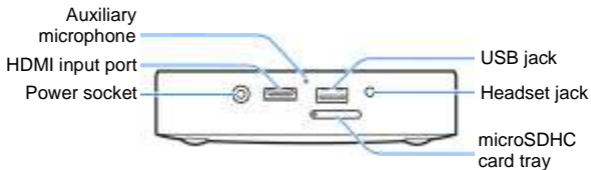

## Projection lens

Project the display on a surface.



**WARNING!** Do not look directly into the projection lens or point the lens toward people or animals' eyes when the projector is on as this may cause injury to the eyes.

## Focus sensor

Analyze the clarity of the projected image in order for the projector to adjust its focus automatically.

## Back

Touch to go to the previous screen.

## Home

- Touch to return to the **HOME** tab of the home screen.
- Touch and hold to use Google Search.

## Menu

- Touch to get options for the current screen.
- Touch and hold to see recently used apps.

## Volume up and down

Press or hold to turn the volume up or down.

## Power


- Press and hold to power on, power off, or restart the Spro2.
- Press to turn off or on the screen display.
- Press twice quickly when the projector is on to automatically adjust focus.

## Main microphone / Auxiliary microphone

Transmit your voice. The auxiliary microphone is useful for cancelling ambient noise.

## Ventilation port

Exhaust hot air when the projector is on.

 **WARNING!** Do not place anything near the ventilation port as this may cause internal heat accumulation. Do not place your hand near the ventilation port as this may cause injury.

 
## Tripod receptacle

Connect a tripod (not included in the packaging).

 
## Installing the microSDHC™ Card (Not Included)


The Spro2 must be on to install or remove a microSDHC card. unmount the microSDHC card before removing it. For more information, see [Remove the microSDHC Card From the Spro2.](#)

1. Turn the Spro2 upside down.
2. Insert the tip of the tray eject tool into the hole on the microSDHC card tray and take the tray out of the slot.

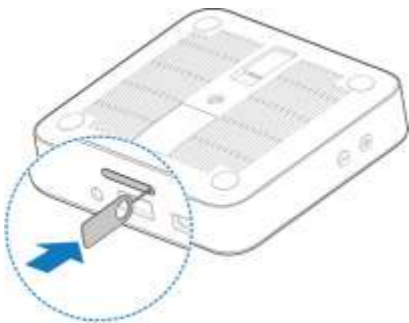

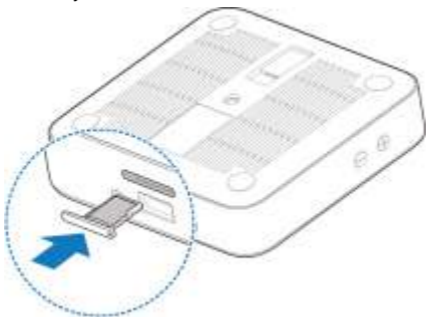

3. Place the microSDHC card on the tray as shown and carefully install the tray back.




-  **NOTE:** Some applications may require a microSDHC card to work properly if it stores certain data on it. Therefore, it is recommended that you keep a microSDHC card installed and not to remove or replace it unnecessarily.


## Charging the Battery

 You should fully charge the battery before using Spro2. Out of the box the battery should have enough power for Spro2 to turn on.

-  **WARNING!** Use only ZTE-approved chargers and cables. The use of unauthorized accessories may cause damage.
-  **CAUTION:** Do not try to remove or change the built-in rechargeable battery in the Spro2. Doing so violates the ZTE warranty policy. Contact customer service for support.
1. Plug the AC adapter into the power socket on the Spro2 and then put the plug into an electrical outlet.

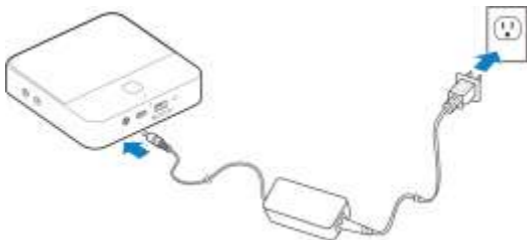

2. Disconnect the adapter when the battery is fully charged.

 **NOTE:** If the battery is extremely low, you may not be able to power on Spro2 even when it is charging. Allow Spro2 to charge longer and try again. Contact customer service if you still cannot power on Spro2 after prolonged charging.

## Powering the Spro 2 On and Off

Ensure that the battery is charged.

- Press and hold the **Power** button to turn on the Spro2.
- To power it off, press and hold the **Power** button to open the options menu. Touch **Power off** and touch **OK**.

## Restarting the Spro2


If the screen freezes or takes too long to respond, try pressing and holding the **Power** button for about 10 seconds to restart Spro2.

## Waking Up the Spro2

The Spro2 automatically goes into sleep mode when it is not in use for certain time. The touch screen is turned off to save power and the keys are locked to prevent accidental operations.

You can wake up the Spro2 by following the instruction as below.

1. Press the **Power** button to turn the touch screen on.
2. Touch and hold any area of the screen to unlock Spro2.


 **NOTE:** If you set an unlock pattern, a PIN or a password for the Spro2, draw the pattern, or enter the PIN/password to unlock the Spro2. For more information about setting an unlock pattern, see [Protecting the Spro2 With Screen Locks.](#)

 
## Initial Set Up

When you first power on the Spro2 or reset it to factory settings, you need to set some settings before using it. For more information about resetting it to Factory Settings, see [Backup and Reset](#)

Touch the language field to select the language and then follow the prompts to set up Wi-Fi, Google account, Google location and other options.


## Turning the Projector On and Off

-  **WARNING!** Do not look directly into the projection lens or point the lens toward people or animals' eyes when the projector is on. Doing so can cause serious injury to the eyes.

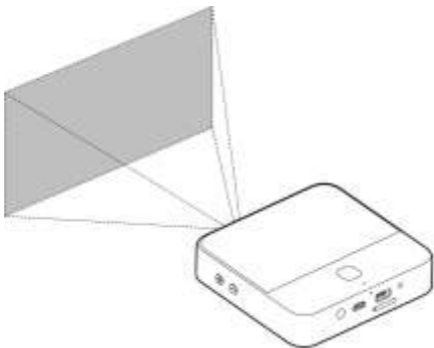

Use one of these methods to turn the projector on or off:

- When the Spro2's screen is turned on, swipe up or down using **THREE** fingers on the screen to turn on or off the projector.
- Drag the status bar down from the top of the screen and touch **Projector** on the top of the notification panel.
- From the **HOME** tab of the home screen, touch the round button on the **Projector** widget.
- From the **SETTINGS** tab of the home screen, touch **Projector > Control** and then touch the switch next to **Projector** in the **Projector settings** screen.


 **NOTE:** For best results, project onto a non-reflective white flat display surface at a 90° angle to Spro2's touch screen. The projection distance of Spro2 is about 3 to 12 feet.

## Adjusting the Projection

When the projector is on, you can adjust projection focus, keystone distortion, projection brightness, and projection color.

**To adjust projection focus:**

1. Touch **Home > SETTINGS > Projector > Image**.
2. In the Focus section, turn on automatic focus or touch “+” and “-” to make manual adjustment.

 **NOTE:** Press the **Power** button twice quickly to adjust projection focus automatically.

### **To adjust keystone distortion:**

Adjust keystone distortion to correct image during a tilted projection.

1. Touch **Home > SETTINGS > Projector > Image**.
2. In the Keystone section, turn on automatic adjustment or touch “+” and “-” to make manual adjustment.

### **To adjust projection brightness:**

1. Touch **Home > SETTINGS > Projector > Image**.
2. In the Brightness section, select the brightness level.

### **To adjust projection color:**

1. Touch **Home > SETTINGS > Projector > Image**.
2. In the Color correction section, select a color effect you like.

## **Using the Touch Screen**

Use the Spro2's touch screen to control actions through a variety of touch gestures.

- Touch



To type using the onscreen keyboard, or select items on the screen such as onscreen buttons, applications and settings icons, touch them with your finger.

- Touch and Hold

To open available options, for example a link in a Web page, touch and hold the link.



- Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

- Drag



To drag, press and hold your finger with some pressure before moving your finger. While dragging, do not release your finger until you reach the target position.

- Pinch

In some apps (such as Maps, web browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).



- Rotate the screen

In some screens, you can automatically change the screen orientation from landscape to portrait by turning Spro2 sideways.



**NOTE:** To automatically change the screen orientation, select the **Auto-rotate screen** check box. Touch **Home > SETTINGS > System > Device > Display > Auto-rotate screen**.

Access the screen rotation control by sliding down the status bar and touching **Auto Rotate**.

## Getting to Know the Home Screen

The home screen is the starting point for Spro2 applications, functions, and menus. You can customize the home screen by adding or removing tabs, folders, or application shortcuts.



## Navigate the Home Screen

The home screen comes with a series of tabs.


- Touch a tab to access its contents.
- Touch the **APPS** tab to find all the applications.
- Touch other tabs to find application shortcuts, folders, and widgets.
- With widgets, you can manage some important functions of the Spro2 right from the home screen.


# Personalize the Home Screen

## To add a tab:

Touch  to add a new tab in the home screen.

## To edit a tab:


Touch and hold the tab and touch  to delete the tab and all items in it, or touch the tab name to enter a new tab name.

 **NOTE:** The **HOME** tab, the **SETTINGS** tab, and the **APPS** tab are pre-configured and cannot be edited.


## To add an application shortcut:


1. Touch and hold an application icon in the **APPS** tab or any shortcut in any other tab.
2. Drag the item to the name of the tab that to put it in. The screen displays the content in the tab.
3. Drag the item to an empty spot in the tab and release your finger.

## To remove an application shortcut:

1. Touch and hold an application icon in any tab other than the **APPS** tab.
2. Drag the icon to  **(Remove)** at the bottom and release your finger.

## To organize shortcuts with folders:


1. Touch and hold an application icon in any tab other than the **APPS** tab.
2. Drag the icon to  (**Folder**) at the bottom and release your finger. A new folder is created and the icon is moved into the folder.
3. To add more shortcuts into the folder, touch and hold them and drag them to the folder and release them.


 **NOTE:** To remove a shortcut from a folder, touch the folder to display its content, and then touch and hold the shortcut and release it after dragging it out of the folder.

## To rename a folder:

1. Touch a folder to open it.
2. Touch twice the folder name displayed above the icons in the folder.
3. Enter a new name and touch **Done** or touch any area outside the folder to save the name.

## To uninstall an application:

1. Touch and hold an application icon in the **APPS** tab of the home screen.
2. Touch  on the application to uninstall.
3. Touch **OK**.

 **NOTE:** You cannot uninstall some applications.

# Personalizing

## Changing the System Language

1. Touch **Home** > **SETTINGS** > **System** > **Local** > **Language & input** > **Language**.
2. Select the language.

## Setting the Date and Time

1. Touch **Home** > **SETTINGS** > **System** > **Local** > **Date & time**.
2. Set the date, time, time zone, and date/time format.
  - ▶ To adjust the date and time automatically, check **Automatic date & time**.
  - ▶ To adjust the date and time manually, uncheck **Automatic date & time** and touch **Set date** / **Set time** to change the date and time.
  - ▶ To adjust the time zone, touch **Select time zone** to set the correct time zone.
  - ▶ To adjust the format of time and date, touch **Use 24-hour format** or **Choose date format**.

## Changing the Notification Sound

To customize the default notification sound:

1. Touch **Home** > **SETTINGS** > **System** > **Device** > **Sound**.
2. Touch **Default notification**.
3. Select the sound you want to use and touch **OK**.

## Turning On/Off Other System Sounds


1. Touch **Home** > **SETTINGS** > **System** > **Device** > **Sound**.
2. Check or uncheck **Touch sounds** or **Screen lock sounds**.

## Adjusting Volume

1. Touch **Home** > **SETTINGS** > **System** > **Device** > **Sound** > **Volumes**.
2. Drag the sliders to adjust the volume for each type of audio.
3. Touch **OK** to save.

## Switching to Silent Mode

To set the Spro2 to silent mode, use one of these methods:

- Touch **Home** > **SETTINGS** > **System** > **Device** > **Sound** > **Sound mode** and select **Mute**.
- Keep pressing **Volume down** when no media application is active. When the  icon appears on the status bar, the Spro2 is in silent mode.

## Applying New Wallpapers

To set the wallpaper for the lock screen, follow these steps:

1. Touch **Home** > **SETTINGS** > **System** > **Device** > **Display** > **Wallpaper**.
2. Select a wallpaper source from **Gallery** or **Wallpapers** and choose the image to use as the wallpaper. Gallery images may require some cropping.

## Changing Screen Brightness

1. Touch **Home** > **SETTINGS** > **System** > **Device** > **Display** > **Brightness**.
2. Drag the slider to adjust the screen brightness.

## Protecting the Spro2 with Screen Locks


Create a screen lock to protect the Spro2. When the screen lock is enabled, touch and hold on the screen, draw the pattern or enter a numeric PIN or password to unlock Spro2's screen and keys.

1. Touch **Home** > **SETTINGS** > **System** > **Local** > **Security** > **Screen lock**.
2. Touch **Long Press**, **Pattern**, **PIN** or **Password**.
  - ▶ Touch **Long Press** to enable screen lock and allow unlock with a 'touch and hold' gesture. You can unlock the screen by touching and holding any blank area on the screen.
  - ▶ Touch **Pattern** to create a pattern you must draw to unlock the screen.
  - ▶ Touch **PIN** or **Password** to set a numeric PIN or a password that you must enter to unlock the screen.

**!** **CAUTION:** Remember the pattern, PIN, or password. If you forget it, you must call Customer Service to upgrade the Spro2 software and you will lose all data in the Spro2's internal storage.

## Protecting the Spro2 with Encryption

You can encrypt all the data on the Spro2 including Google accounts, application data, music and other media, and downloaded information. If you do, you must enter a numeric PIN or a password each time you power on the Spro2.

 **WARNING!** Encryption is irreversible. The only way to revert to an unencrypted Spro2 is to perform a factory data reset, which erases all the data.

Encryption provides additional protection in case the Spro2 is stolen, and may be required or recommended in some organizations. Consult your system administrator before turning it on. In many cases the PIN or password you set for encryption is controlled by the system administrator.

Before turning on encryption:

- Set a lock screen PIN or password.
- Charge the battery.
- Keep the Spro2 connected to the charger.
- Schedule an hour or more for the encryption process. Interrupting the encryption process can cause loss of some or all of your data.

When you're ready to turn on encryption:

1. Touch **Home > SETTINGS > System > Local > Security > Encrypt device**.
2. Read the information about encryption carefully.

The **Encrypt device** button is dimmed if the battery is not charged or the charger is not plugged in the Spro2.

If you change your mind about encrypting the Spro2, touch the **Back** button.



**WARNING!** Interrupting the encryption process can cause loss of all or some of data.

3. Touch **Encrypt device**.
4. Enter the lock screen PIN or password and touch **Next**.
5. Touch **Encrypt device** again.

The encryption process starts. Encryption can take an hour or more. The Spro2 may restart several times.









When encryption completes, it prompts for the PIN or password.

You must enter the PIN or password each time you power on the Spro2 to decrypt it.

# Knowing the Basics

## Monitoring the Device Status











These are some of the status icons that display on the right side of the status bar at the top of the home screen.:

	Battery low		Bluetooth on
	Battery partially drained		Connected to a Wi-Fi® network
	Battery charging		Wired headset connected
	Battery full		Silent mode

# Managing Notifications

## Notification Icons

These are some of the notification icons that display on the left side of the status bar at the top of the home screen.:


	New Gmail™ message		New Wi-Fi network detected
	Music playing		Virtual hotspot (LAN access point) on
	Unmount external USB device		Downloading data
	External USB device connected		Sending data
	microSDHC card safely unmounted		USB connected


## Open and Close the Notification Panel

Notifications report when new Gmail messages arrive and ongoing events, such as when you are playing music. Swipe your finger down from the top of the screen to open the notification panel to view the details of notifications. Swipe your finger from the bottom to the top of the screen or touch the **Back** button to close the notification panel.

## Respond to or Remove a Notification

You can respond to a notification or remove notifications in the notification panel. The notification panel supports expandable notifications to perform additional actions from the notification.




- To respond to a notification, just touch it.
- Slide down with one finger to expand certain notifications. You can also swipe two fingers vertically or pinch-zoom to expand or collapse certain notifications.
- To remove a notification, swipe it left or right.
- To remove all notifications, touch  in the top right corner.
- Touch and hold a notification and then touch **App info** to identify the application that created it. To turn off notifications from that application if needed, uncheck **Show notifications** in the App info screen.
- Most apps that send notifications, such as Gmail, have notification settings that you can adjust.

 **NOTE:** Turning off notifications for an app can cause you to miss important alerts and updates. You cannot turn off notifications from some apps.

## Use Control Switches

Use the control switches in the notification panel to view or change the most common settings on the Spro2.

The notification panel has these control switches on the top of the screen. Slide left or right to find all switches:


- **Projector:** Turn the projector on or off.
  - **Projector Brightness:** Adjust projection brightness.
  - **HDMI:** When it is highlighted, you can project contents through an HDMI cable after connecting Spro2 to an HDMI source, such as a laptop or TV Set Top Box (STB).
  - **Miracast:** Turn Miracast on or off.
  - **Connect to USB stick:** When it is highlighted, you can connect Spro2 with a USB device.
  - **Connect to PC:** When it is highlighted, you can connect Spro2 with a computer to transfer files through a USB cable.
  - **Wi-Fi:** Turn Wi-Fi on or off.
  - **Bluetooth:** Turn Bluetooth on or off.
  - **Virtual Hotspot:** Turn the LAN access point on or off.
  - **Eye protection:** Turn the eye protection feature for projection on or off.
  - **Auto Rotate:** Turn the auto-rotate screen feature on or off.
-  **NOTE:** In the notification panel, touch  in the upper right corner to access the system settings menu; touch  to access the projector settings menu.



## Entering Text

Enter text using the onscreen keyboard. Some apps automatically open it. In others, open it by touching where you want to type. Touch the **Back** button to hide the onscreen

keyboard.

## Change Input Methods


1. When you use the onscreen keyboard to enter text, the icon  appears on the status bar.
2. Open the notification panel and touch **Choose input method**.
3. Select the input method you need.







 
 


 **NOTE:** The icon  appears only when more than one input method is installed.

## Android Keyboard

The Android Keyboard has a layout similar to a desktop computer keyboard.



- Touch the alphabetic keys to enter letters. Touch and hold some specific keys to enter associated accented letters or numbers. For example, to enter è, touch and hold  and the available accented letters and number 3 appear. Slide to choose è.

- Touch  to use uppercase. Double-tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Touch  to delete the text before the cursor.
- Touch  to select numbers and symbols. You can touch  to find more.
- Touch  to use Google voice typing.
- Touch and hold  to change the input language or set up the Android Keyboard.




## Input Method Settings

Choose the input method settings by touching **Home > SETTINGS > System > Local > Language & input.**

In the **KEYBOARD & INPUT METHODS** section, set the default input method and choose the settings for input methods.

## Editing Text

- **Move the insertion point:** Touch where you want to type. The cursor blinks in the new position with a tab below it. Drag the tab to move the cursor.
- **Select text:** Touch and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.

- **Cut or copy:** Select the text to manipulate. Touch  (Cut) or  (Copy), or in landscape mode touch **Edit > Cut** or **Edit > Copy**.
- **Replace text with the clipboard text:** Select the text to replace. Touch  or **PASTE**, or in landscape mode touch **Edit > Paste**.
- **Insert text from the clipboard:** Move cursor to the insertion point and touch and hold the tab below the cursor. Release the finger and touch **PASTE**.

## Opening and Switching Apps

### Open an App


1. Touch **Home > APPS**.
2. Slide left or right on the screen and touch an app to open it.

### Switch Between Recently Opened Apps

1. Touch and hold **Menu**.


A list of the names and thumbnails of recently used apps opens. If you've been using more apps recently than fit on the screen, slide the list to left or right.

2. Touch a thumbnail to open that app.

 **NOTE:** Swipe a thumbnail up or down to remove it from the list, or touch **Remove All** to clear the list.

# Projection


You can use the Spro2's projector to project files in the Spro2 or other devices connected to it.

 **WARNING!** Do not look directly into the projection lens or point the lens toward people or animals' eyes when the projector is on as this may cause injury to the eyes.

## Projecting a File Saved in the Spro2

 
To project a file stored in the Spro2, follow these steps:

1. Open the file to project. For example, to open image files, touch the **APPS** tab on the home screen and touch **Gallery**.
2. Touch the album and the image to display it in full screen.
3. Turn on the projector. For more information, see [Turning the Projector On and Off](#).
4. Adjust the projection distance and place Spro2 on a flat surface.

 **NOTE:** Press the **Power** button twice quickly to automatically adjust projection focus.

## Projecting an HDMI Source

Use an HDMI cable to connect the Spro2 to a laptop, PC, or TV Set Top Box (STB) to use the Spro2 as a projector. If you have an Apple device with the Lightning connector, you need to get a Lightning Digital AV Adapter that is not included in the packaging.

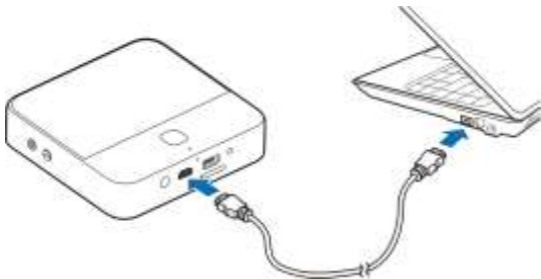

1. Connect the Spro2 to the laptop, PC, or TV STB through the HDMI cable.  
For Apple devices with the Lightning connector, connect the device to the HDMI cable with the Lightning Digital AV Adapter before connecting the HDMI cable to Spro2.
2. Turn on the projector. For more information, see [Turning the Projector On and Off](#).
3. Swipe down the status bar at the top of the screen and touch **HDMI** to highlight it.

- Operate the laptop, PC, TV STB, or Apple device to select the content to watch.



**NOTES:** If the laptop or PC has other kinds of output ports, such as VGA port, DVI port, DisplayPort and Mini DisplayPort, get a proper adapter to connect the laptop or PC with the Spro2.

The maximum resolution the Spro2 supports for the HDMI source is 720p, 1280 x 720 pixels.


Press the **Power** button twice quickly to automatically adjust projection focus.


When the HDMI source fails to project normally when you use a VGA to HDMI adaptor to connect the laptop or PC with Spro2, follow these instructions:

- Use an adaptor that supports 720p output.
- Set the screen resolution on the laptop or PC to 1280 x 720 pixels on a Windows 7 laptop or PC, or right-click on the desktop and select **Graphics Options > Panel Fit > Maintain Display Scaling** for a Windows 7 laptop or PC.
- Set the screen refresh rate on the laptop or PC to 60 Hz or less. On a Windows 7 laptop or PC, right-click on the desktop and select **Screen resolution > Advanced settings > Monitor > Screen refresh rate**.

## Projecting a File Saved on the USB Device

 To project a file stored on the USB device, such as a USB flash drive or a portable hard drive, follow these steps:

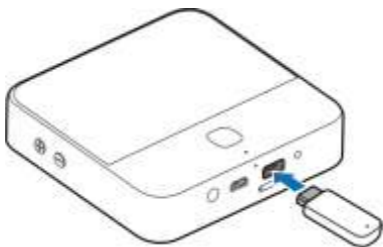

1. Slide the status bar down to open the notification panel and to ensure **Connect to USB stick**  is highlighted.
2. Connect the USB device to Spro2 using the USB jack.
3. Touch **Home > APPS > File Manager**.
4. Touch **USB DEVICE** to open the file to project.
5. Turn on the projector. For more information, see [Turning the Projector On and Off](#).

 **NOTES:** To disconnect the USB device from the Spro2, open the notification panel and touch  **> OK**.

- The Spro2 supports a maximum capacity portable hard drive size of 2 TB and a maximum capacity of 64 GB for the USB flash drive.
- Press the **Power** button twice quickly to adjust projection focus automatically.

## Projecting a Source on the Phone Using Miracast - Wi-Fi Display

Follow these steps to display the content from a compatible smartphone on the Spro2 with a Miracast Wi-Fi Display link.



1. Turn on the projector. For more information, see [Turning the Projector On and Off](#).
2. Swipe down the status bar at the top of the screen and touch **Miracast** to highlight it.
3. Open a Wi-Fi display application on the phone to scan for available devices within range.
4. When you see the name of the Spro2 in the available devices section, touch the name. The phone automatically tries to pair with the Spro2.

5. Touch **Accept** on the Spro2. After successful connection, the contents in the phone displays on the projector.
6. On the phone, choose the content to display.



**NOTES:**

- Miracast is not compatible with all smartphones or tablets.
- To end the Miracast link, touch the **Back** key of Spro2.
- Press the **Power** button twice quickly to adjust projection focus automatically.

# Remote Control

You can use your mobile device such as an Android phone, an iPhone, or an iPad to control the Spro2 with the Spro2 remote control app.

## Downloading and Installing the Remote Control App







1. Touch **Home > SETTINGS** on the Spro2.
2. Use the Android or Apple device to scan the QR code and download and install the remote control app from Google Play Store or Apple App Store.

## Connecting to Spro2 and Using the Remote Control App


Before using the remote control app, connect the mobile device to the Spro2 with Wi-Fi using one of these methods.






### **Method one: virtual hotspot (LAN access point)**

1. Touch **Home > SETTINGS > Projector > Control** and slide the **Remote Control** switch to the ON position.
2. Turn on the virtual hotspot feature on Spro2. For more information, see [Setting Spro2 as a Virtual Hotspot \(LAN Access Point\)](#).
3. Connect the mobile device to the Spro2virtual hotspot.


4. Open the remote control app on the mobile device. The app starts to connect to Spro2.  
 **NOTE:** The first time you use the Spro2 or after restarting it, touch **OK** on Spro2 to accept the connection.
5. When the connection completes, the Spro2 content screen displays on the mobile device. Use the mobile device as the remote control.
  - ▶ Touch the mobile device screen to control the Spro2.
  - ▶ Use ,  and  on the remote control app screen as the **Back** button, the **Home** button and the **Menu** button on the Spro2.
  - ▶ Touch  to turn on the Spro2 projector or open the projector settings menu. Double-tap  to automatically adjust projection focus.

### **Method two: connect to the same Wi-Fi network**


1. Touch **Home > SETTINGS > Projector > Control** and slide the **Remote Control** switch to ON.
2. Connect the mobile device and Spro2 to the same Wi-Fi network, for example, the wireless router in your home. For more information, see [Connecting to Wi-Fi®](#).
3. When the remote control app opens on the mobile device, the app starts to connect to the Spro2.  
 **NOTE:** the first time use or after restarting the Spro2, touch **OK** on Spro2 to accept the connection.






4. When the connection completes, the Spro2 content displays on the mobile device and you can use the mobile device as a remote control.
  - ▶ Touch the mobile device screen to control the Spro2.
  - ▶ Use ,  and  on the remote control app screen as the **Back** button, the **Home** button and the **Menu** button of Spro2.
  - ▶ Touch  to turn on the Spro2 projector or open the projector settings pop-up menu. Double-tap  to adjust projection focus automatically.

### Method three: Wi-Fi Direct

 **NOTE:** This method is only available for Android devices that support Wi-Fi Direct.

1. Touch **Home > SETTINGS > Projector > Control** and slide the **Remote Control** switch to the ON position.
2. Connect the Android device to the Spro2 using Wi-Fi Direct. For more information, see [Connect to Another Device Using Wi-Fi Direct.](#)
3. Open the remote control app on the Android device and the app starts to connect to the Spro2.

 **NOTE:** The first time you use the Spro2 or after restarting it, touch **OK** to accept the connection.

4. When the connection completes, the Spro2 screen content displays on the Android device. You can use the Android device as the remote control.
- ▶ Touch the Android device's screen to control the Spro2.
  - ▶ Use ,  and  on the remote control app screen as the Spro2 **Back** button, the **Home** button and the **Menu** button.
  - ▶ Touch  to turn on the Spro2 projector or open the projector settings pop-up menu. Double-tap  to adjust projection focus automatically.


# Connecting to Networks and Devices



## Connecting to Wi-Fi®

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 300 feet, depending on the Wi-Fi router and your surroundings.

### Turn Wi-Fi On and Connect to a Wi-Fi Network

1. Touch **Home** > **SETTINGS** > **System** > **Network** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to ON to turn on Wi-Fi.
3. Touch a network name to connect to it.
4. If the network is secured, type the password and touch **Connect**.

 **NOTE:** The Spro2 automatically connects to previously used Wi-Fi networks when they are in range.

 **NOTE:** To connect to a Wi-Fi router that supports WPS, touch  on the Spro2 Wi-Fi menu and press the WPS button on the router.

## Receive Notification of Open Networks


1. Touch **Home > SETTINGS > System > Network > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the ON position.
3. Touch **Menu > Advanced**.
4. Check **Network notification**.

When Wi-Fi is on, the Spro2 displays notifications in the status bar when it detects an open Wi-Fi network. Uncheck the option to turn off notifications.

## Add a Wi-Fi Network

Follow these steps to add a Wi-Fi network if the network does not broadcast its name (SSID), or to add a Wi-Fi network when you are out of range:

To connect to a secured network, ask the network administrator for the security details.

1. Touch **Home > SETTINGS > System > Network > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the ON position.
3. Touch .
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Touch **Save**.

## Forget a Wi-Fi Network

To make the Spro2 forget the details of a Wi-Fi network, for

example, if you don't want the Spro2 to connect to it automatically or if it is a network that you no longer use, follow these steps:


1. Touch **Home > SETTINGS > System > Network > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the ON position.
3. Touch the Wi-Fi network name and then touch **Forget**.

## **Connect to a WPS Network**

Wi-Fi Protected Setup (WPS) simplifies adding the Spro2 to access points that support WPS. Use one of these methods to connect the Spro2 to a wireless network using WPS:

### **Method one: WPS button**

This is the recommended method

1. Touch **Home > SETTINGS > System > Network > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the ON position.
3. Touch .
4. When you press the WPS button on the wireless router, the access point recognizes the Spro2 and adds it to the network.


### **Method two: Spro2 PIN**


1. Touch the **Home > SETTINGS > System > Network > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the ON position.
3. Touch **Menu > WPS Pin Entry**.

4. The WPS PIN displays on the screen. Type the PIN into the access point's setup page.

After entering the PIN, the Spro2 automatically finds the access point and configures the connection.

### **Method three: Using the Access Point PIN**

1. Touch **Home > SETTINGS > System > Network > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the ON position.  
A WPS capable access point has the icon  next to the name.
3. Touch a WPS-capable access point.
4. In the window that opens, check **Show advanced options**.
5. Touch the field below **WPS PIN from access point** and select **Enable**.
6. Enter the access point PIN and touch **Connect**. The PIN is on the access point's configuration page.

 **NOTE:** For more information about the access point's WPS feature, refer to the user documents.

## **Adjusting Advanced Wi-Fi Settings**


1. Touch **Home > SETTINGS > System > Network > Wi-Fi**.
2. Touch the **Menu > Advanced** to adjust these settings:
  - ▶ **Network notification:** Display notifications in the status bar when Wi-Fi is on and an open network is available
  - ▶ **Keep Wi-Fi on during sleep:** Set to keep Wi-Fi on in

sleep mode

- ▶ **Scanning always available:** Allow Google's location service and other apps to scan for networks, even when Wi-Fi is off
- ▶ **Wi-Fi band:** Select the Wi-Fi frequency band according to the available Wi-Fi networks.
- ▶ **Install certificates:** Install certificates from the internal storage or the external microSDHC card. Some Wi-Fi networks need to find the correct certificates to grant access.
- ▶ **Wi-Fi optimization:** Minimize battery use when Wi-Fi is on.
- ▶ **MAC address:** Check the MAC address.
- ▶ **IP address:** Check the IP address.

## Using Wi-Fi Direct<sup>®</sup>

Wi-Fi Direct allows Wi-Fi devices to connect to each other without wireless access points (hotspots).

 **NOTE:** Wi-Fi Direct is not completely compatible among different device manufacturers and may require installing third-party applications to share files between different devices from different manufacturers.

## Connect to another Device Using Wi-Fi Direct

1. Touch **Home > SETTINGS > System > Network > Wi-Fi**.
2. If Wi-Fi is off, slide the **Wi-Fi** switch to the ON position.

3. Touch the **Menu > Wi-Fi Direct**. The Spro2 searches for other devices enabled with Wi-Fi Direct connections.
4. Touch a device name under PEER DEVICES to connect with it.

The other device will receive a connection prompt and must accept the request for connection. Both devices may need to enter a common PIN.

After connecting, the device is displays as Connected in the PEER DEVICES list.

## Send Data Using Wi-Fi Direct

1. Open the appropriate application and select the file or item to share.
2. Select the option for sharing using Wi-Fi Direct. The method may vary by application and data type.
3. Touch a device the Spro2 connected with or wait for it to search for new devices and touch one of them.

## Receive Data Using Wi-Fi Direct


When the Spro2 receives an attempt to transfer data using Wi-Fi Direct, the notification displays in the status bar. Open the notification panel, touch the notification and select **Accept** to start receiving the data.

Received files are stored automatically in a dedicated folder, for example *WiFiShare*. Use **File Manager** to access the files.

## Connecting to Bluetooth® Devices

Bluetooth® is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 30 feet. The Bluetooth devices must pair before the communication occurs.

### Turn Bluetooth On/Off

1. Touch **Home > SETTINGS > System > Network > Bluetooth**.
2. Slide the **Bluetooth** switch to the ON or OFF position. When Bluetooth is on, the  icon will appear in the status bar.

### Make the Spro2 Visible

To work with other Bluetooth phones or devices, follow these steps to make the Spro2 is visible:

1. Touch **Home > SETTINGS > System > Network > Bluetooth**.
2. Slide the **Bluetooth** switch to the ON position if Bluetooth is off.
3. Touch the device name on the top of the screen to make the Spro2 visible or invisible.



**NOTE:** Touch **Menu > Visibility timeout** to set the Bluetooth visibility timeout on the Spro2.

## Change the Device Name

1. Touch **Home > SETTINGS > System > Network > Bluetooth**.
2. Slide the **Bluetooth** switch to the ON position if Bluetooth is off.
3. Touch **Menu > Rename device**.
4. Edit the name and touch **Rename**.

## Pair With another Bluetooth Device


1. Touch **Home > SETTINGS > System > Network > Bluetooth**.
2. Slide the **Bluetooth** switch to the ON position if Bluetooth is off.  
The Spro2 automatically scans for and displays the IDs of all available Bluetooth devices in range. You can touch **SEARCH FOR DEVICES** in the upper right of the screen to scan again.
3. Touch the device to pair with.
4. Confirm that the Bluetooth passkeys are the same between the two devices and touch **Pair**. Alternately, enter a Bluetooth passkey and touch **Pair**.  
Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.



**NOTE:** The Bluetooth passkey may be fixed for certain devices, such as headsets and hands-free car kit. Try entering the most common passkeys, 0000 or 1234, or refer to the documents for that device.

## Unpair From a Bluetooth Device



You can make the Spro2 forget its pairing connection with another Bluetooth device. To connect to the device again, you may need to enter or confirm a passkey again.

1. Touch **Home > SETTINGS > System > Network > Bluetooth** and ensure that Bluetooth is turned on.
2. In the list of paired devices, touch the icon  next to the Bluetooth device to unpair from.
3. Touch **Unpair**.

## Send Data Through Bluetooth

1. Open the appropriate application and select the file or item to share.
2. Select the option for sharing using Bluetooth. The method may vary by application and data type.
3. Touch a Bluetooth device the Spro2 paired with or wait for it to search for new devices and touch one of them.

## Receive Data Using Bluetooth

1. Turn Bluetooth on before trying to receive data using Bluetooth.  
 **NOTE:** If the Spro2 has not paired with the sending device, you may need to keep Spro2 visible through Bluetooth.
2. Flick down the status bar and touch .
3. Touch **Accept** to start receiving the data.

 
When the Spro2 has a microSDHC card installed, it automatically stores received files in a dedicated folder, such as *Bluetooth*, in the internal storage or microSDHC card. Access them with the **File Manager** app.




## Connecting to the Computer Using USB

Follow these steps to connect the Spro2 to a computer with a USB cable to transfer music, pictures, and other files in between the devices. The Spro2 stores these files in the internal storage or on a removable microSDHC card. For more information, see [Storage](#).

### Connect the Spro2 to a Computer Using USB

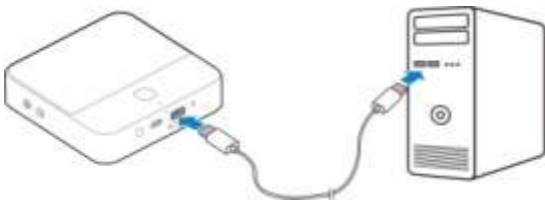1. Connect the Spro2 to the computer using a USB cable. Insert the end of the cable into the Spro2 USB jack and insert the other end of the cable into an available USB port on the computer.



2. Slide the status bar down to open the notification panel and touch **Connect to PC**  to highlight it.
3. Open the notification panel and touch  **Connected as ...** or touch **Home > SETTINGS > System > Device > USB mode**.
4. Choose one of these options:
  - ▶ **Install driver:** Some USB connection modes, such as MTP, require that you install a driver
    -  **NOTE:** Run the executable file in the new CD-ROM drive
  - ▶ **Media device (MTP):** Transfer media files on Windows® or Mac®.
5. When finished, disconnect the Spro2 from the computer.

## Connect with Windows Media® Player

To sync music, picture, and video files on the phone and a computer that has Windows Media Player installed, follow these steps:

1. Connect the Spro2 to the computer with USB and choose **Media device (MTP)**.
2. Open Windows Media Player and synchronize music, picture, and video files.

## Disconnect the Spro2 from the Computer

To disconnect Spro2 from the computer, unplug the USB cable when finished.

## Remove the microSDHC Card from the Spro2

To remove the microSDHC card while Spro2 is on, you must unmount it first.

1. If Spro2 is connected to a computer, disconnect it.
2. Touch **Home > SETTINGS > System > Device > Storage**.
3. Scroll down and touch **Unmount SD card > OK**.
4. When the **Unmount SD card** menu changes to **Mount SD card**, you can safely remove the microSDHC card from Spro2.



**NOTE:** If you unmount the microSDHC card, some apps may stop and may be unavailable until you remount the microSDHC card.

## Erase the microSDHC Card



1. Touch **Home > SETTINGS > System > Device > Storage**.
2. Scroll down and touch **Erase external SD card > Erase SD card > Erase everything**.


**!** **CAUTION:** The formatting procedure permanently erases all data on the microSDHC card.


## Connecting to a USB Device

To connect to a USB device, such as a USB flash drive or a portable hard drive to the Spro2 using the USB jack, touch **Home > APPS > File Manager > USB DEVICE** to view files in the USB device.



 **NOTE:** Before connecting the Spro2 with a USB device, slide the status bar down to open the notification panel and ensure Connect to USB stick  is highlighted.

To disconnect a USB device from the Spro2, open the notification panel and touch  > **OK**.


 **CAUTION:** Before unmounting the USB device, do not disable Connect to USB stick or enable Connect to PC. Doing so may cause the connection between the Spro2 and the USB device to disconnect, and may damage the data in the USB device.


## Connecting to a Webcam

 **NOTE:** The Webcam is not included.

To connect a webcam to the Spro2 using the USB jack and have video calls by using a video chat app such as Google Hangouts and Skype, follow these steps:




1. Slide the status bar down to open the notification panel and ensure that **Connect to USB stick**  is highlighted.
2. Connect a webcam to Spro2 using the USB jack.
3. Open a video chat app to make a video call.

 **NOTE:** To take pictures or record video clips, touch the **Home** key > **APPS** tab > **Camera** to open the Camera app or install and use other camera apps on Spro2.

The Spro2 does not support all webcams. Refer to the webcam manual for detailed instructions.

## Setting the Spro2 as a Virtual Hotspot (LAN Access Point)


You can enable the virtual hotspot feature to set Spro2 as a LAN access point, which allows other devices to connect to Spro2 using Wi-Fi. For example, before using the remote control app, you can turn on the virtual hotspot and connect the mobile device to Spro2 using Wi-Fi.

 **NOTES:** The Spro2 cannot connect to the virtual hotspot to access the Internet. When the virtual hotspot is enabled, the Spro2 disconnects from all Wi-Fi networks.

### Turn on the Virtual Hotspot

1. Touch **Home** > **SETTINGS** > **System** > **Network** > **Virtual Hotspot**.

2. Slide the switch to turn on the virtual hotspot, the LAN access point.
3. On another device, locate the Spro2 using Wi-Fi and connect with it.

Or, if the device supports Wi-Fi Protected Setup, touch the WPS icon on the device, and touch  on the Spro2.

## Set Your Virtual Hotspot

To change the name of the Spro2 virtual hotspot, the SSID, secure it with a password, and set other options, follow these steps:

1. Touch **Home > SETTINGS > System > Network > Virtual Hotspot**.
2. Touch **CONFIGURE** to set these options:
  - ▶ **Network Name:** Enter or edit a network name that other devices see when scanning for Wi-Fi networks.
  - ▶ **Wi-Fi band:** Set the band the virtual hotspot should be available on.
  - ▶ **Channel:** To avoid interference with other Wi-Fi networks, try using a different channel.
  - ▶ **Security:** Choose a security option:
    - **None** - not recommended
    - **WPA2 PSK** - other users can access the virtual hotspot only if they enter the correct password. When you select **WPA2 PSK**, touch the **Password** field to edit the security password.

- ▶ **Show password:** Check this option to display the password in the Password field.
- ▶ **Broadcast network name (SSID):** Check this option to broadcast the network SSID. If the broadcast is disabled, other users need to get the network name to find the virtual hotspot.

3. Touch **Save** to save settings.

## Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN, you may need to enter login credentials or install security certificates before connect to the VPN. Ask the network administrator for this information.

### Add a VPN

1. Touch **Home > SETTINGS > System > Network > VPN.**
2. Touch **+** and complete the information the network administrator provides.
3. Touch **Save.**  
The VPN is added to the list on the VPN screen.



**NOTE:** You must set a lock screen pattern, PIN or password before using VPN.

## Connect to a VPN

1. Touch **Home > SETTINGS > System > Network > VPN**.
2. Touch the VPN you want to connect to.
3. When prompted, enter requested credentials, and touch **Connect**.

## Modify a VPN

1. Touch **Home > SETTINGS > System > Network > VPN**.
2. Touch and hold the VPN to modify.
3. Touch **Edit profile** and edit the VPN settings.
4. Touch **Save**.

# Accounts

## Adding or Removing Accounts

You can add multiple Google accounts and add other kinds of accounts, depending on the apps installed on the Spro2.

### Add an Account

1. Touch **Home > SETTINGS > System > Device > Add account**.
2. Touch the type of account you want to add.
3. Follow the onscreen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need some information from IT support or the system administrator.

When the Spro2 successfully adds the account, the account displays in the **ACCOUNTS** section in the **Device** settings menu.

### Remove an Account

Removing an account deletes the account and all information associated with it from the Spro2. For example, when you remove a Google account, Gmail messages and web albums from that account are all deleted from Spro2.

1. Touch **Home > SETTINGS > System > Device**.
2. Touch the account category in the **ACCOUNTS** section and touch the account.
3. Touch **Menu > Remove account > Remove account**.

## Configuring Account Sync

### Change Account Sync Settings

1. Touch **Home > SETTINGS > System > Device**.
2. In the **ACCOUNTS** section, touch the account category and then the account. The Sync screen appears, showing a list of information the account can sync.
3. Check or uncheck items as you need. Checked types of information on Spro2 and the web will be kept in auto-sync.

### Sync Manually

1. Touch **Home > SETTINGS > System > Device**.
2. In the **ACCOUNTS** section, touch the account category and the account to sync.
3. Touch **Menu > Sync now**.

# Gmail™

After you sign in to your Google or other personal email account on Spro2, you can send and retrieve email messages with the **Gmail** app.


## Opening Your Inbox

Touch **Home > APPS > Gmail**. The inbox screen opens. If you haven't signed in to any email account, touch **Add an email address** to add an account.




Drag the inbox message list downward to refresh your inbox and download new messages.

## Switching Accounts





The Gmail app displays conversations, messages, and settings from one account at a time. If you have signed in to more than one email account on the Spro2, you can switch accounts and view information in each account.

1. From your inbox, touch  at the top left of the screen.
2. Touch the account avatar to view.

## Writing and Sending a Message

1. Open your inbox and touch .
2. If you have more than one email account, touch the From line to select the account for sending the message.
3. Enter a contact name or email address in the To field. Touch the space key before entering each additional recipient.
4. Enter the email subject and compose the email text.
5. To add an attachment, touch .
6. Touch  at the top right of the screen to send the message.

## Replying to or Forwarding a Message

 
1. Open the email message you want to reply to or forward to another person.
2. Do the following as you need:
  - ▶ To reply to the sender, touch .
  - ▶ To reply to the sender and all recipients of the original message, touch  > **Reply all**.
  - ▶ To forward the message, touch .
3. Edit your message and touch .


## Working with Gmail Labels

You can organize Gmail messages by labelling them or adding stars to them. Gmail labels include both labels you create and default labels such as **Sent**, **Starred**, and **Outbox**.


### To label or change labels:

1. Open a Gmail account message box and touch in the message list the sender images at the left side of the messages you want to label.

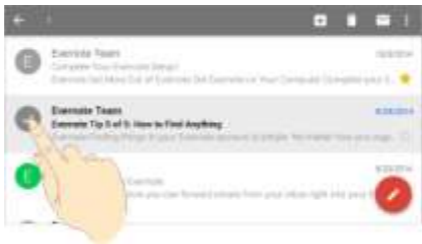


2. At the top right of the screen, touch  > **Change labels**.
3. Check or uncheck labels in the new screen and touch **OK**.


### To add stars to messages:

1. Open the Gmail account message and in the message list touch the sender images at the left side of the messages to star.
2. At the top right of the screen, touch  > **Add star**.

### To view messages by label:

1. Open the **Gmail** app and switch to your Google account.
2. Touch  at the top left of the screen.
3. Touch a label below **All labels** to view messages with that label.

## Changing Gmail Settings

Open the **Gmail** app and touch  at the top left of the screen, scroll down, and touch **Settings** to change **General settings**, that apply to all added email accounts, or other settings that only apply to specific accounts.

# Web Browser

Use **Chrome** to view web pages and search for information.




## Opening the Browser

Touch **Home > APPS > Chrome** to use the browser.

The browser also opens when you touch a web link, for example, in an email.

### To open a web page or search the web:


1. Open the **Chrome** app.
2. Touch the address box at the top of the web page. If the address box isn't visible, scroll up the screen to show it.
3. Type the Web page's address, the URL, or, enter terms to search for.
4. Touch a URL or search suggestion or touch **Go** on the keyboard to open the web page or search results.

 **NOTE:** Touch  >  to stop opening the page.


## Using Multiple Browser Tabs


You can open several web pages at the same time, one page in each tab, and switch between them.

### To open a new browser tab:

Touch  at the top right of the browser screen and select **New tab**.

### To switch between tabs:

1. Touch the tabs icon  at the top right. The number in the icon indicates the number of currently opened browser tabs.
2. Swipe horizontally to scroll through the list of opened tabs.
3. Touch the thumbnail of the tab to open.

 **NOTE:** Swipe a thumbnail vertically or touch its **X** to close the tab.

## Downloading Files

1. Touch and hold an image or a link to a file or to another web page.
2. In the menu that opens, touch **Save image** or **Save link**. You can view or open the downloaded files in the **Downloads** app.

## Changing Browser Settings

You can configure a number of browser settings to customize how you browse the Web, including several you can use to control privacy.

To open the browser settings screen, touch the **Menu > Settings** in the Web page screen.

# Gallery

## Opening Gallery


Touch the **Home > APPS > Gallery** to view albums of pictures and videos.

## Working with Albums


When you open the Gallery, all pictures and videos on the Spro2 display in albums.

To view album contents, touch the album.

### To share albums, pictures, or videos:

1. Touch and hold an item in the Albums view to select an album or after you open an album to select a picture or a video.
2. Touch more items you want to share.
3. Touch  and select how to share the items.

### To delete albums:

1. Touch and hold an album until it is selected.
2. Touch more albums to delete.
3. Touch  > **OK**.

## Working with Pictures

Touch a picture in an album to view the picture in full screen. When viewing a picture in full screen, the following features are available.




- Swipe horizontally to see other pictures or videos in the album.
- Pinch a picture or video to make it smaller. The Spro2 displays a filmstrip-style view of all pictures. Swipe left or right to scan through them.
  - ✔ **NOTE:** To delete a picture or video, swipe it up or down in the filmstrip view. To retrieve a deleted picture or video, touch **UNDO**.
- To zoom in or out, double-tap the picture, or pinch two fingers together or spread them apart.

- Touch the **Menu** to rotate, delete, share, print, or rename the picture, check file details, set it as the lock screen wallpaper, or change slideshow setting.
- Touch **Slideshow** to browse the album contents in a slideshow.
- Touch **Back** to return to the album.




**NOTE:** Some options may not be available for certain albums or pictures.

## Playing Videos

1. Touch an album in the gallery and touch the video's thumbnail.
2. Touch  at the center and select a player to start playing. Touch the video screen to view the playback controls.

# Play Music



The **Play Music** app works with Google Music, Google's online music store and streaming service. You can stream using Wi-Fi and listen to favorite songs added to your online Google Music library. You can also play audio files copied to the Spro2 from a computer.

 **NOTE:** The availability of Google Music is regional. If it is not available, or you don't have a Wi-Fi connection, you can only play music stored on the Spro2.

## Copying Music Files to the Spro2

Before using **Play Music**, copy or download audio files to the Spro2.

### Copy from a Computer

1. Connect the Spro2 and the computer with a USB cable.
2. Slide the status bar down to open the notification panel and touch **Connect to PC**  to highlight it.
3. In the notification panel, touch  **Connected as ...** and select **Media device (MTP)**. For more information, see [Connect the Spro2 to a Computer Using USB.](#)
4. Copy the music files from the PC and paste them to the Spro2.


## Other Methods to Load Files on the Spro2

- Downloading files from the Internet when browsing Web pages. For more information, see [Downloading Files](#).
- Receiving music files from other devices using Bluetooth. For more information, see [Receive Data Using Bluetooth](#).
- Receiving music files from other devices using Wi-Fi direct. For more information, see [Receive Data Using Wi-Fi Direct](#).

## Playing Music

Touch the **Home > APPS > Play Music**. When prompted, select an account to access its online music library.

The app searches the online library and the Spro2 for music and playlists before displaying the combined music library, organized by **GENRES, ARTISTS, ALBUMS** and **SONGS**.

Touch  **> My Library / Playlists** to view all the music and playlists. To change views of the library, swipe left or right.

Touch a song to play it. When the song is playing, touch the summary information at the bottom to display the playback screen.




Number	Function
1	Song and artist information. Touch or drag down to return to the music library.
2	Album artwork, if available. Slide left or right to switch to the next or previous song in the playlist.
3	Give the song a thumbs-up.
4	Playback control. Skip songs, pause and resume playback, and use shuffle or repeat. Drag the progress bar to jump to any part of the song.
5	Give the song a thumbs-down.
6	Touch to see the current playlist (queue).
7	Get more options.

To control the music when not in the playback screen:



- In the music library of the **Play Music** app, touch the summary information at the bottom of the screen to restore the playback screen.
- In other apps, flick down the notification panel. Touch the song title to restore the playback screen, or pause/ resume playback or skip songs.
- When the screen is locked, the song information, album cover, and playback control displays on the screen. You can pause and resume playback or skip songs.

## Managing Playlists



Create playlists to organize music files into sets of songs, you can play in a preferred order.


To create a playlist or add a song to a playlist, touch  next to a song and select **Add to playlist**.

### To remove a song from a playlist:

1. Touch  > **Playlists** in the **Play Music** app and open a playlist.
2. Touch  next to a song in the playlist.
3. Touch **Remove from playlist**.

### To delete a playlist:

1. Touch  > **Playlists** in the **Play Music** app.
2. Touch  next to the playlist you want to delete.
3. Touch **Delete > OK**.

 **NOTE:** You cannot delete some automatically created playlists, such as **Last added** cannot be deleted.

# Video Player

Use the **Video Player** app to manage the video library and watch videos.





## Opening the Video Library

Touch the **Home > APPS** tab > **Video Player** to view the video library in a list.

Swipe up or down to find the video. Touch **Menu > Sort** to sort the list.










## Playing and Controlling Videos

Touch a video in the video library to play it. Touch the screen to display the playback controls.

- Touch the play/pause button at the bottom to pause or resume the playback.
- Slide horizontally on the screen to rewind or fast forward.
- Slide vertically on the left or right part of the screen to adjust volume or brightness.
- Touch  or  to skip to the previous or the next video.
- Touch  or  to change the video ratio.
- Touch the **Menu** to configure the video player settings.

# Sound Recorder



Use **Sound Recorder** to record voice memos and listen to them later.

1. Touch **Home > APPS > Sound Recorder**.
  2. Touch  to start recording. During recording, you can do the following:
    - ▶ Touch  /  to pause or continue the recording.
    - ▶ Touch  > **Delete** to cancel the recording.
  3. Touch  to stop recording. The Spro2 automatically saves the memo. Touch  to play it immediately, or touch  or  at the top right corner to share or delete the recording.
-  **NOTE:** Touch **My records** at the upper right of the screen to see all the voice memos. Touch and hold a memo to rename, share, or delete it.


# More Apps

## Camera

Touch **Home > APPS > Camera** to take pictures or record video clips after connecting a webcam to the Spro2 through the USB jack.

 **NOTE:** Before using the webcam, slide the status bar down to open the notification panel. Ensure "Connect to USB stick"  is highlighted.

## Dolby

Touch **Home > APPS tab > Dolby** to select or customize a Dolby profile. You can also touch  to turn off Dolby.

## Downloads

The **Downloads** app keeps a record of the files downloaded using the apps such as **Chrome** and **Gmail**.







Touch **Home > APPS > Downloads** to check the record.

- Touch a file to open it with the appropriate application.
- Touch and hold a file to delete or share it.

## File Manager

Use File Manager to quickly access all of the images, videos, audio clips, and other types of files on the internal storage, the microSDHC card, and the connected USB device.

Touch **Home > APPS > File Manager**. Find the file by category in the **CATEGORY** tab, or touch **DEVICE, SD CARD** or **USB DEVICE** to browse folders and files on the internal storage, the microSDHC card, or the USB device.

- Touch folders and files to access stored items.
- Touch  > **Multi-Select** to select items and access option icons such as  to copy,  to move,  to share, or  to delete.
- To copy or move an item, navigate to a new location and touch **PASTE**.
- Touch  to create a new folder in the current directory.

## Google Apps

- **Chrome:** Use the Chrome app to browse the Internet and to sync bookmarks, browsing history, and more with your Google account.
- **Drive:** Store files on Google servers for free after signing in to your Google account. You can access the files on computers, phones and other devices, share them, or collaborate with others.
- **Gmail:** Send and receive emails Using your Gmail account or other personal email accounts.
- **Google:** Use Google search or get information when you

need it with Google Now.

- **Google+:** Socialize with friends on the Google+ online community.
- **Hangouts:** Chat with Google+ friends or send text or multimedia messages.
- **Maps:** Find locations and find your way in the world.
- **Photos:** Manage photos on the Spro2 and on your Google account.
- **Play Books:** Read eBooks downloaded from the Google Play Store. You can read books online or mark them for availability offline, so you can read them when you don't have an Internet connection.
- **Play Games:** Buy and play games from the Google Play Store. Share your gaming experience and progress with friends.
- **Play Movies & TV:** Purchase, download, and watch favorite movies and TV shows.
- **Play Music:** Play music on Spro2 and on your Google account.
- **Play Newsstand:** Purchase and read newspapers and magazines.
- **Play Store:** Buy and download apps, games, and other content from the Google Play Store.
- **Voice Search:** Search for information with your voice.
- **YouTube:** Watch video clips from YouTube.com, or upload your own and share with the world.

# Google Play™ Store


Touch **Home > APPS > Play Store** to buy or rent music, books, movies, apps, and download them to the Spro2.



**NOTE:** Accessible content in the Google Play Store is regional.

## Browsing and Searching for Apps

To browse apps by category, touch a top-level category, such as **GAMES**, and touch the app from any subcategory.

To search for apps using an app's name or description, or the developer's name, touch  and enter the search terms.

## Downloading and Installing Apps

When you find the app, touch it to open its details screen, to display more information about the app.

1. Touch **INSTALL** for free apps or the price for paid apps. For paid apps, you need to sign in to your Google Wallet™ account and select a payment method.




**CAUTION:** After installation, some apps can access functions or a significant amount of personal data. The Play Store shows what the app can access. Touch **ACCEPT** to proceed, or touch **Back** to cancel.

2. Wait for the app to download and automatically install. Payment must authorize before paid apps download.

A notification icon displays when the app successfully installs. Use **Home > APPS** to find the new app.

## Creating a Google Wallet™ Account


To create a Good Wallet account and associate it with your Google account, follow these steps:

- On the computer, go to *wallet.google.com* to create a Google Wallet account.
  - The first time you use the Spro2 to buy an item from Google Play Store, you're prompted to enter billing information to set up a Google Wallet account.
-  **WARNING!** Secure the Spro2 to prevent others from using it without permission because after using the Google Wallet to make purchases in the Google Play Store app, the Spro2 remembers the password so you don't need to enter it.


## Managing Downloads

After downloading and installing an app, you can rate it, view it in a list with other downloaded apps, and configure it to automatically update.

### View Downloaded Apps

1. In the Play Store screen, touch  > **My apps**.
2. The list of installed apps opens, touch an app to rate it, uninstall it, or request a refund.

### Uninstall an App

1. In the Play Store screen, touch  > **My apps**.
2. Touch an app to open its details screen.
3. Touch **UNINSTALL > OK**.

# Settings

Touch **Home > SETTINGS > System** or **Projector. SETTINGS** contains most of the tools to customize and configure the Spro2.

## Network

### Wi-Fi

Touch **Home > SETTINGS > System > Network > Wi-Fi** to turn Wi-Fi on or off and configure Wi-Fi connections. For more information, see [Connecting to Wi-Fi®](#).

When Wi-Fi is on, touch **Menu > Wi-Fi Direct** in the **Wi-Fi** menu to share data between devices using Wi-Fi directly. For more information, see [Using Wi-Fi Direct®](#).

### Bluetooth

Touch **Home > SETTINGS > System > Network > Bluetooth** to turn Bluetooth on or off and configure the Bluetooth connections. For more information, see [Connecting to Bluetooth® Devices](#).

### Virtual Hotspot

Touch **Home > SETTINGS > System > Network > Virtual Hotspot**. You can set the Spro2 as a LAN access point. See [Setting Spro2 as a Virtual Hotspot \(LAN Access Point\)](#).

## VPN

Touch **Home > SETTINGS > System > Network > VPN** to set up and connect to virtual private networks. For more information, see [Connecting to Virtual Private Networks](#).

## Device

### Sound

Touch **Home > SETTINGS > System > Device > Sound** to adjust volume, toggle the sound and mute the Spro2, set up notification sound, and select system sounds. For more information, see [Adjusting Volume](#), [Switching to Silent Mode](#), [Changing Notification Sound](#)

### Display

Touch **Home > SETTINGS > System > Device > Display** to configure these options.

- **Brightness:** Set screen display brightness
- **Wallpaper:** Select a background image for the lock screen.
- **Auto-rotate screen:** Check this option to let Spro2 automatically change the orientation of some onscreen content based on the position of the device.
- **Sleep:** Set the inactivity time before the screen automatically turns off.
- **Font size:** Set the text font size on the screen.
- **Pulse notification light:** Set the indicator light to flash to notify you of new events, such as the arrival of a new Gmail message.

- **Touch key light duration:** Lets you control the backlight of the touch keys, such as **Home**, **Back**, and **Menu**. Choose one of these options to set the backlight duration:
  - ▶ **Last 2 seconds / Last 5 seconds:** The touch keys light for 2 or 5 seconds each time you touch the screen or touch keys while the screen is on.
  - ▶ **Always on:** Keep the touch keys backlight on while the screen is on.
  - ▶ **Always off:** Turn off the touch keys backlight.
- **Cast screen:** Connect with TVs, projectors or other devices that support wireless display and project the Spro2 content wirelessly to that device. Turn on Wi-Fi, touch **Menu**, and check **Enable wireless display** in the Cast screen. For detailed introduction, refer to the device manual.
- **Power key light:** Check this option to turn on the **Power** key light.

## Storage

Touch **Home** > **SETTINGS** > **System** > **Device** > **Storage** to check memory information internal storage, the microSDHC card, and USB device when they are available.

Choose the default location for new data, such as files downloaded and voice recorded. Touch **Save location** and select **Device** or **SD card** to store items in the internal storage or the installed microSDHC card.

Touch **Unmount SD card** to unmount the microSDHC card or the USB device from the Spro2 to safely remove it while the

Spro2 is on. Touch **Erase external SD card** to delete all data on the microSDHC card or the USB device.

## Battery

Touch **Home > SETTINGS > System > Device > Battery** to check battery power remaining and what is using the battery.

Touch an app to adjust its settings to save battery life. For example, touch **Screen > Display > Brightness** to lower screen brightness.

## USB Mode

Touch **Home > SETTINGS > System > Device > USB mode** to select the USB connection type when connecting the Spro2 to a USB device or PC. For more information, see [Connect the Spro2 to a Computer Using USB](#) and [Connecting to a USB Device](#).

## Accounts

Touch **Home > SETTINGS > System > Device** and scroll to the ACCOUNTS section to manage accounts and synchronization. Touch **Add account** to sign in to or create accounts on the Spro2.

Touch an account type to see the type of accounts added and adjust the accounts settings.

## Local

### Apps

Touch **Home > SETTINGS > System > Local > Apps** to see apps installed on the Spro2 and manage them.

Touch an app in the **DOWNLOADED**, **RUNNING**, or **ALL** tab to view app information. You can stop the app, uninstall the app, or clear data and cache.

 **NOTE:** Not all applications can be uninstalled.

### Location

Touch **Home > SETTINGS > System > Local > Location** and slide the **ON/OFF** switch to turn on or off location services.

### Security

Touch **Home > SETTINGS** tab > **System > Local > Security** to configure options that help keep the Spro2 and data safe.

- **Screen lock:** Disable the screen lock or enable it with long press, pattern, PIN, or password. For more information, see [\*Protecting the Spro2 with Screen Locks\*](#).
- **Make pattern visible:** Shows the pattern as you draw it. This option is available when unlock pattern is set.
- **Automatically lock:** Set the time for the lock protection to activate after the screen turns off. This option is available when unlock pattern, PIN or password is set.

- **Power button instantly locks:** Lock protection activates immediately when you press **Power**. This option is available when the unlock pattern, PIN, or password is set.
- **Owner info:** Enter the text that displays on the lock screen.
- **Encrypt device:** Encrypt data on the Spro2 to protect privacy. For more information, see [Protecting the Spro2 with Encryption](#).
- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps authorized as device administrators.
- **Unknown sources:** Check this option to permit installation of apps from sources other than the Play Store.
- **Verify apps:** Prevent or display a warning before installing apps that may cause harm.
- **Storage type:** Check the credential storage type.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the microSDHC card.
- **Clear credentials:** Delete all certificates.

## Backup and Reset

Touch **Home > SETTINGS > System > Local > Backup & reset** to manage data backup and restore options and to reset the Spro2 to factory status.

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after signing in to the

Google account.

- **Back up account:** Set the Google account the data is backed up to.
- **Automatic restore:** Restore previously backed up settings and data when reinstalling an app.
- **Factory data reset:** Reset the Spro2 to factory default settings and erase all personal data in the Spro2 internal storage and the microSDHC card.

## Language and Input

Touch **Home** > **SETTINGS** > **System** > **Local** > **Language & input** to configure options related to system language, input methods, speech input and output, and mouse and trackpad input.

- **Language:** Select a language for the system.
- **Spell checker:** Use Android spell checker to check for spelling errors when entering text.
- **Personal dictionary:** Add new words to the Spro2 dictionary or remove words from the dictionary. The Spro2 uses the words for spell check and as word suggestions.
- **KEYBOARD & INPUT METHODS:** Configure text input settings. For more information, see [Input Method Settings](#).
- **Voice Search:**
  - ▶ **Language:** Select the language to use when entering text by speaking or when speaking to search.
  - ▶ **Speech output:** Control when the Spro2 speaks.

- ▶ **“OK Google” Detection:** When enabled, you can say “OK Google” when using the Google app rather than touching the microphone icon to initiate voice search or activity.
- ▶ **Offline speech recognition:** Download one or more additional language packages so you can use speech recognition when you do not have a network connection.
- ▶ **Block offensive words:** Hide offensive words when you use Google voice typing to transcribe your voice into text.
- ▶ **Bluetooth headset:** Listen for your voice input through a Bluetooth headset when it is connected to the Spro2.
- **Text-to-speech output:**
  - ▶ **PREFERRED ENGINE:** Select the speech synthesis engine you want to use or change its settings.
  - ▶ **Speech rate:** Select how quickly you want the synthesizer to speak.
  - ▶ **Listen to an example:** Play a brief sample of the speech synthesizer, using current settings.
  - ▶ **Default language status:** Check whether the text-to-speech output feature supports the current system language.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect Spro2 to a trackpad or mouse accessory.

## Date and Time


Touch **Home** > **SETTINGS** > **System** > **Local** > **Date & time** to set date, time, time zone, and how date and time display. You can also use network-provided data.

## Accessibility

Touch **Home** > **SETTINGS** > **System** > **Local** > **Accessibility** to configure accessibility plug-ins on the Spro2, such as using **TalkBack** for low-vision users.

## Developer Options

Touch **Home** > **SETTINGS** > **System** > **Local** > **Developer options** to manage settings useful for developing Android applications. The menu is hidden until you touch **SW Version** in the **About device** menu 7 times.

 **WARNING!** The developer option settings are intended for development use only. They can cause the Spro2 and applications on it to break or misbehave.

## Printing


Touch **Home** > **SETTINGS** > **System** > **Local** > **Printing**. You can manage Google Cloud Print service or other printer plug-ins installed from the Google Play Store or the printer manufacturer.

## About Device

Touch **Home > SETTINGS > System > Local > About device** to view Spro2's status, legal information and other information, or upgrade the system.

## Projector Settings

Touch **Home > SETTINGS > Projector** to configure these options for the projector feature:

- **Image:**
  - ▶ **Focus:** Turn on or off automatic focus or touch + and - to make manual adjustment.
  - ▶ **Keystone:** Turn on or off automatic keystone distortion adjustment or adjust it manually to correct image during a tilted projection.
  - ▶ **Brightness:** Adjust projection brightness.  
 **NOTE:** The projection brightness can be set to high only when the charger is plugged in to the Spro2.
  - ▶ **Color correction:** Adjust projection color.
- **Mode:**
  - ▶ **Source:** Turn on HDMI or Miracast as the projection source.
  - ▶ **LABB:** Enable or disable the Local Area Brightness Boost feature or adjust its level. The projector can adaptively gain up regions of an image that are dim relative to the average picture level.
  - ▶ **CAIC:** Enable or disable the Content-Adaptive Illumination Control feature. The projector can

automatically adjust illumination power to consume less battery while maintaining constant image brightness.

- ▶ **Ceiling Projection:** Enable this feature to rotate the projection 180 degrees. This is useful when to put the Spro2 upside down during projection, for example, when the device is installed on the ceiling.
- ▶ **Rear Projection:** Enable this feature when to project content for viewers on the other side of the screen.
- **Control:**
  - ▶ **Projector:** Turn on or off the projector.
  - ▶ **Projector floating button:** Show or hide the projector floating button on the screen. Touch the button to open a pop-up window to control the projection options, or drag the button to the place you need on the screen.
  - ▶ **Gesture switch:** After enabling this feature, swipe up or down using THREE fingers on the screen to turn on or off the projector when the Spro2 screen is on.
  - ▶ **Remote Control:** Enable this feature before using the remote control app in the mobile device to control Spro2. For more information, see [Remote Control](#).
  - ▶ **Eye protection:** Allows the Spro2 to turn off the projection temporarily when the Spro2 detects its own quick movement.
  - ▶ **Auto Projector:** Enable the Spro2 to automatically turn the projector on or off the at the time you set.
  - ▶ **Restore:** Restore default projector settings.

# Troubleshooting











If you encounter problems while using Spro2, or if it performs abnormally, refer to this chart. If you cannot resolve the problem using the information in the chart, contact the dealer where you purchased Spro2.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Battery does not charge or the charges slow	The battery or battery charger is damaged.	Contact the dealer.
	The Spro2 temperature is below 0 °C or higher than 45 °C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between Spro2 and the charger.	Check all connectors to ensure proper connection.
Shortened standby time	The battery is depleted. High temperature environments shorten, battery life.	Contact the dealer to replace the battery.
Cannot turn Spro2 on	Battery power is depleted.	Recharge the battery.

<b>Problem</b>	<b>Possible causes</b>	<b>Possible solution</b>
Poor Wi-Fi signal	The Wi-Fi network signal is too weak at the current location.	Move closer to the Wi-Fi hotspot or a location without an obstacle between the Spro2 and the hotspot.
The Spro2 crashes, reboots, freezes, or cannot power on	Some third-party software is not compatible with the Spro2.	Uninstall software that may be causing the problem.
		Upgrade the Spro2's software.
		Reset the Spro2 to factory status.

# For Your Safety

## General Safety

	The device can produce a loud sound.		Don't use at gas stations.
	Avoid contact with anything magnetic.		The device may produce a bright or flashing light.
	Keep away from pacemakers and other electronic medical devices.		Don't dispose of the device in fire.
	Turn off when near explosive materials or liquids.		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Only use approved accessories.		Avoid extreme temperatures.

	Don't take the device apart.		Avoid contact with liquids. Keep the device dry.
--	------------------------------	---	--

## Radio Frequency (RF) Energy

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels to use only the power required to reach the wireless access point. In general, the closer you are to a wireless access point, the lower the power output.

The FCC has granted an Equipment Authorization for this


model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of [www.fcc.gov/oet/ea/fccid](http://www.fcc.gov/oet/ea/fccid) after searching on FCC ID: SRQ-MF97G.

For this device, the highest reported SAR value for usage near the body is 0.84 W/kg.

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement. SAR compliance for body operation is based on a separation distance of 15 mm between the unit and the human body. Carry this device at least 15 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 15 mm between this device and your body.

## FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 **CAUTION:** Changes or modifications not expressly approved by ZTE could violate the warranty. ZTE holds no responsibility for related damage.



**NOTE:** This equipment was been and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of these measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the customer service technician for help.

## Distraction

### Driving

Driving requires full attention at all times to reduce the risk of accident. Using this device while driving can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

## Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

## Product Handling

### General Statement on Handling and Use

You are responsible for how you use the device and consequences of using it.

Always turn off the device where use of the device is prohibited. Use of the device is subject to safety measures designed to protect users and their environment.

- Always treat the device and its accessories with care and keep it in a clean and dust-free place.
- Keep the screen and projection lens clean. A dirty screen or projection lens may slow down the device's reaction to your operations or lower projection image quality.
- Clean the device and accessories with a soft material such as a cleaning cloth, or microfiber. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose the device or accessories to open flames or lit tobacco products.
- Do not expose the device or accessories to liquids, moisture or high humidity.
- Do not drop, throw, or try to bend the device or accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or accessories.
- Do not paint the device or accessories.

- Do not attempt to disassemble the device or accessories.
- Do not expose the device or accessories to extreme temperatures. The operation temperature range for the device is between 23 °F and 104 °F or – 5 °C and maximum + 40 °C.
- Do not place the device inside or near heating equipment or high pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Doing so may damage the device.
- Check local regulations for disposal of electronic products.

## **Children**

Do not leave the device or its accessories alone with young children. The device is not a toy. They might accidentally damage the device. The projection light may cause discomfort. The device contains small parts that may cause injury or become detached and create a choking hazard.

## **Demagnetization**

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to the device for a long time.

## **Air Bags**

Do not place a device in the area over an air bag or in the air bag deployment area. Airbags inflate with great force and can cause seriously damage the device.

## **Seizures/Blackouts**

The device can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures, even if they have never had one before, when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, consult a physician. To reduce the risk of blackouts or seizures, use the device in a well lit room and take frequent breaks.

## **Repetitive Strain Injuries**

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with the device:

- Do not grip the device too tightly.
- Press the buttons lightly.
- Use the special features designed to minimize the length of button press, such as Predictive Text.
- Take frequent breaks to stretch and relax.

## **Loud Noise**

This device is capable of producing loud noises that may damage the hearing. Turn down the volume before using headphones, Bluetooth stereo headsets, or other audio devices.

## **Device Heating**

The device may become warm during charging and during normal use.

## Electrical Safety

### Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Do not touch or allow metal objects, such as coins or key rings, to contact or short-circuit the charging jack terminals.

Never puncture the surface of the device with sharp objects.

### Faulty and Damaged Products

Do not attempt to disassemble the device or its accessories.

Only qualified personnel can service or repair the device and accessories.

If the device or its accessories are submerged in water, punctured, or subjected to a severe fall, do not use it until it has been checked at an authorized service center.

## Radio Frequency Interference

### General Statement on Interference

Care must be taken when using the device in close proximity to personal medical devices, such as pacemakers and hearing aids.

Consult a doctor and the device manufacturer to determine if device operation could interfere with medical device operation.

## **Pacemakers**

To avoid potential interference with the pacemaker, pacemaker manufacturers recommend maintaining a minimum separation of 15 cm between a wireless device and a pacemaker. To achieve this, do not use this device near a pacemaker and do not carry it near the chest.

## **Hearing Aids**

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference depends on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce interference. consult the hearing aid manufacturer to discuss alternatives.

## **Medical Equipment**

Switch off the wireless device when requested to do so in hospitals, clinics, or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## **Aircraft**

Switch off the wireless device when boarding the aircraft and instructed to do so by airport or airline staff.

Consult the airline staff about using wireless devices on the aircraft.

## **Interference in Vehicles**

Dome vehicle manufacturers forbid using the device in their vehicles because of possible interference to electronic equipment, some vehicle manufacturers may forbid the use of the device in their vehicles.

## **Explosive Environments**

### **Gas Stations and Explosive Atmospheres**

Obey all posted signs to turn off wireless devices or other equipment In locations with potentially explosive atmospheres.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

To avoid interfering with blasting operations, power off the device when in a blasting area or in areas where signs are posted to power off two-way radios or electronic devices..